

OWNERSHIP STATEMENT

This Pizza Time Theatre, Inc. Theatrical Standards Manual is the property of Pizza Time Theatre, Inc. This Manual will be on loan and in possession of the operator of Pizza Time Theatre, Inc. named below. The sole purpose of this Manual is to guide and assist this owner in the theatrical presentation of his PIZZA TIME THEATRE. Any other unauthorized use of this Manual or any of its contents may constitute a violation of the license agreement.

MANUAL NUMBER \_\_\_\_\_

NAME \_\_\_\_\_

STORE NAME/NUMBER \_\_\_\_\_

ADDRESS/STREET \_\_\_\_\_

CITY/STATE/ZIP \_\_\_\_\_

Return to: Pizza Time Theatre  
1213 Innsbruck Drive  
Sunnyvale, CA 94086

Received \_\_\_\_\_

By \_\_\_\_\_

## Standards Index

- 1.0 Stage Installation Standards
  - 1.1 Dimensions
    - 1.1.1 Stage Dimensions
      - 1.1.1.1 Stage Dimensions (GLI Sound System)
    - 1.1.2 Cheese Crawl, etc.
    - 1.1.3 Header Dimensions
      - 1.1.3.1 Header Dimensions (GLI Sound System)
    - 1.1.4 Speaker Placement
      - 1.1.4.1 GLI Speaker Placement
  - 1.2 Curtain Standards
    - 1.2.1 Dimensions
      - 1.2.1.1 Dimensions (GLI Sound System)
    - 1.2.2 Materials & Colors
  - 1.3 Lighting Standards
    - 1.3.1 Dimensions
      - 1.3.1.1 Dimensions (GLI Sound System)
    - 1.3.2 Fixtures, Filters & Bulbs
    - 1.3.3 Focusing
    - 1.3.4 Room Lighting
  - 1.4 Character Placement
- 2.0 Show Installation
  - 2.1 Harmony Howlette I
    - 2.1.1 Set Installation
    - 2.1.2 Cosmetic Installation
    - 2.1.3 Harmony In A Shelf Installation
  - 2.2 Harmony Howlette II
    - 2.2.1 Set Installation
  - 2.3 Madam Oink I
    - 2.3.1 Set Installation
    - 2.3.2 Cosmetic Installation
  - 2.4 Madam Oink III
    - 2.4.1 Set Installation

Standards Index (Cont'd.)

- 3.0 Lounge Installation
  - 3.1 Staging
    - 3.1.1 Dimensions & Curtains
    - 3.1.2 Materials & Colors
    - 3.1.3 Speaker Placement
    - 3.1.4 Lighting
    - 3.1.5 Room Lighting
  - 3.2 The King
    - 3.2.1 Character Placement
    - 3.2.2 Set Installation
    - 3.2.3 Light Focus
  - 3.3 Beagles
    - 3.3.1 Character Placement
    - 3.3.2 Set Installation
    - 3.3.3 Light Focus
- 4.0 Barbershop Quartet (Ice Cream Parlor)
  - 4.1 Staging
    - 4.1.1 Dimensions
    - 4.1.2 Materials & Colors
    - 4.1.3 Speaker Placement
    - 4.1.4 Lighting
    - 4.1.5 Room Lighting
- 5.0 Cabaret Installation
  - 5.1 Staging
    - 5.1.1 Dimensions & Curtains
    - 5.1.2 Materials & Colors
    - 5.1.3 Speaker Placement
    - 5.1.4 Lighting
    - 5.1.5 Room Lighting


Standards Index (Cont'd.)

- 5.2 Dolli Dimples
  - 5.2.1 Character Placement
  - 5.2.2 Set Installation
  - 5.2.3 Light Focus
- 5.3 Artie Antlers
  - 5.3.1 Character Placement
  - 5.3.2 Set Installation
  - 5.3.3 Light Focus
  
- 6.0 Acoustics
  - 6.1 Doorway Design
  - 6.2 Absorbers
  - 6.3 Diffusion
  - 6.4 Ceilings

SECTION: 1.1.1.1

DESCRIPTION:

STAGE DIMENSIONS  
(GLI SOUND SYSTEM)

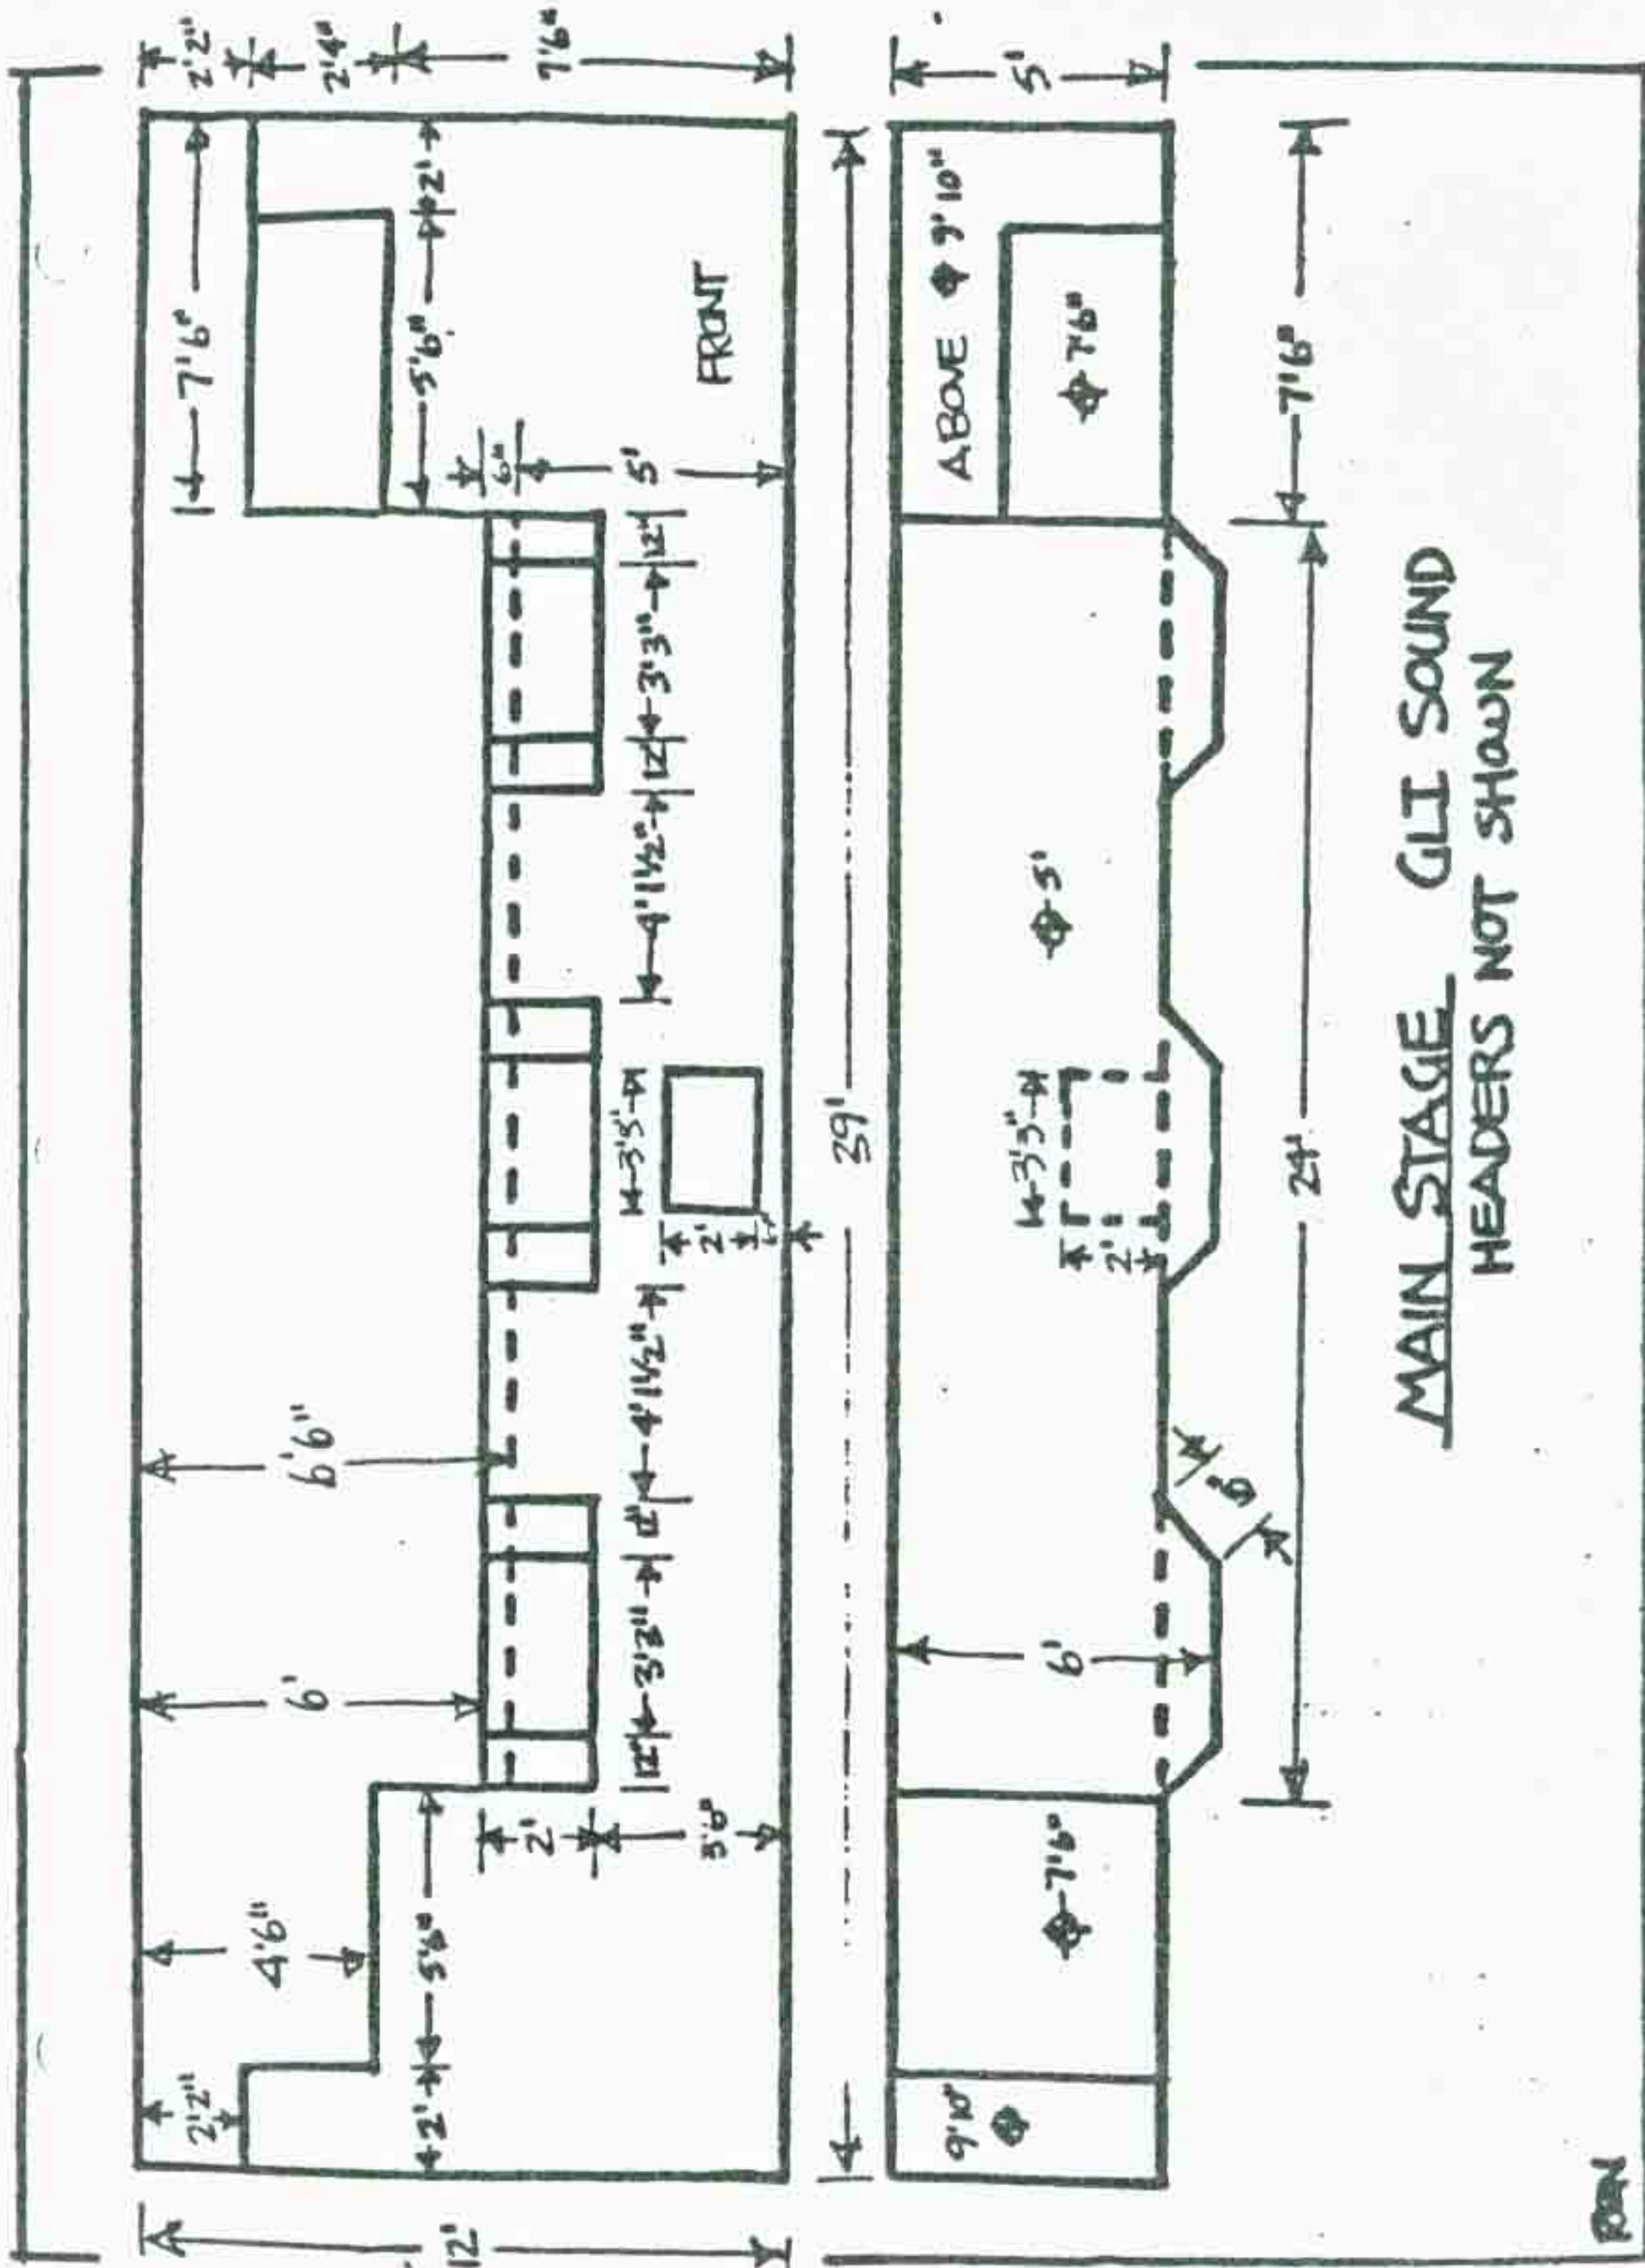

MAIN STAGE GLI SOUND  
HEADERS NOT SHOWN


PLAN

1.1.1.1/1

SECTION 1.1.3.1


DESCRIPTION:

Header Dimensions  
(GLI SOUND SYSTEM)

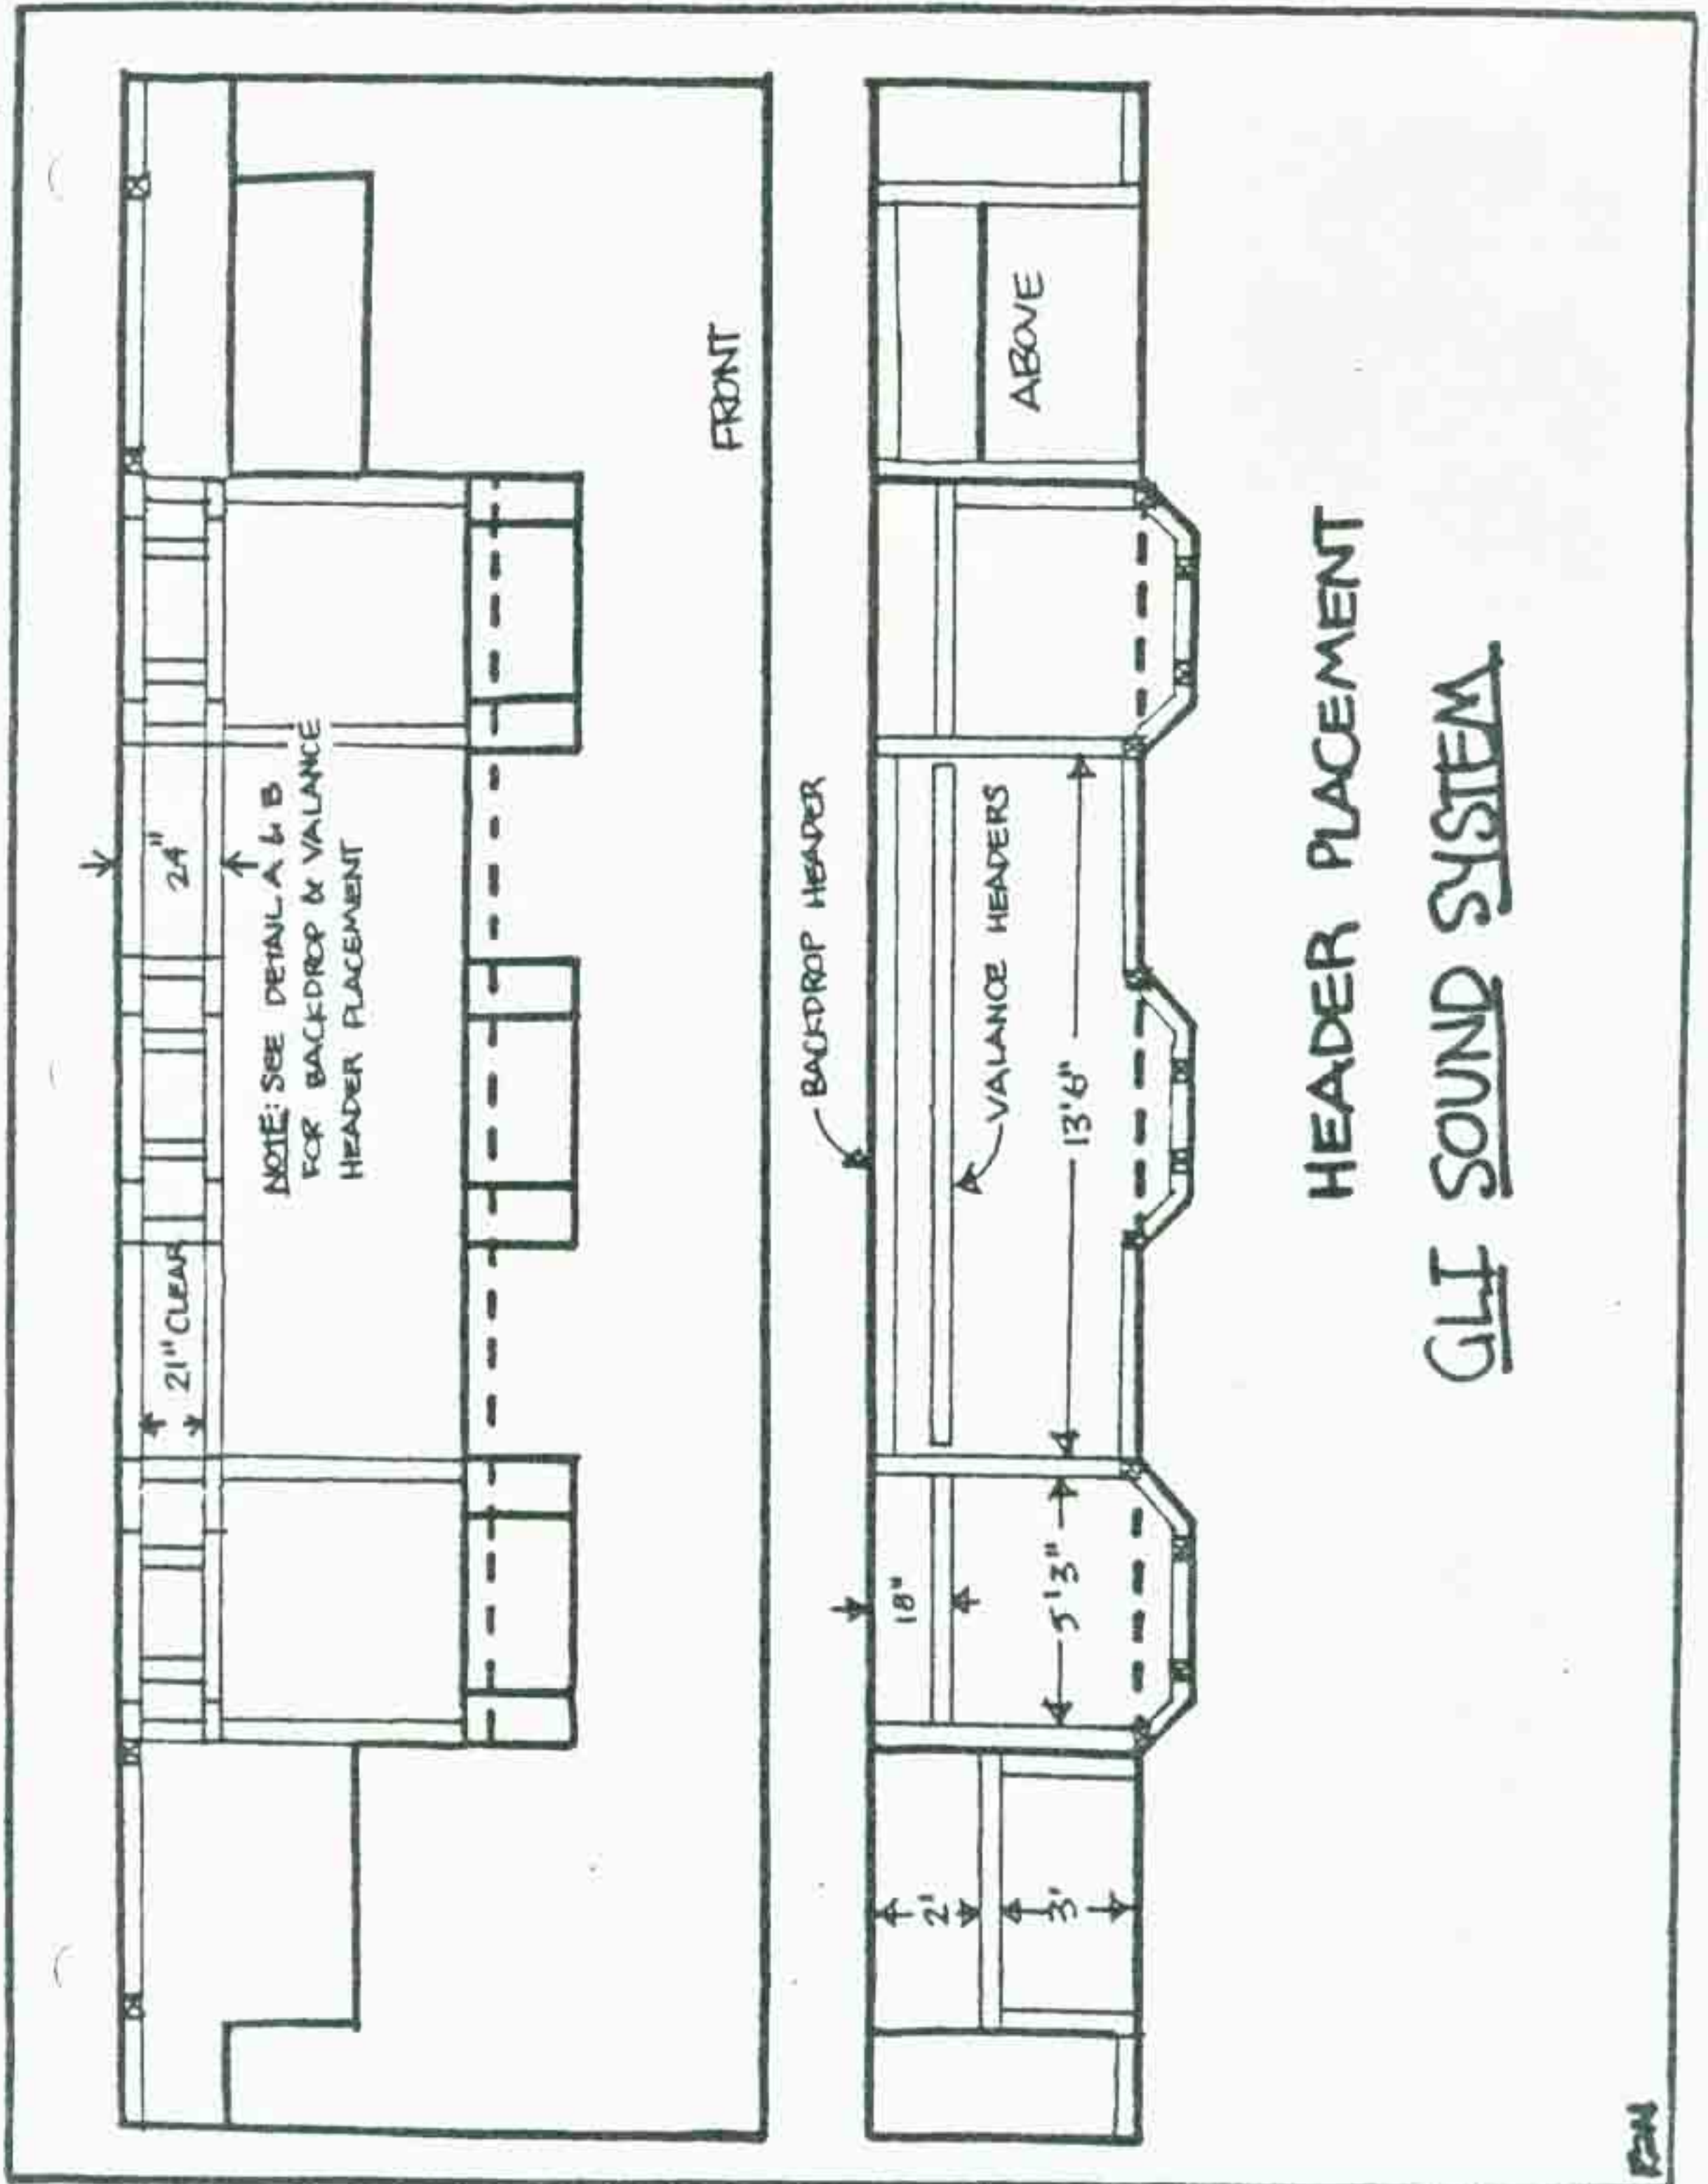


1.1.3.1/1



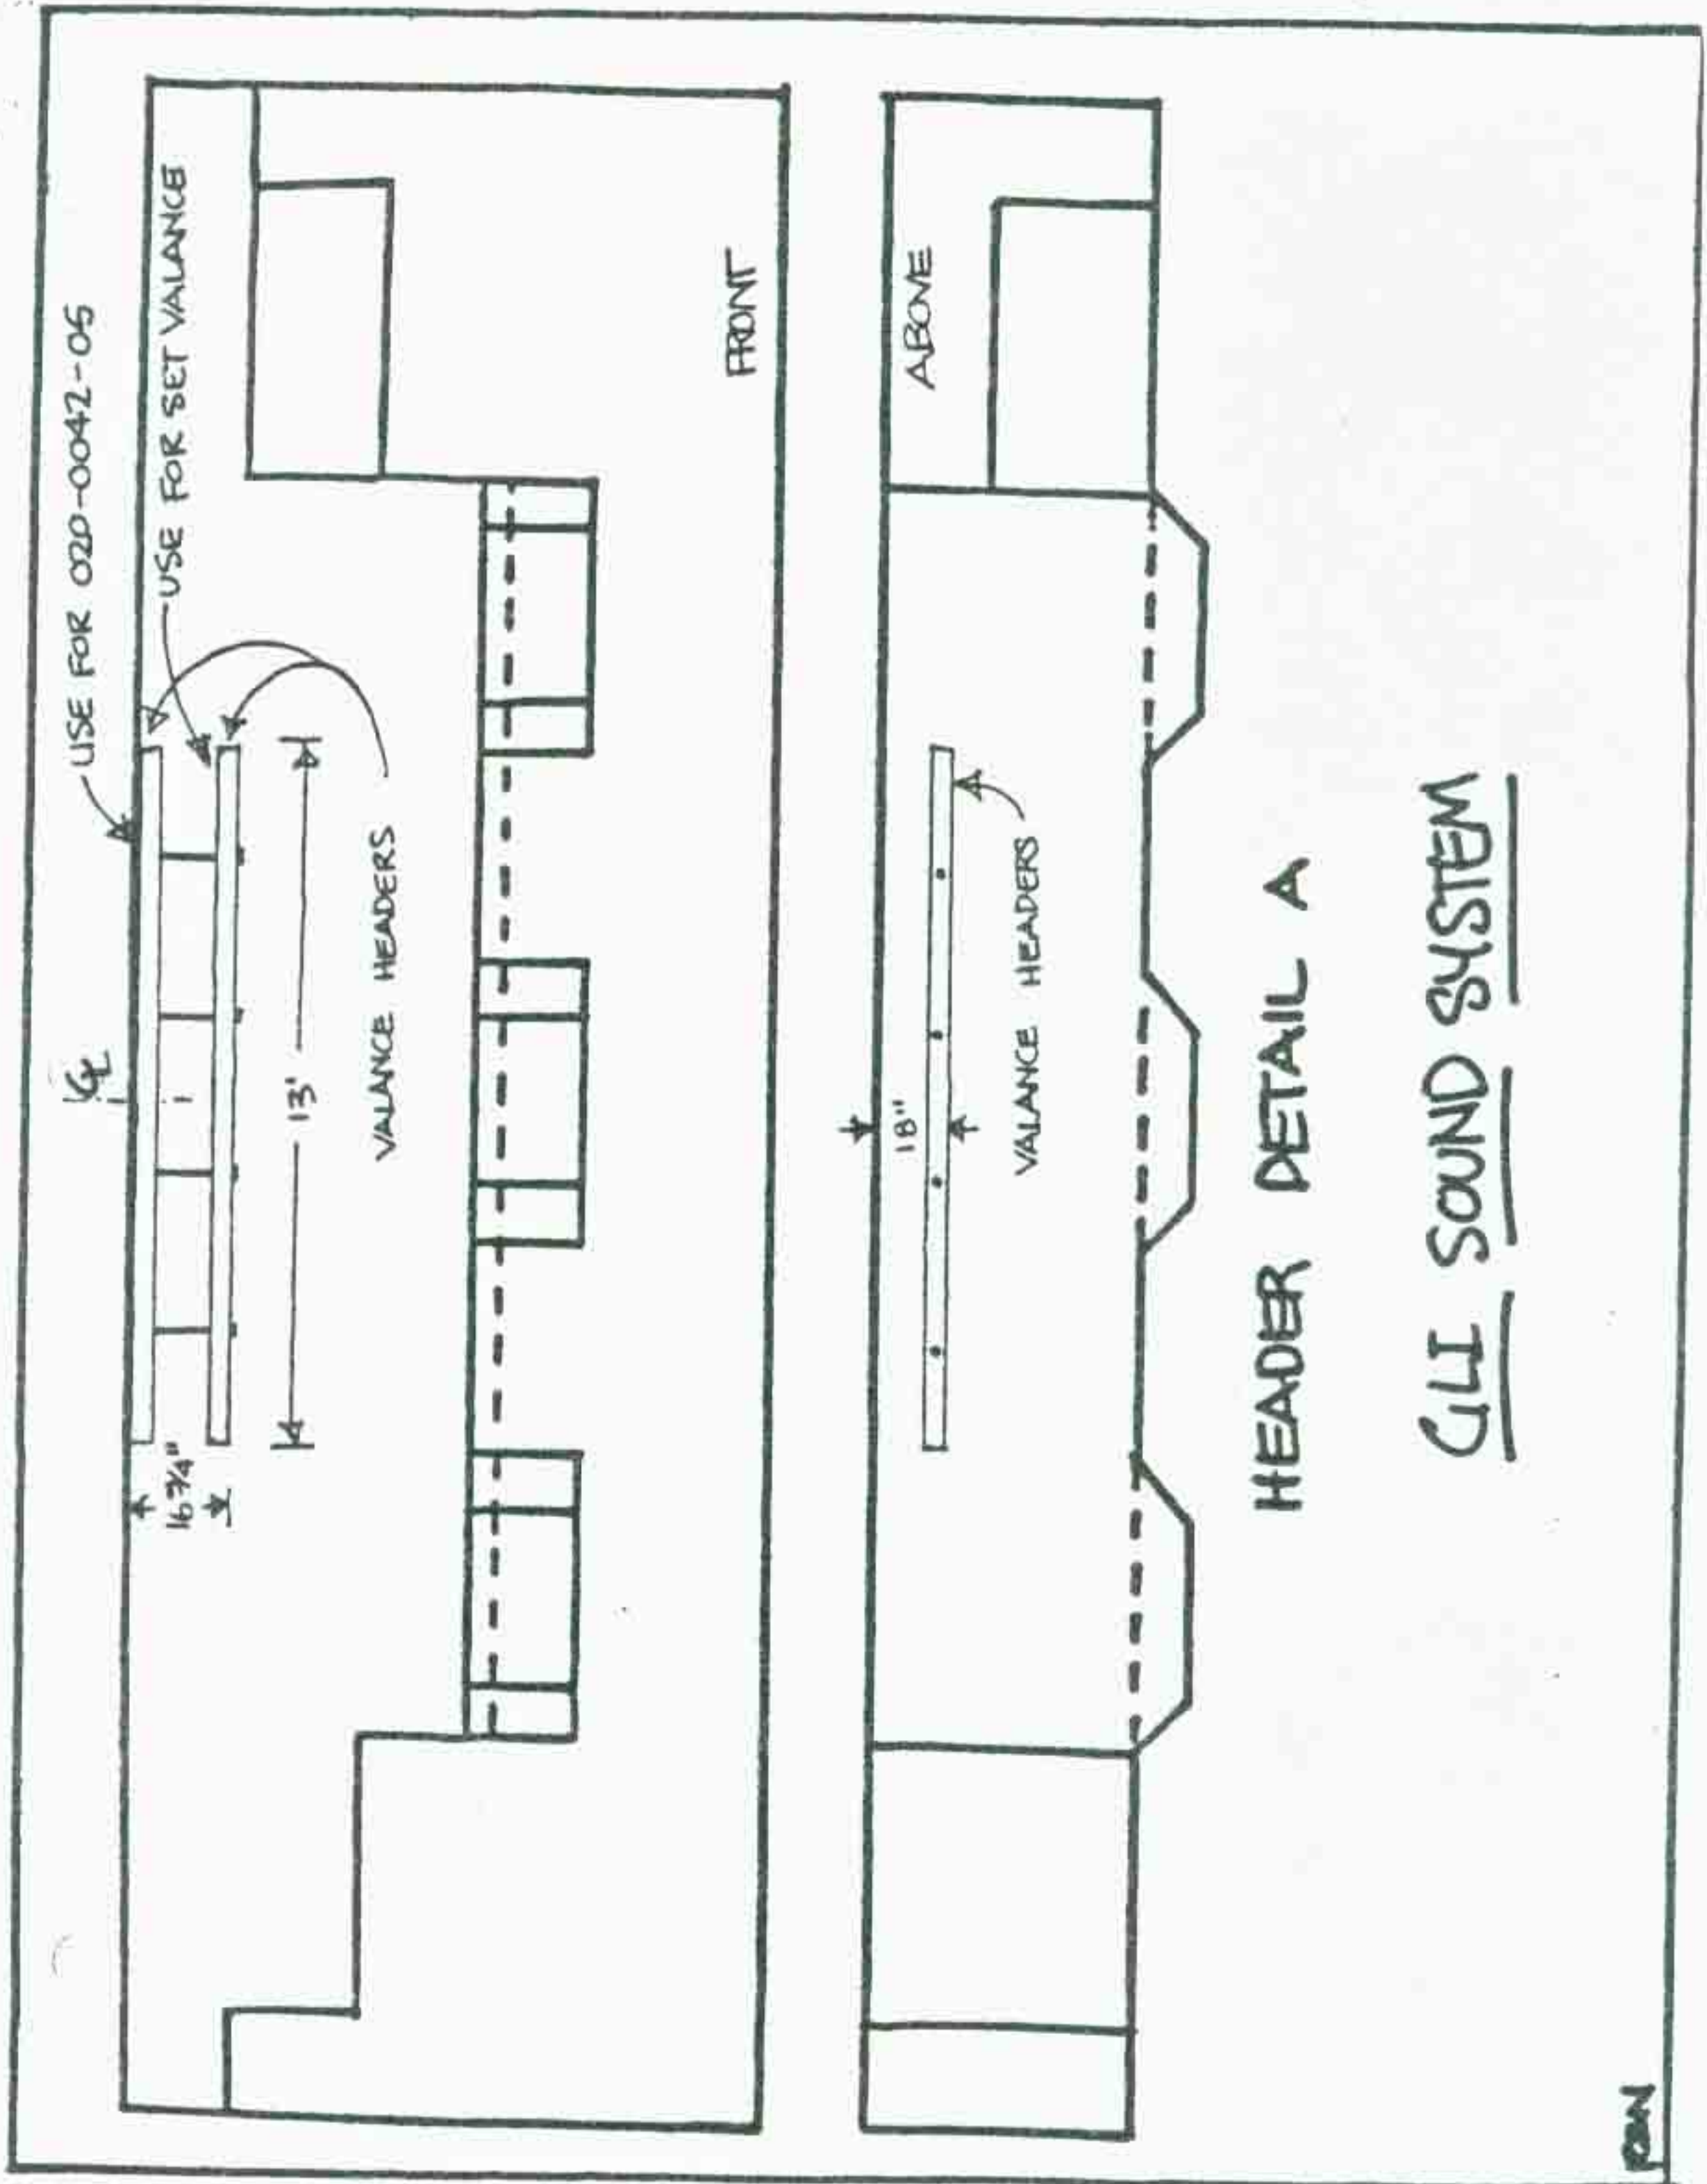

1.1.3.1/2

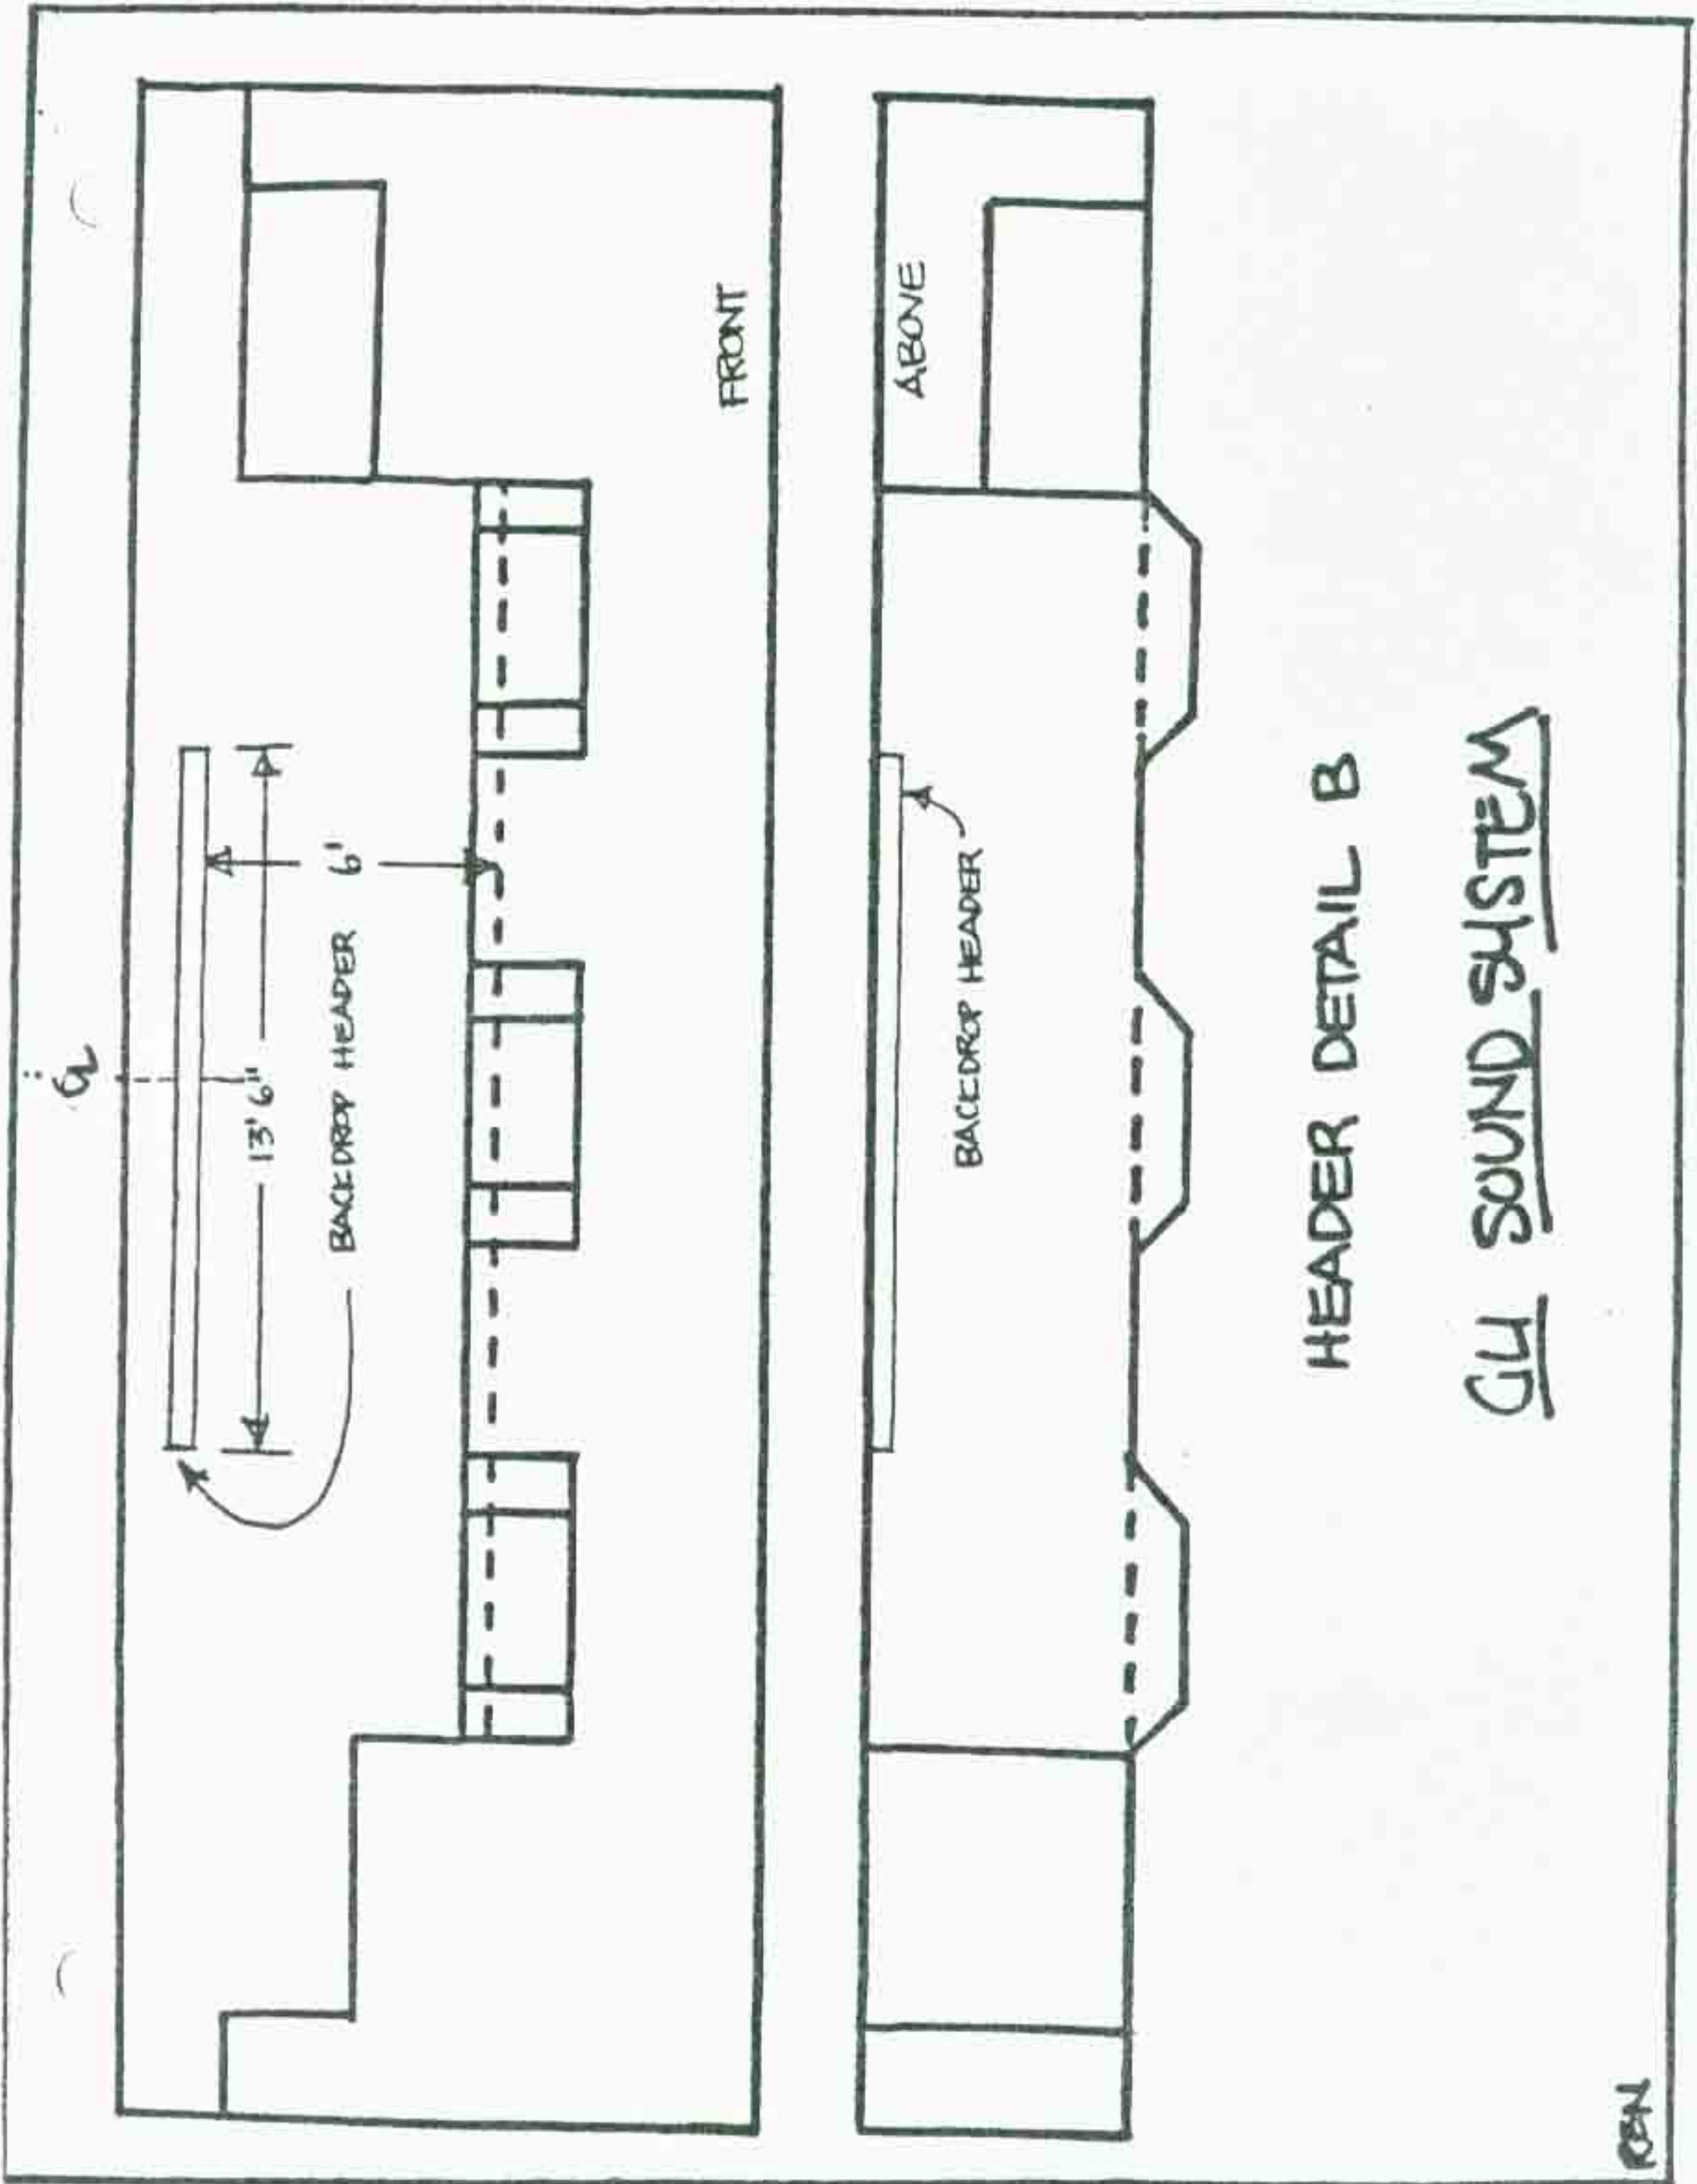

HEADER DETAIL B



GLH SOUND SYSTEM

REN

SECTION 1.1.4.1


DESCRIPTION:

GLI Speaker Placement

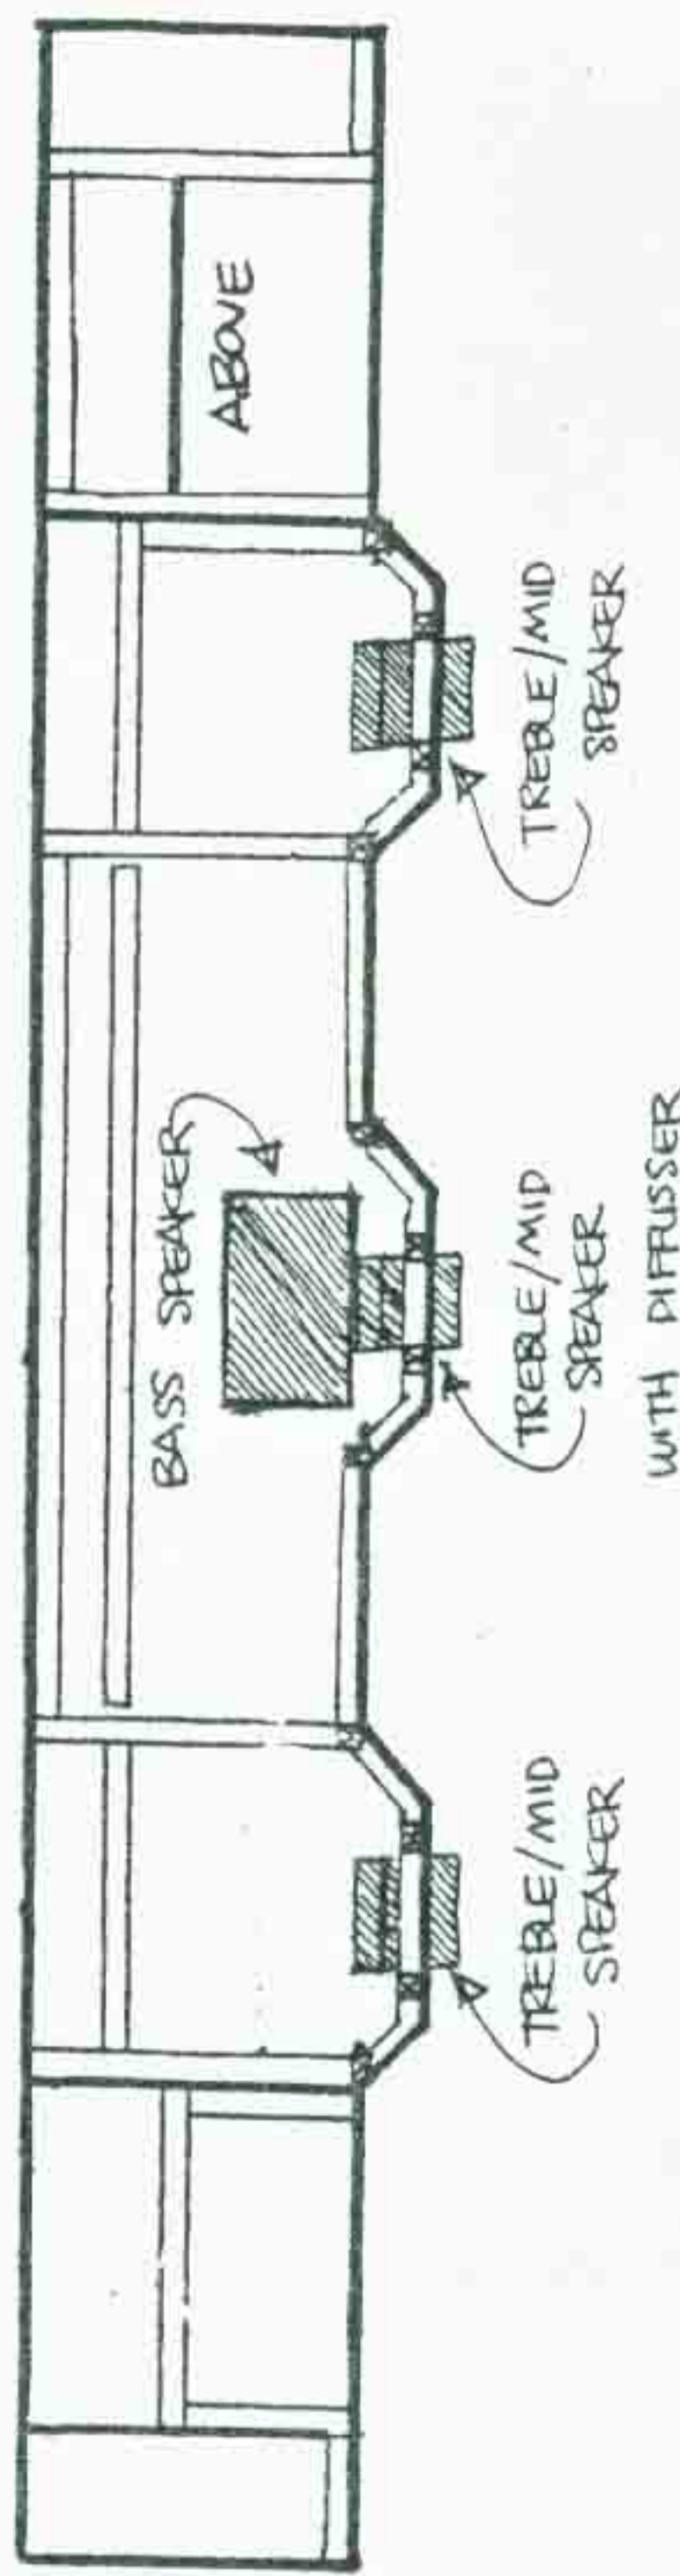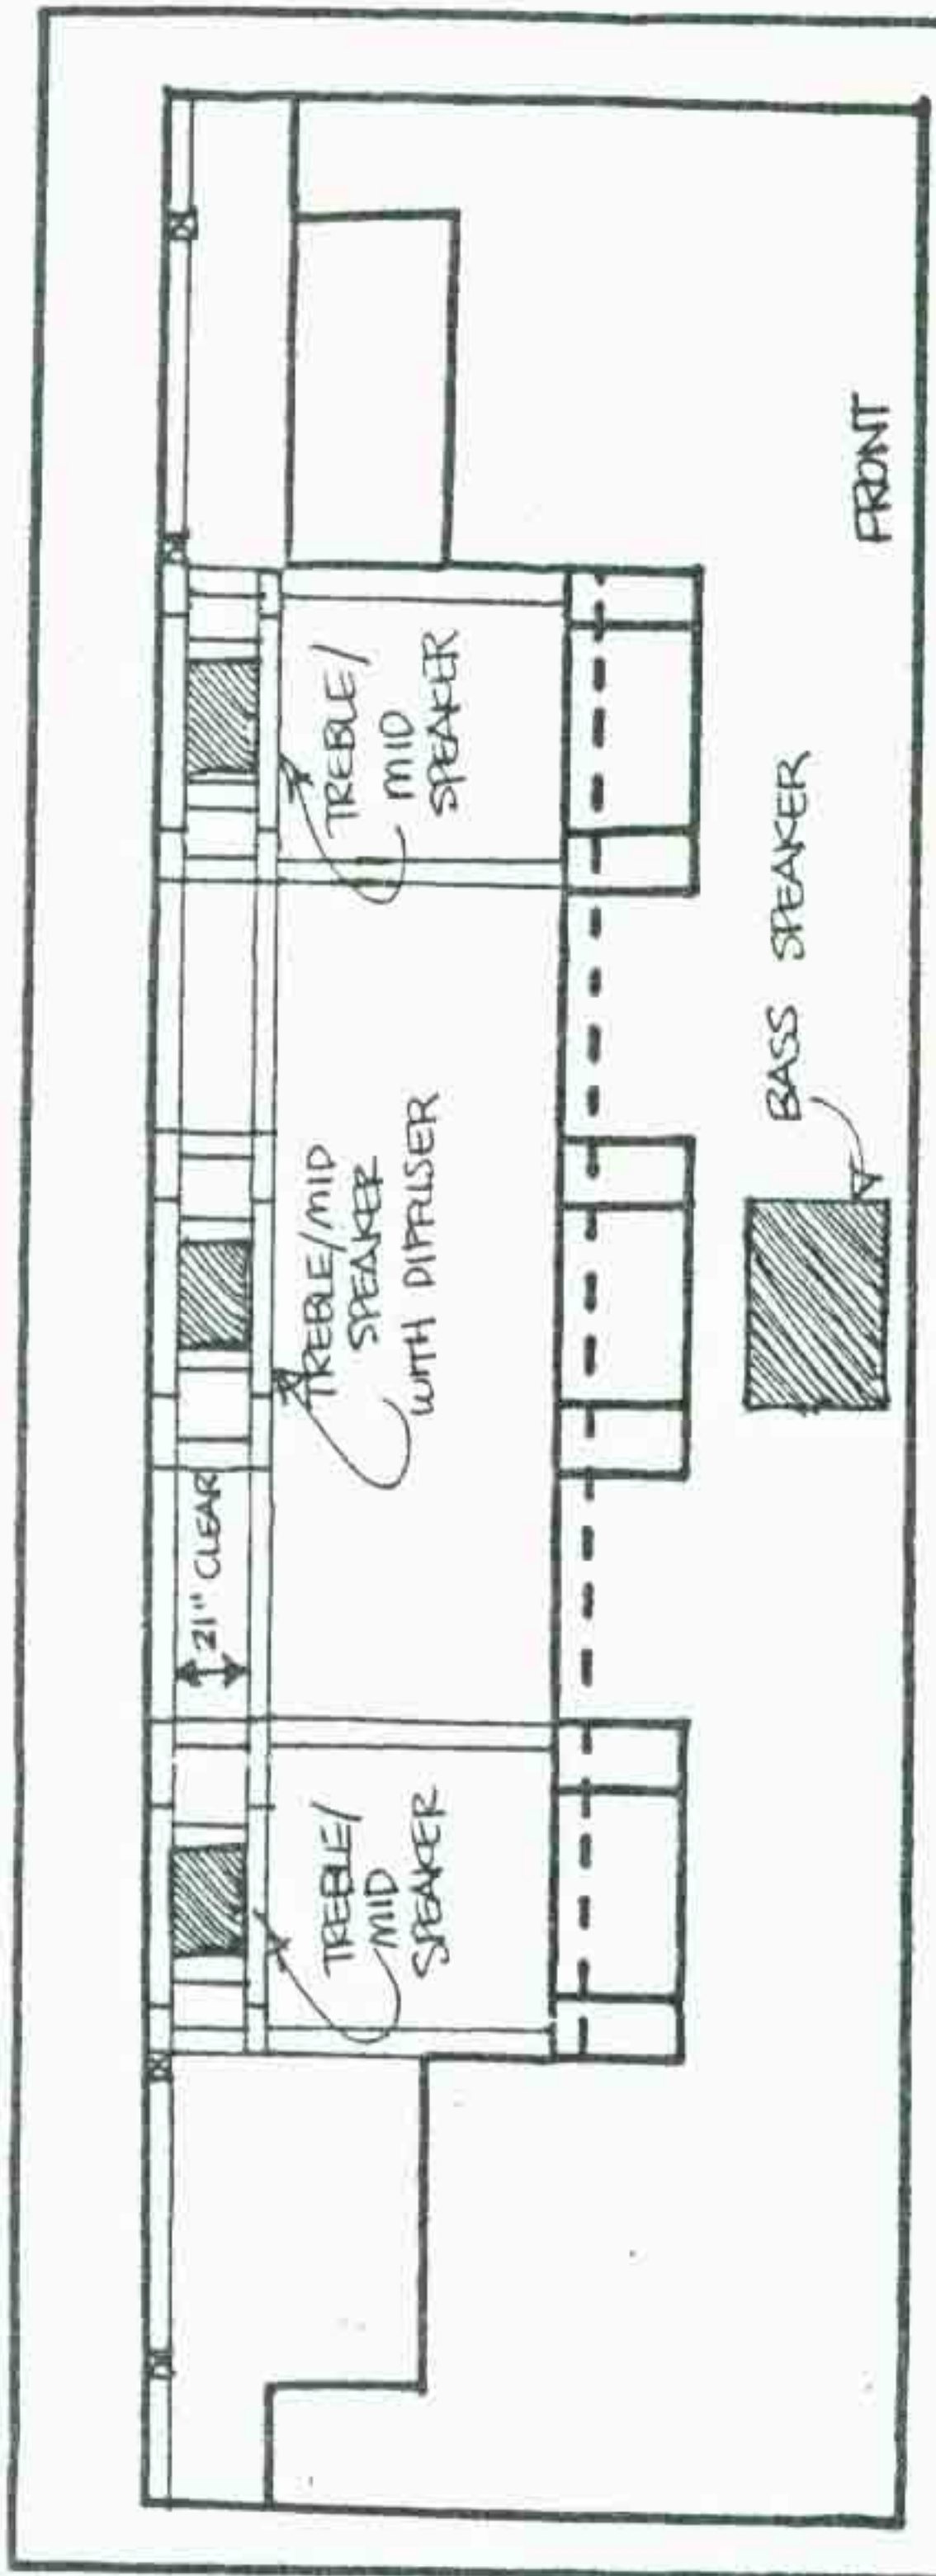

GLI SOUND SYSTEM  
SPEAKER LOCATION

1.1.4.1/1

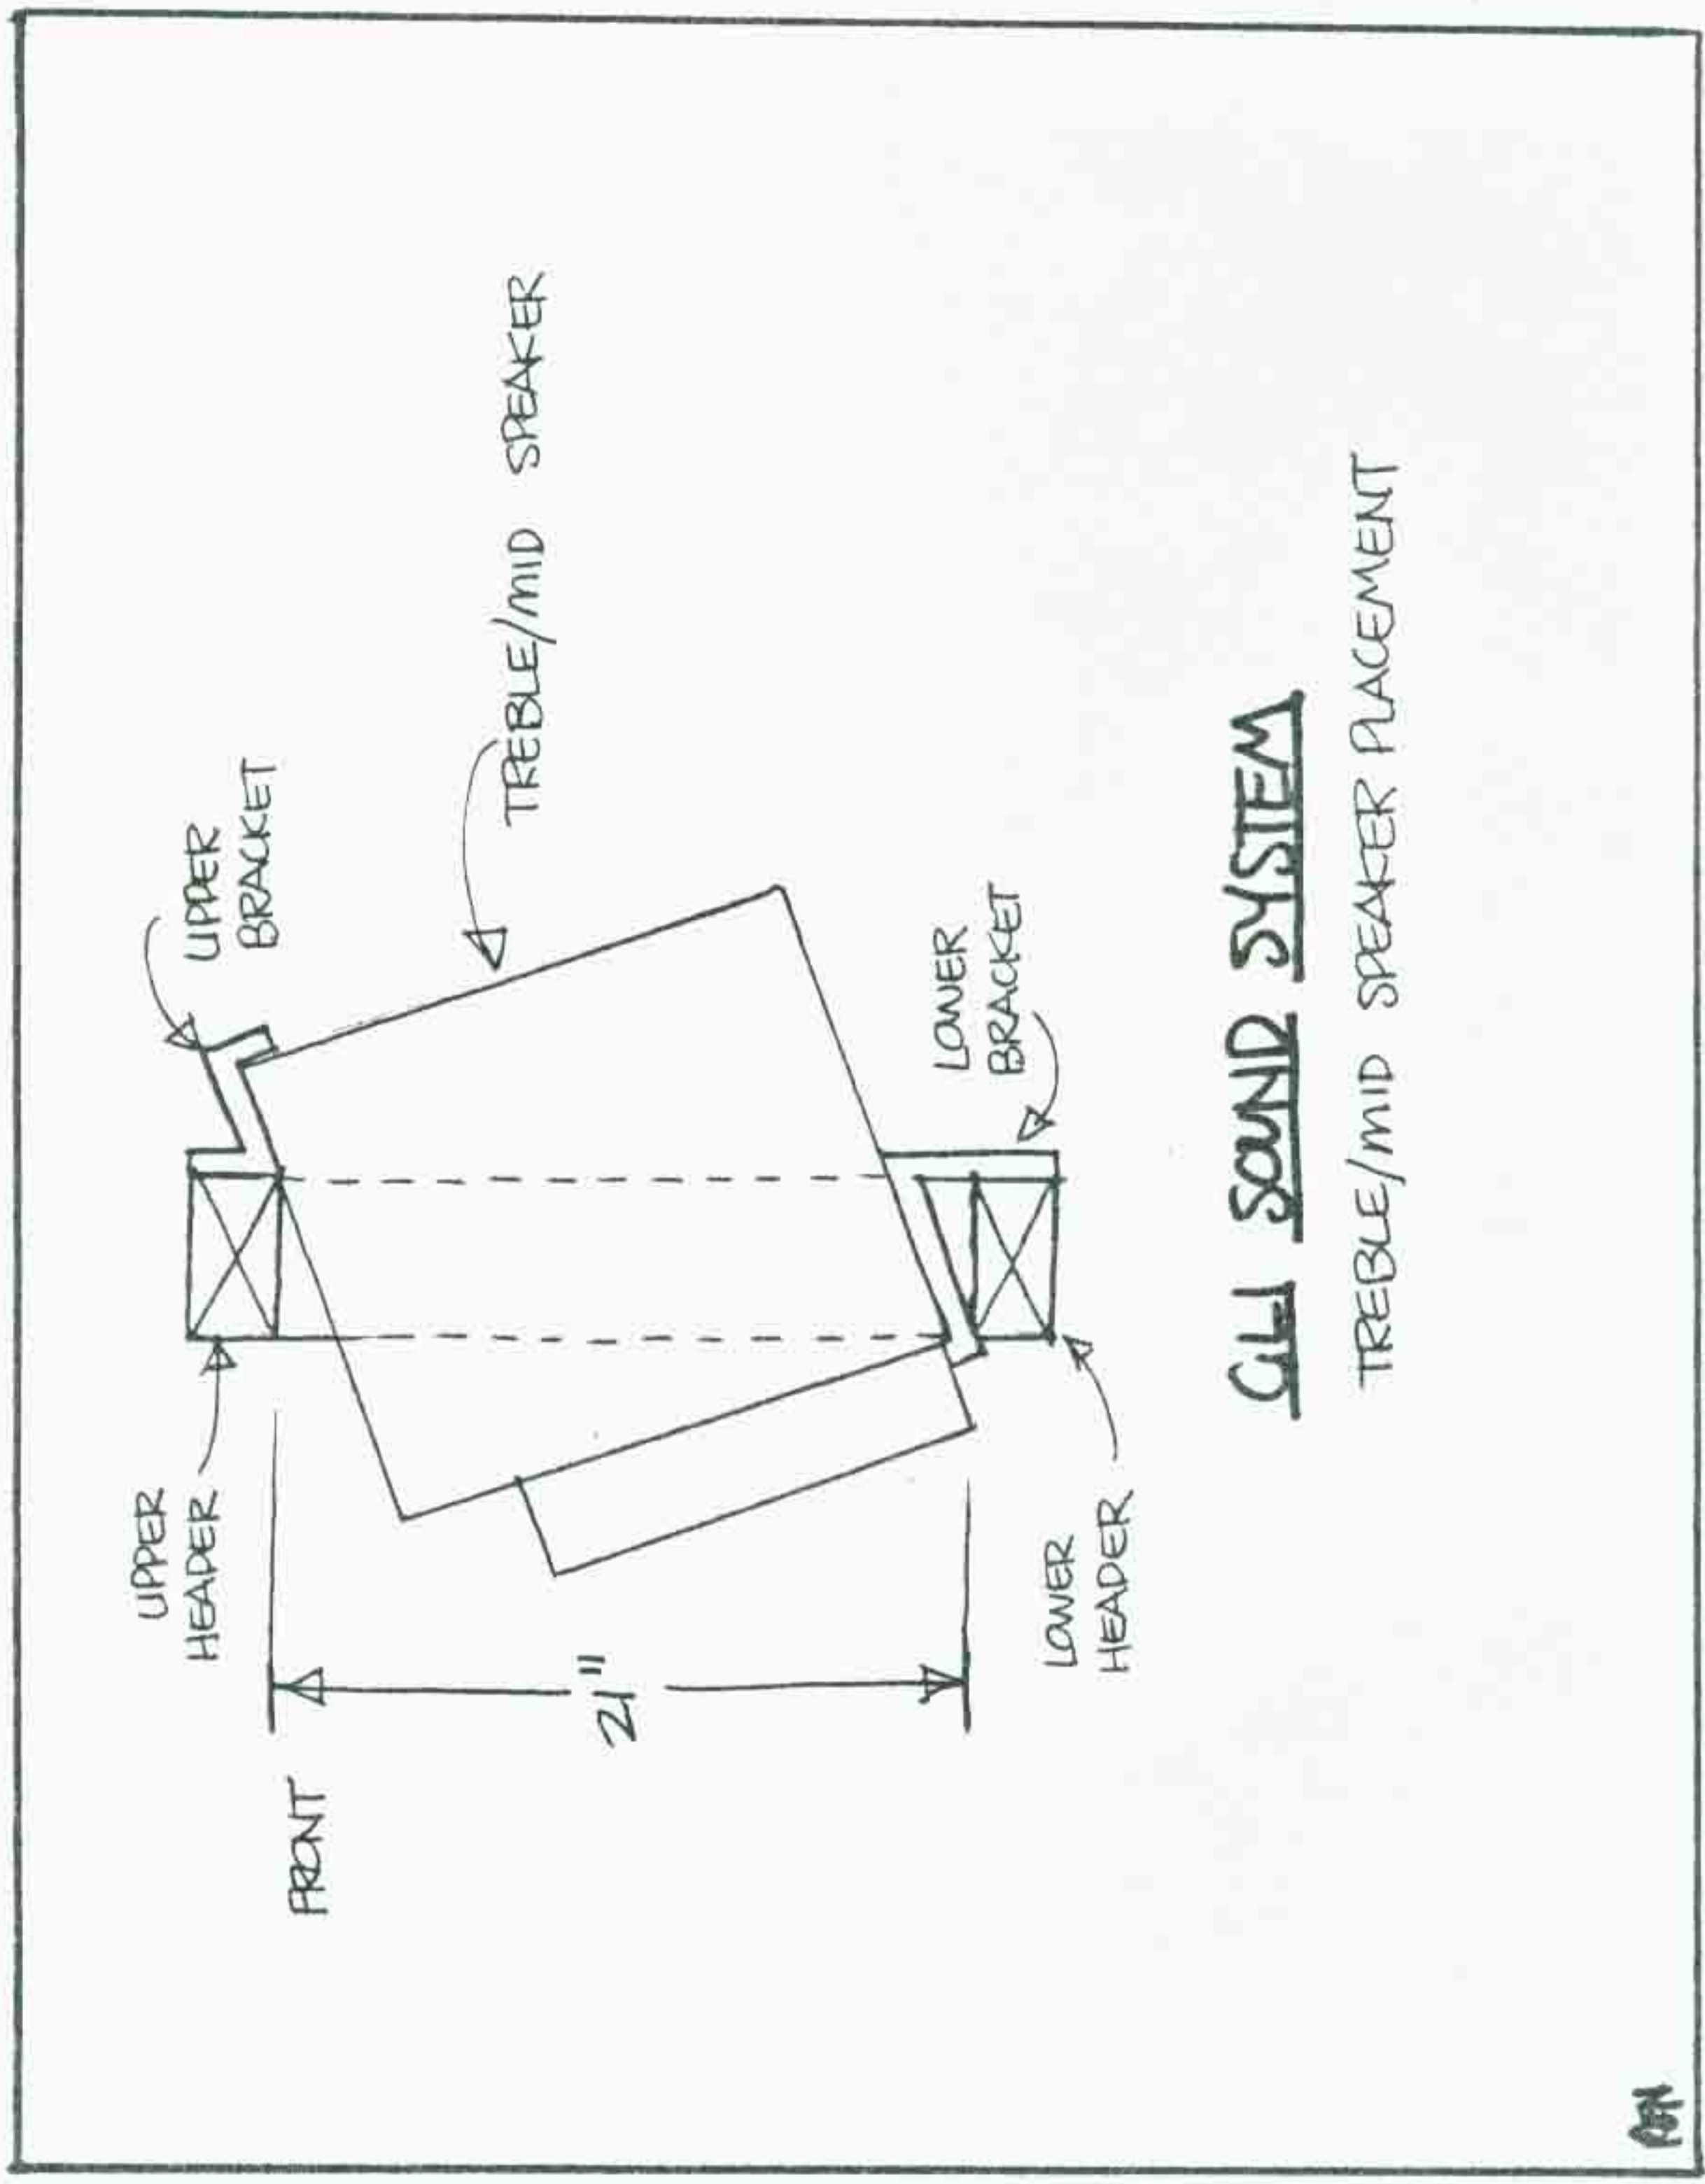

# 5.1 SOUND SYSTEM

TREBLE/MID SPEAKER PLACEMENT

1.1.4.1/2

SOUND SYSTEM INSTALLATION INSTRUCTIONS

A. INTRODUCTION

This speaker system is designed to enhance voice localization of PTT characters, and provide wide sound dispersion throughout a theatre dining area.

The system consists of 3 multiple array speakers and one dual woofer bass reflex speaker. The 3 multiple array speakers are designed for the mid-range and treble audio bandwidth. The dual woofer bass reflex speaker is designed for the low bass audio bandwidth.

The power system consists of one "EQX-1000" audio pre-amplifier and one "2130" audio power amplifier.

The "EQX-1000" audio pre-amplifier has a passive frequency dividing network and 3 band tone control for audio adjustment centered at 100, 1,000 and 10,000 Hz. The "EQX-1000" also provides a full range audio output jack called "Equalizer Out". This is in the event that additional mid-theatre full range speakers are desired.

The "2130" audio power amplifier has 110 watts of power.

## B. INSTALLATION

This section provides you with the information needed to connect this sound system to the main dining room stage.

It is assumed that the contractor has installed:

- two stage front speaker-curtain headers (SPACED 21" APART)
- one main runner T-bar-header support.
- one main runner T-bar-speaker safety support.
- and you have not nailed CEC to the stage floor.

Parts List (your ship kit has the following):

<u>Quantity</u>	<u>Part Number</u>	<u>Description</u>
2	700-0130-01	SRS-85 Speakers
1	700-0131-01	SRS-85L Speaker with folded plate lens
1	700-0129-01	DB-2 Bass speaker
1	700-0133-01	EQX-1000 Audio pre-amplifier
1	700-0132-01	2130 Power amp
3	001-0498-01	Speaker brackets - lower
3	001-0499-01	Speaker brackets - upper
1	002-0365-10	Triple 2-conductor speaker harness
1	002-0366-10	2 conductor speaker harness
1	560-0004-01	RCA phono/RCA phono 36" audio cable
2	560-0005-01	RCA phono/RCA phono 18" audio cables

Before you install the sound system, be sure you have turned the Cyberamic system rack off and/or unplugged it from AC supply.

### INSTALLATION

Multiple Array Speakers: (2) (P/N 700-0130-01 & (1) P/N 700-0131-01).

1. Remove the 3 lower speaker brackets (P/N 001-0498-01).
2. Attach these brackets onto the back side of the lower 2 x 4 stage front speaker/curtain header directly in between the strapped 2 x 4 studs above Mr. Munch, CEC, & Pasqually using 3, 1/4" x 1" lag bolts for each bracket (see Illustration A).
3. Remove the 3 upper speaker brackets (P/N 001-0499-01).
4. Align these brackets on the upper speaker/curtain headers to match already installed lower speaker brackets.
5. With a pencil, mark and pre-drill all upper bracket lag bolt holes.

1.1.4.1/4

7. For multiple-array speakers connect triple 2 conductor speaker wire harness to LEFT SIDE SPEAKER OUTPUT JACK of 2130 power amp. Make sure the ground tab on banana connector matches with black speaker output jack. See Illustration C.
8. For bass speaker connect 2 conductor speaker wire harness to RIGHT SIDE SPEAKER OUTPUT jacks of 2130 power amp. Make sure the ground tab on banana connector matches with black speaker output jack. See Illustration C.

1.1.4.1/6



C. OPERATING PROCEDURES - This section provides you with information to operate and equalize this sound system in the main dining room.

1. Before powering up the 2130 power amplifier make sure the screw type gain pots, located on the rear of 2130 amp, above the banana plugs, are turned COMPLETELY counter-clockwise. This ensures volume is turned down. Set mono-stereo switch to STEREO (See Figure C).
2. Plug in the EQX-1000 and the 2130 power amp into Cyberamics rack power strip.
3. Make sure the CONTOUR switch on the back side of EQX-1000 is flipped to the "ON" position. This ensures frequency dividing network is operating.
4. Power up the Cyberamic rack. Start the first skit.

MIXING & EQUALIZATION

Note: Through your careful evaluation of the dining room's particular size, acoustic treatments and adjacent rooms' ambient noise, this sound system can be set up to provide excellent sound distribution in a variety of dining room environments. Proper mixing will involve your ability to evaluate a dining room and equalize the sound system effectively. This will create an environment which is pleasurable to listen to as well as see.


1. Looking at the back side of the 2130 power amp, turn the right side speaker output pot fully clockwise. You should now hear only low frequency sound emitting from the bass speaker below CEC. If full range sound is emitted by bass speaker refer to OPERATING PROCEDURE, Step 3.
2. Still looking at the back side of the 2130 power amp, turn the left speaker output pot 3/4 clockwise. You should now hear midrange and treble sounds emitting from the three speakers above.
3. Walk around the theatre dining room paying special attention to the clarity of character's voice information and unwanted boominess from bass speaker.
4. Use EQX-1000 knobs to raise or lower amount of bass, midrange, and treble present in audio.
5. Once you have equalized the system, USE A PERMANENT INK PEN TO MARK YOUR EQUALIZATION SETTING AND SPEAKER OUTPUT POTS. If they are tampered with this gives the technician a setting to refer to.

1.1.4.1/7






# AMP / PRE-AMP CONNECTIONS

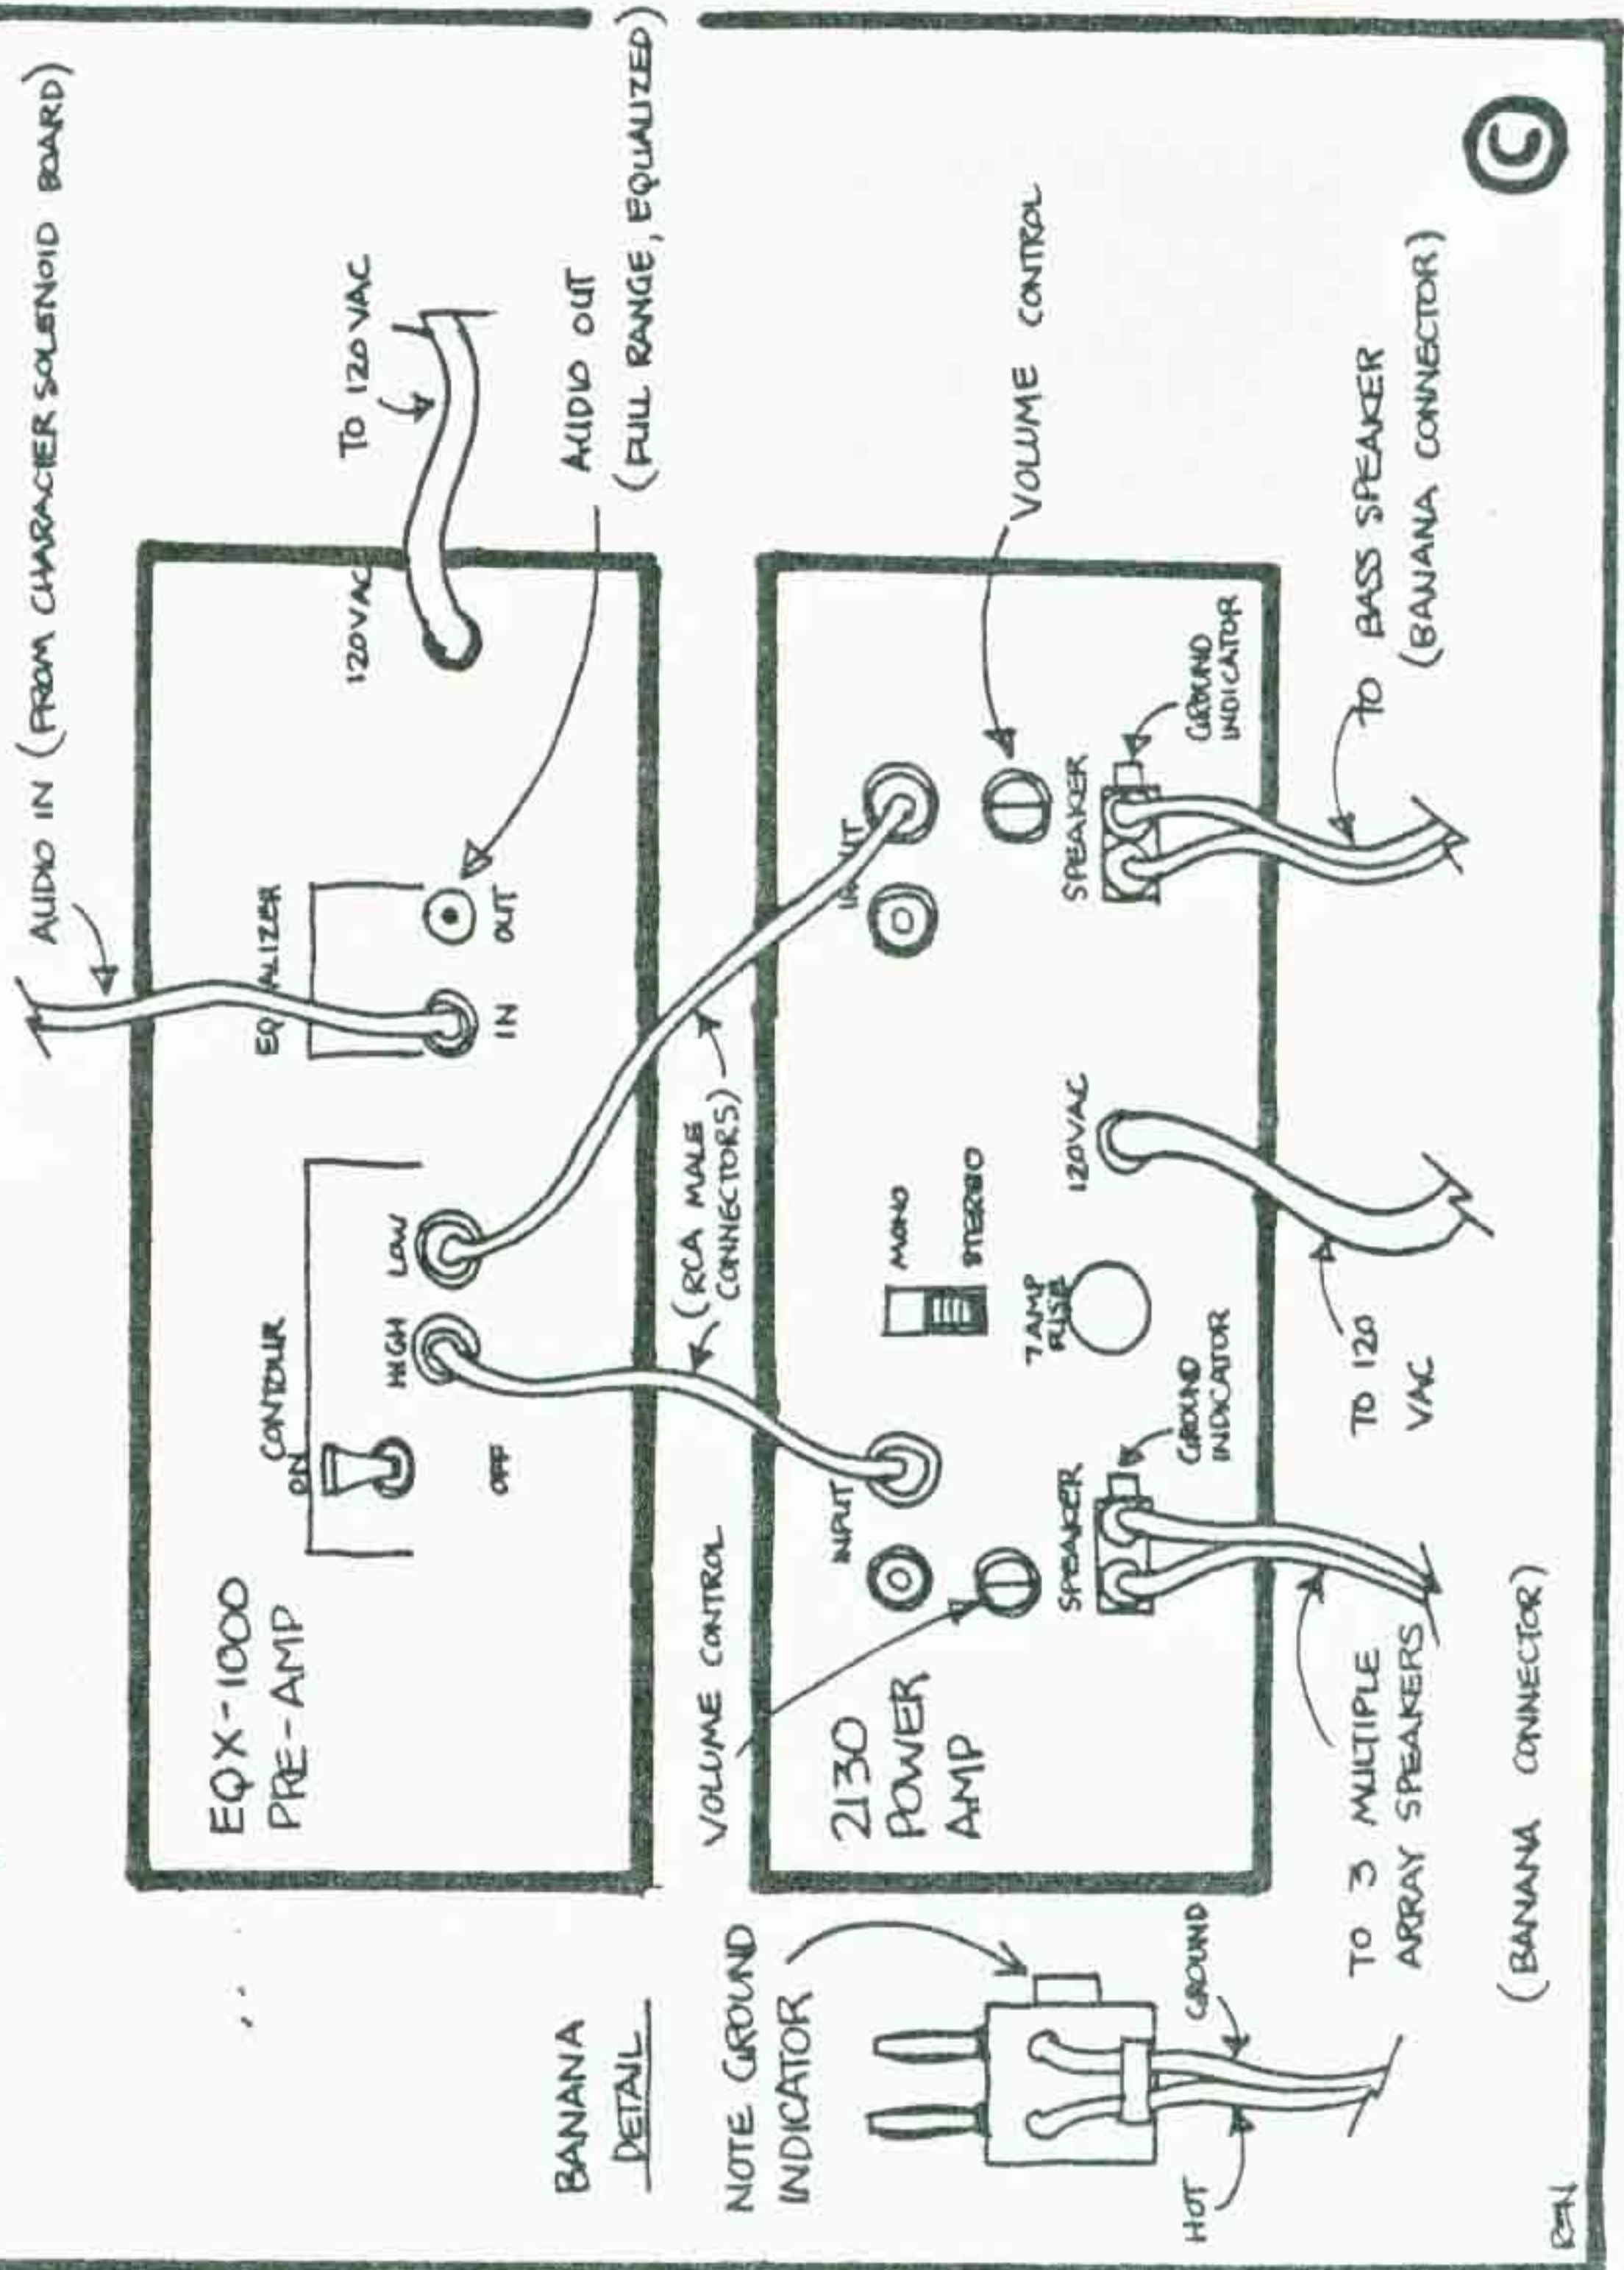

1.1.4.1/10



PEN

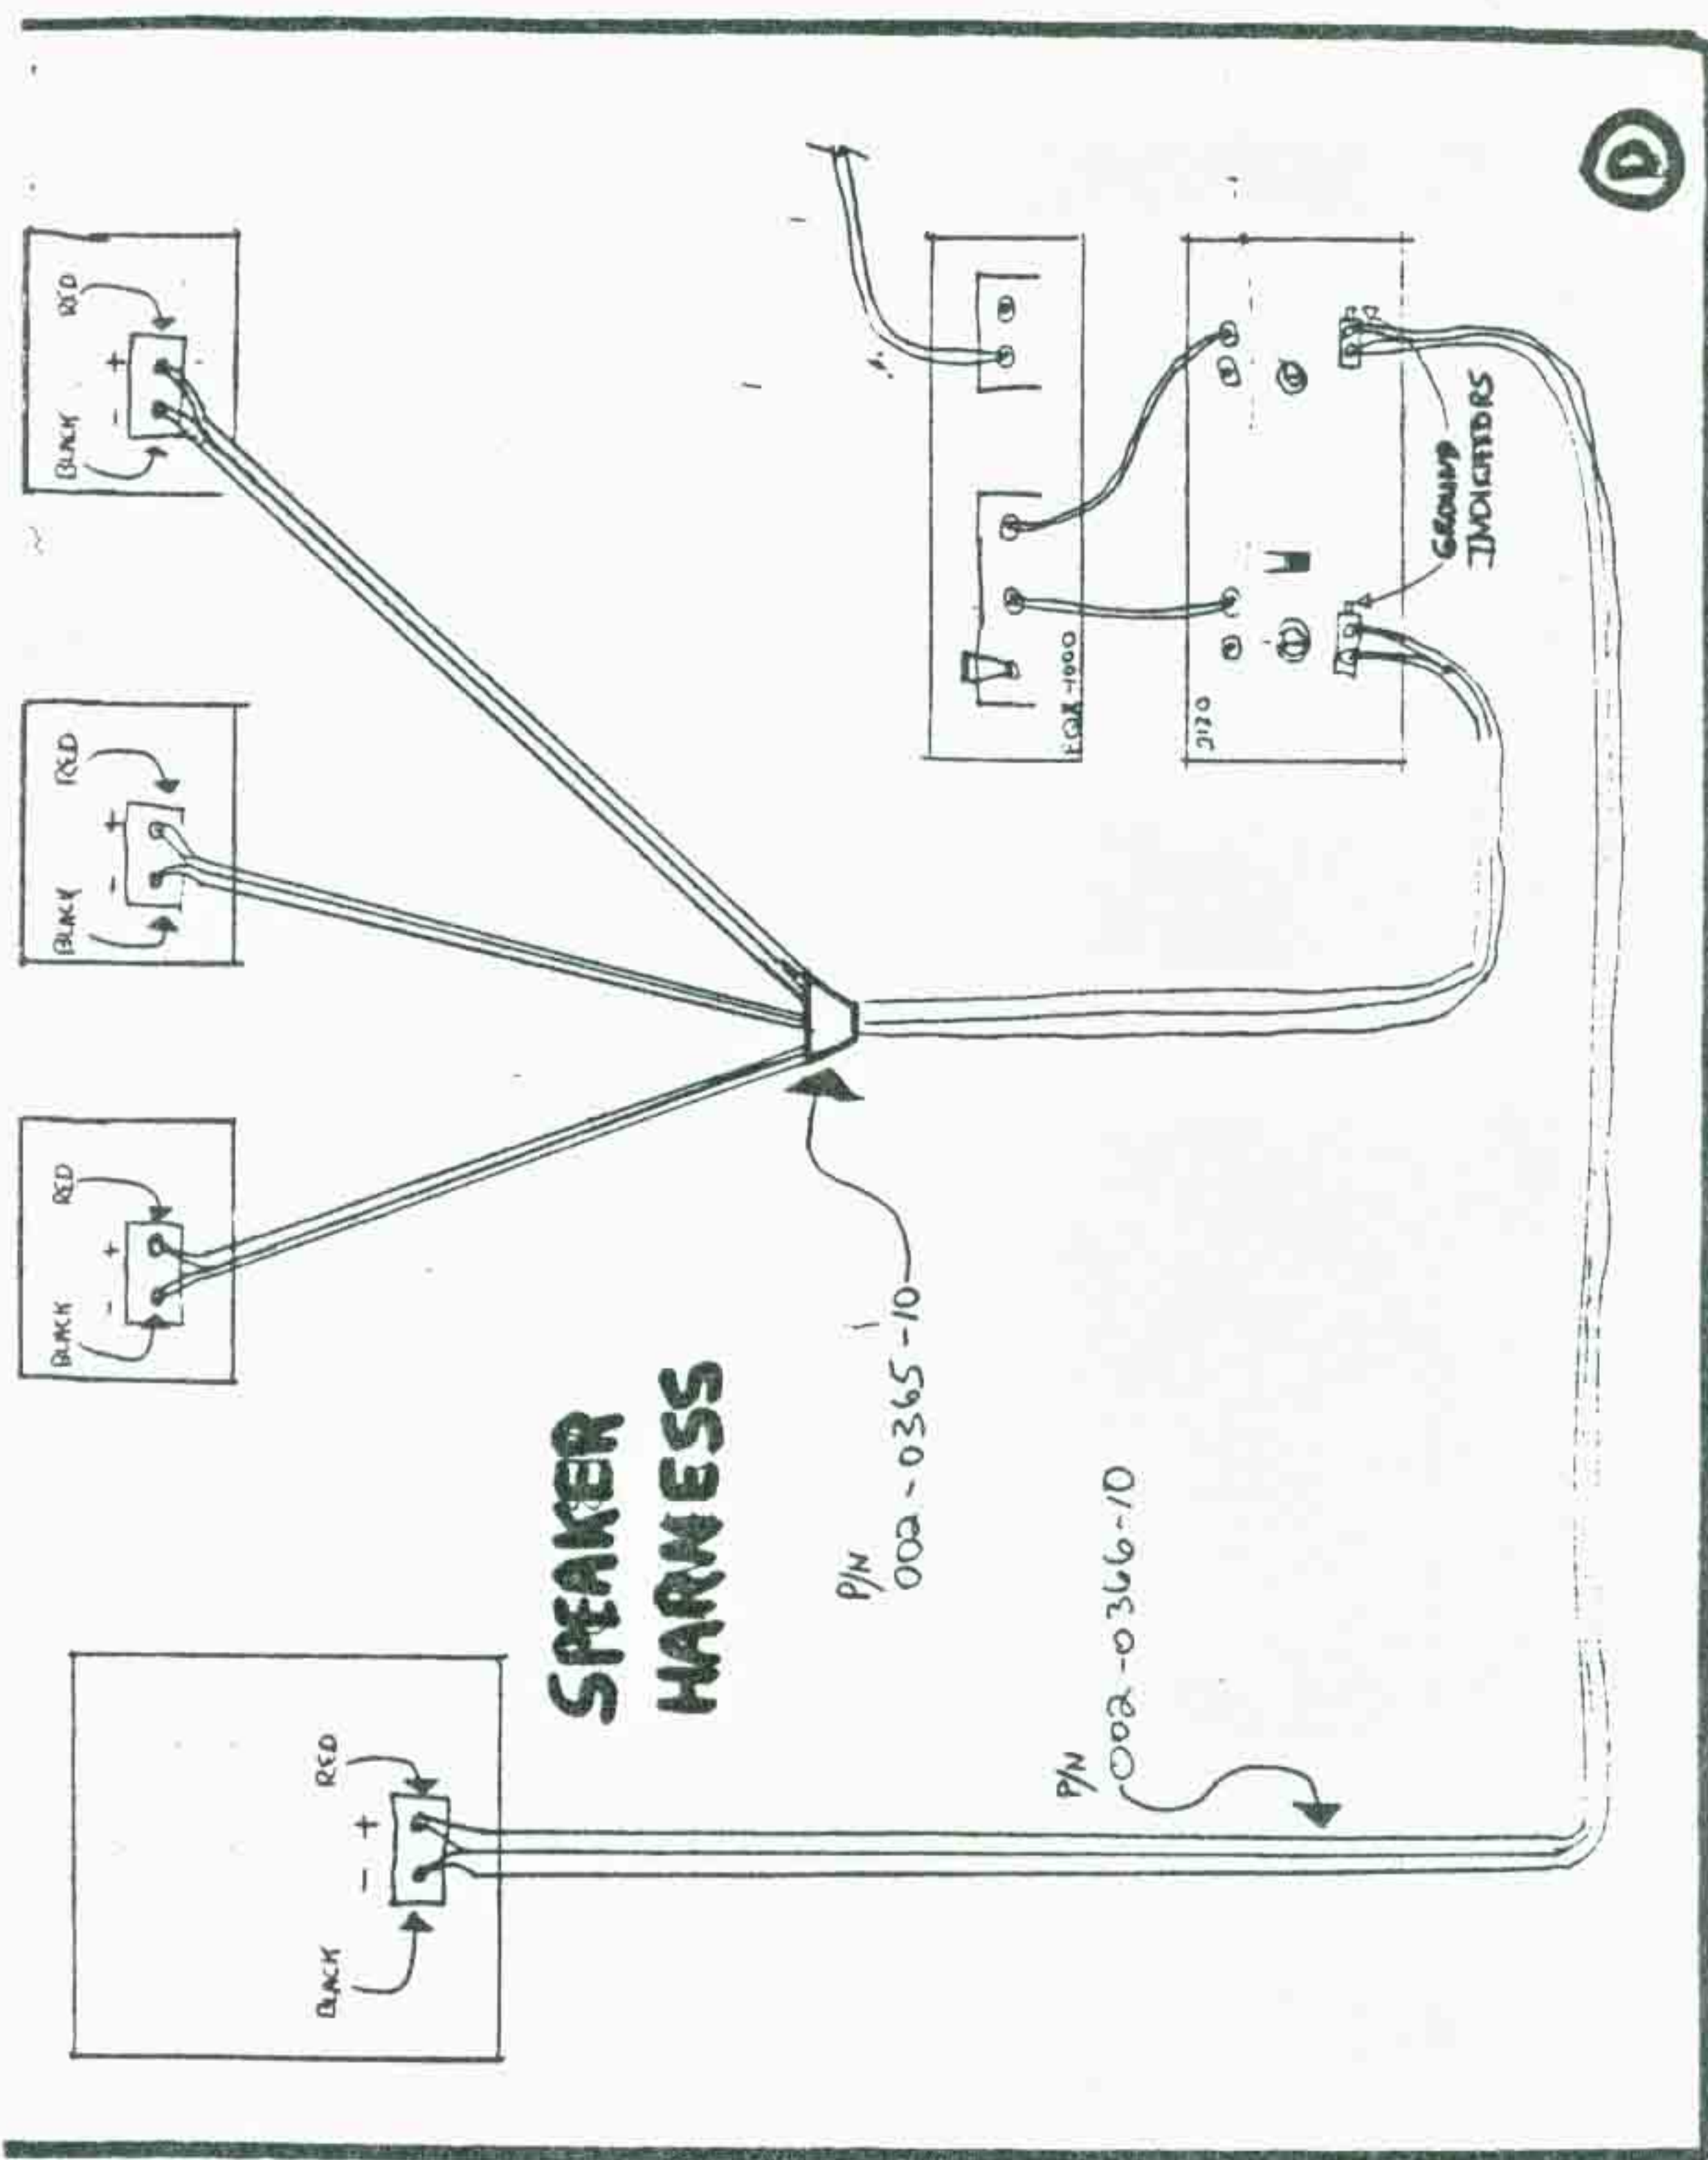


1.1.4.1/11

SECTION 1.2.1.1

DESCRIPTION:

Dimensions  
(GLI Sound System)

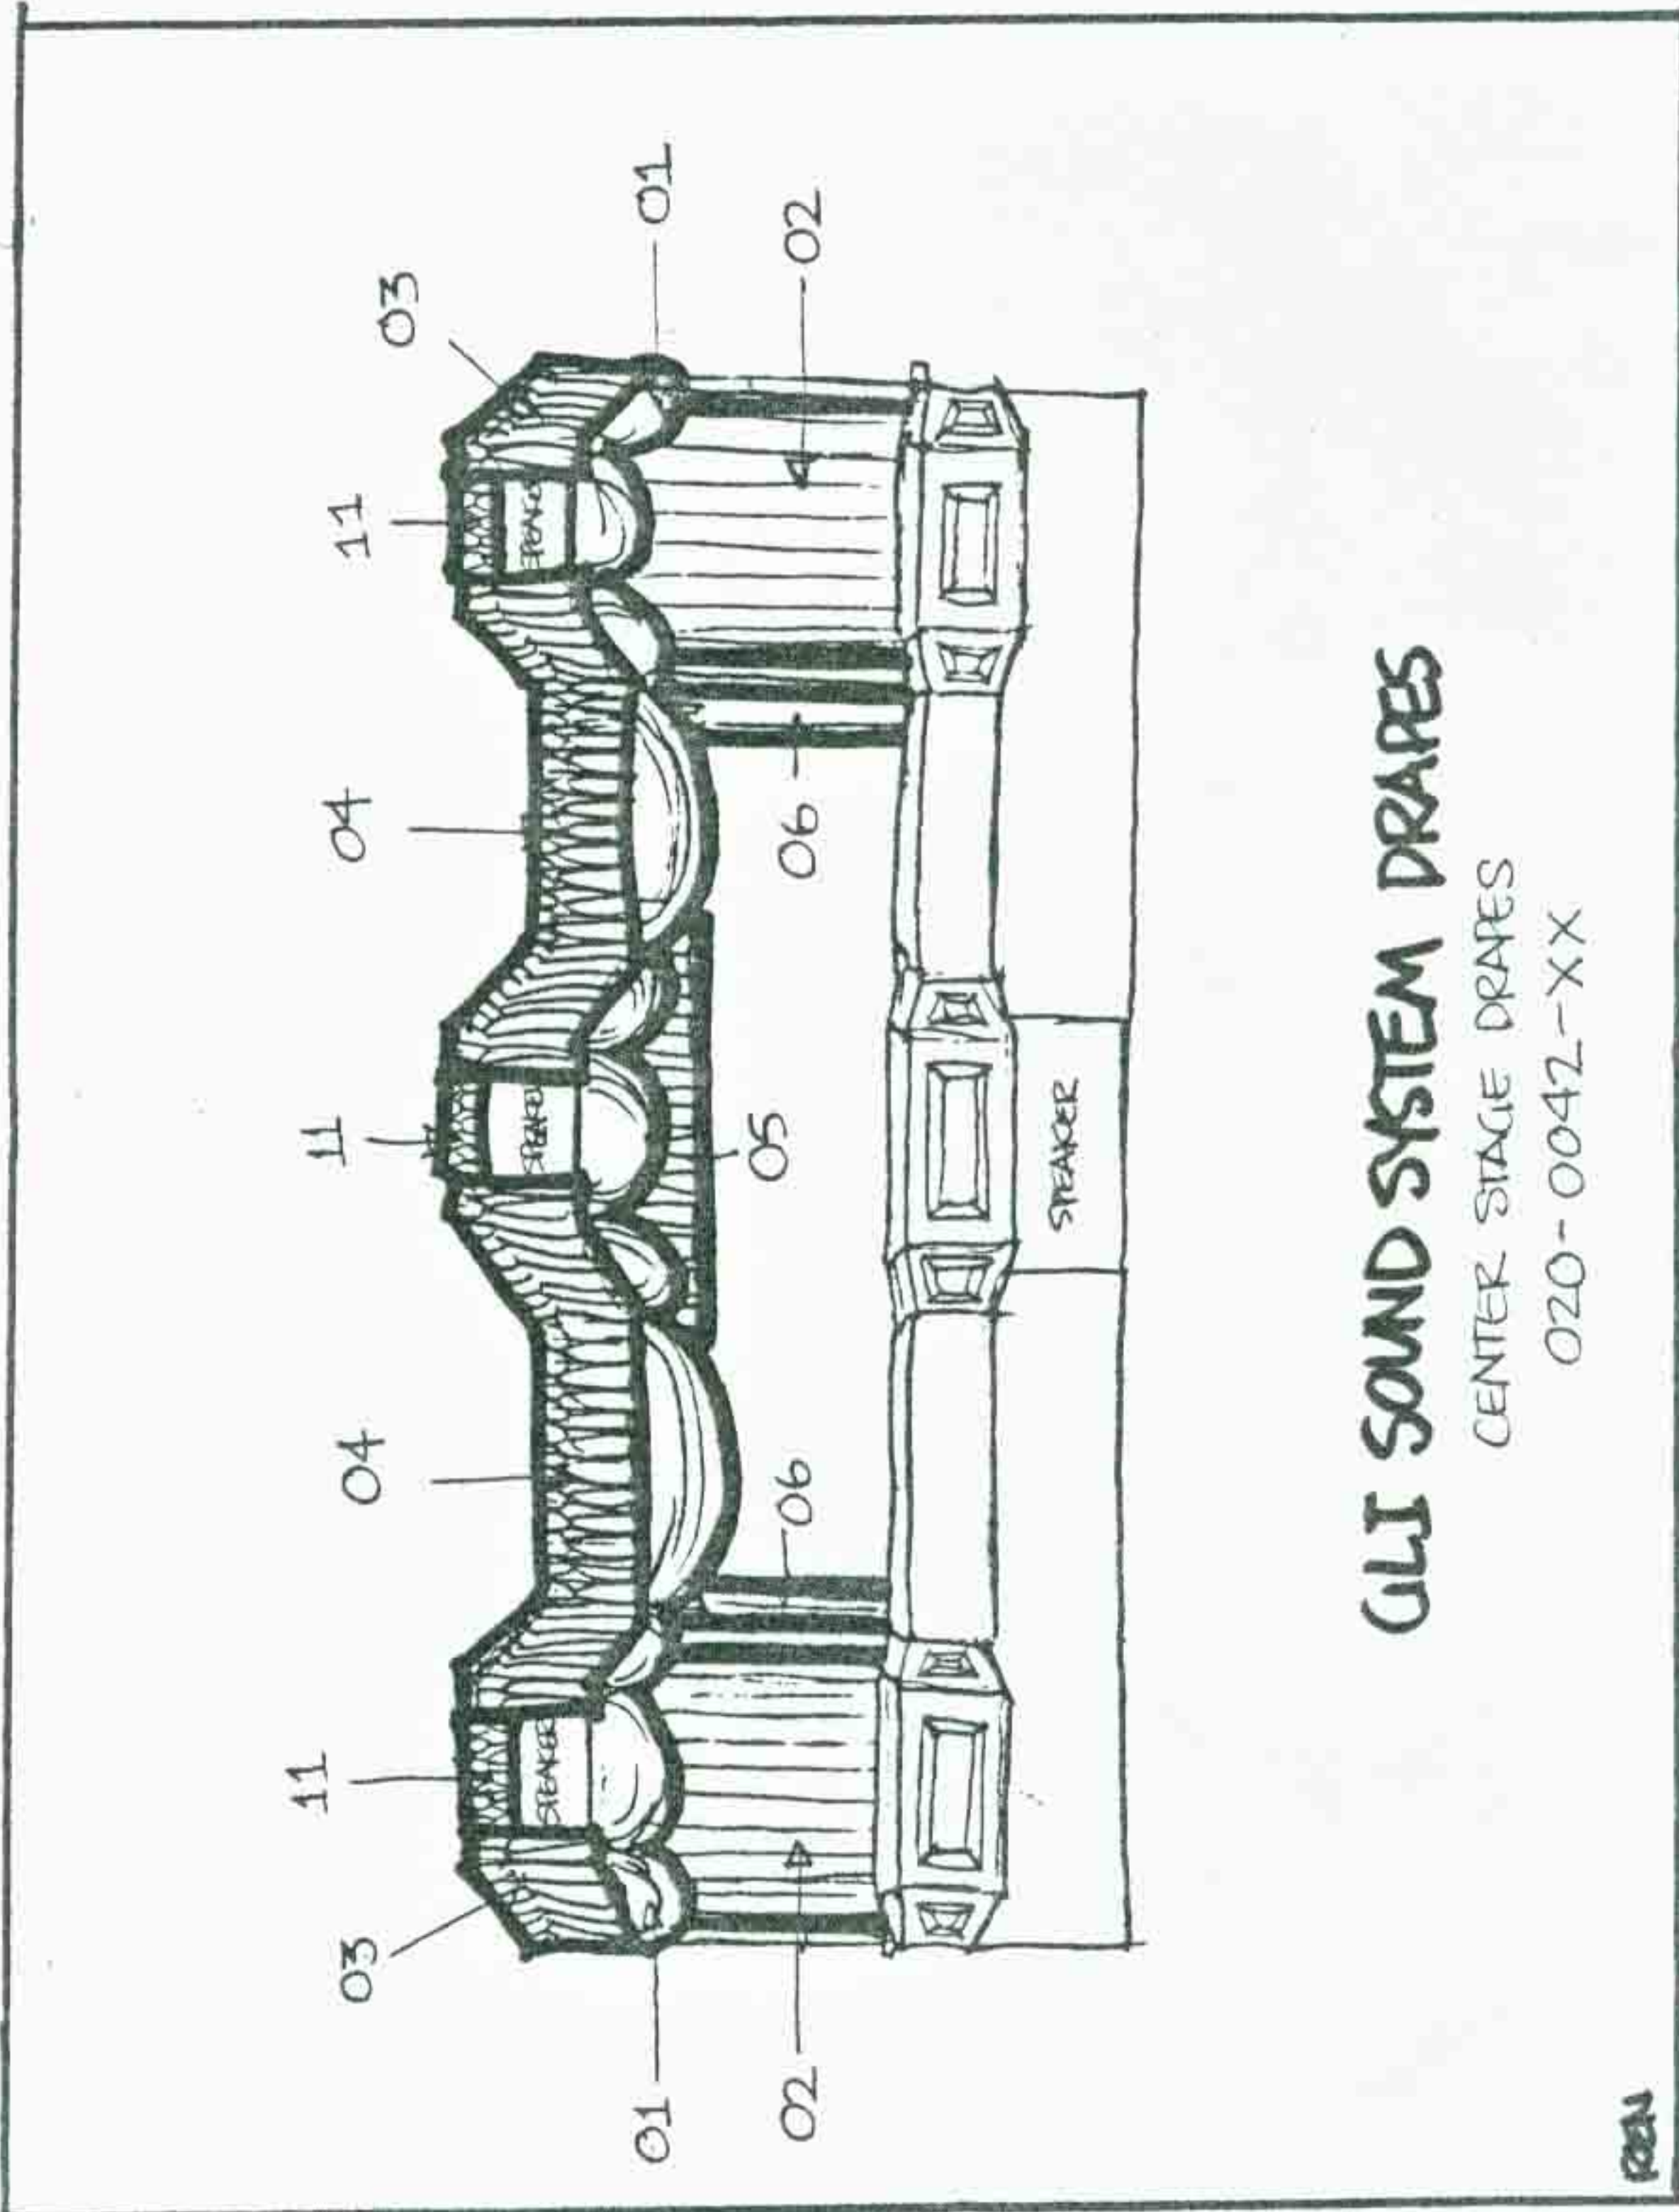


**GLI SOUND SYSTEM DRAPES**

CENTER STAGE DRAPES

020-0042-XX

1.2.1.1/1

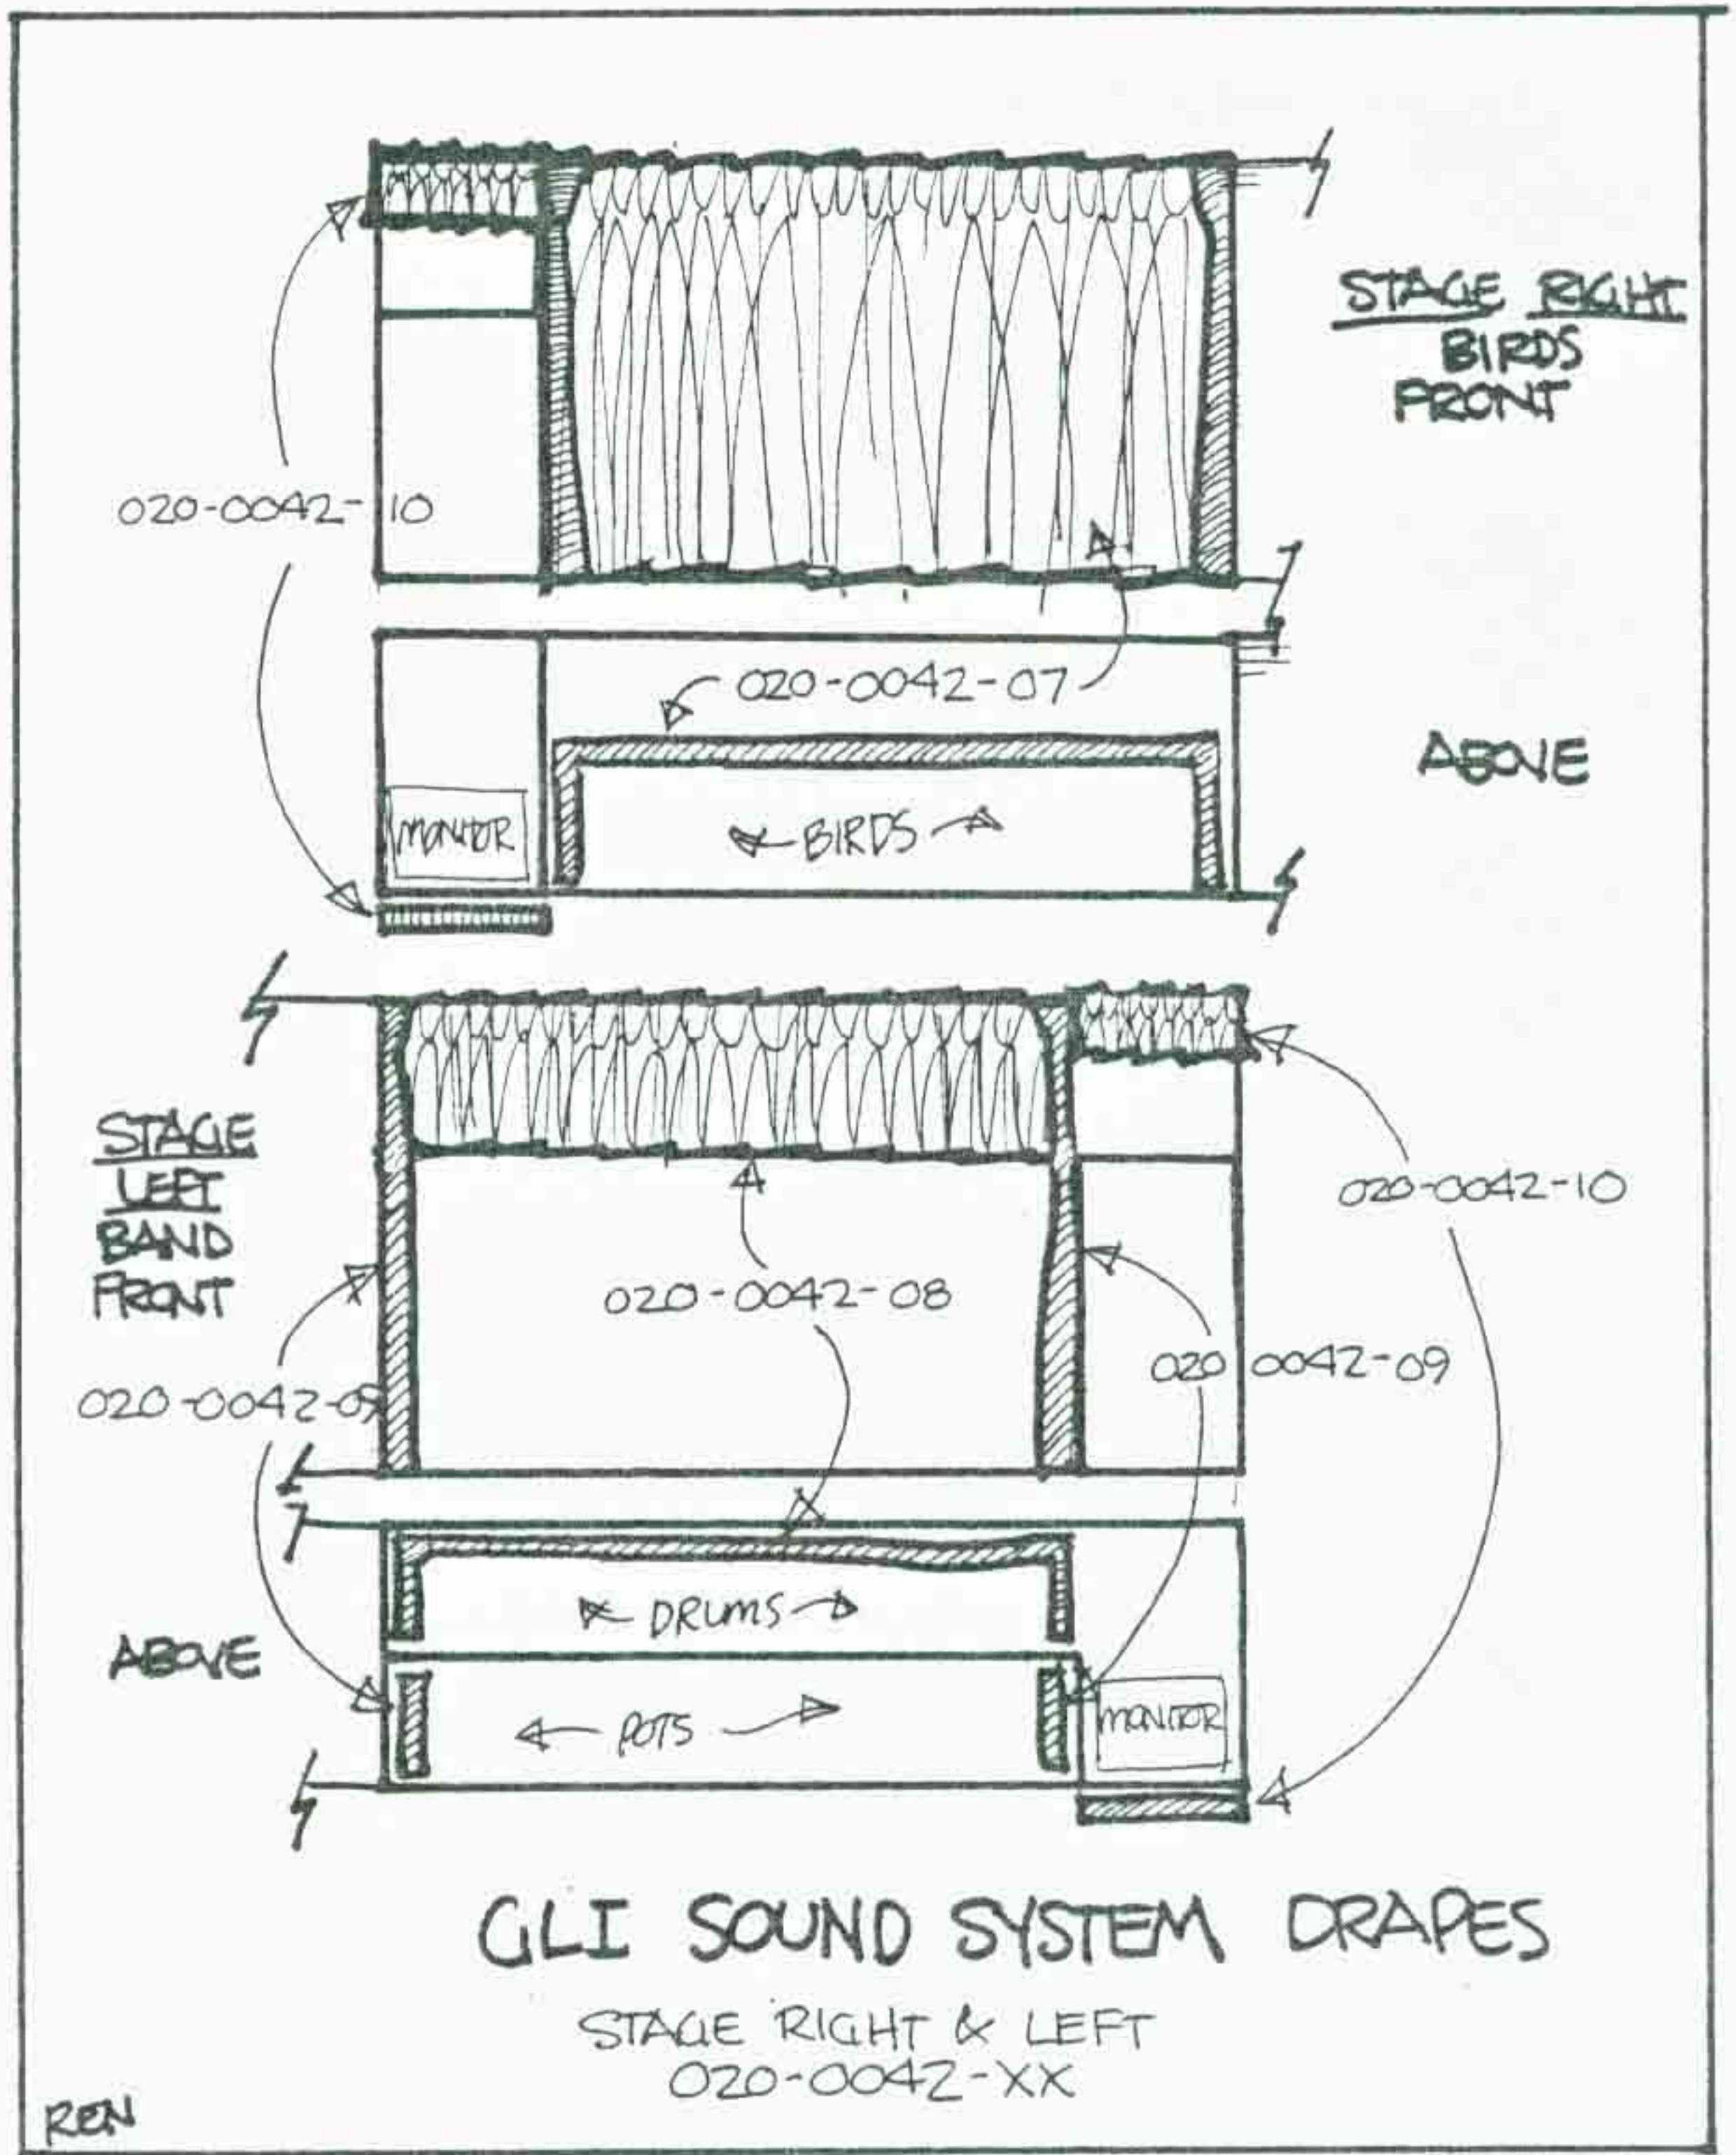


1.2.1.1/2



MAIN STAGE VALANCE 1 REQUIRED  
315" X 9"

STYLE "1"

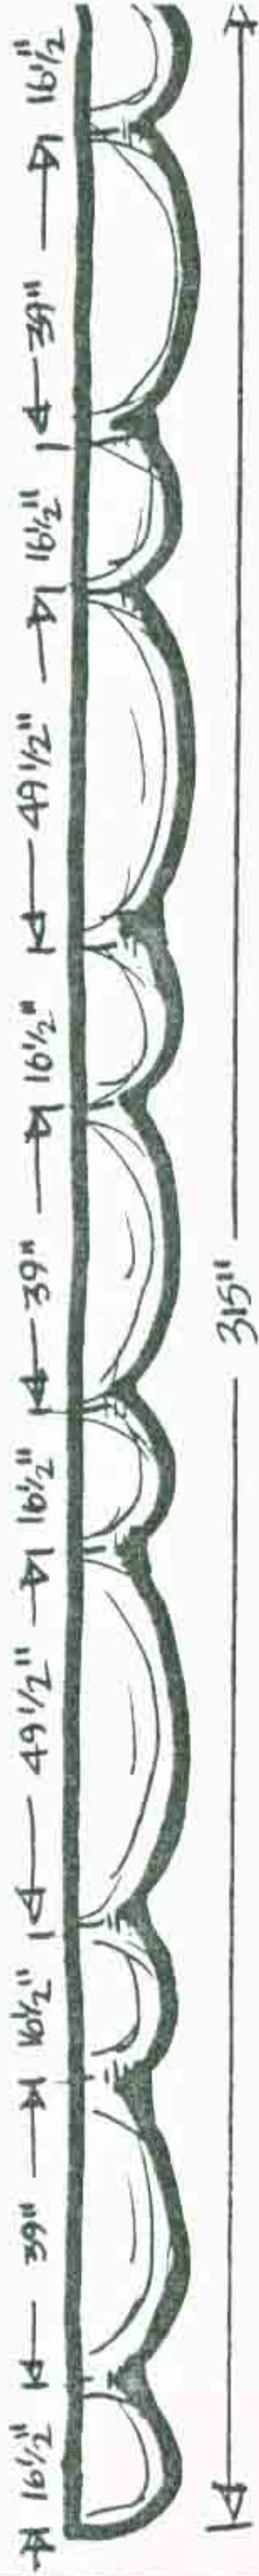

01

AUSTRIAN SWAG  
RED FIRE PROOF VELOUR



GLI SOUND SYSTEM DRAPES

020-0042-XX

01 - 11

1.2.1.1/3

REV

MUNCH & PASQUALLY  
STAGE BOX DRAPES


2 REQUIRED

132" x 84"

BOX PLEATS

100% FULLNESS


RED FIREPROOF VELOUR

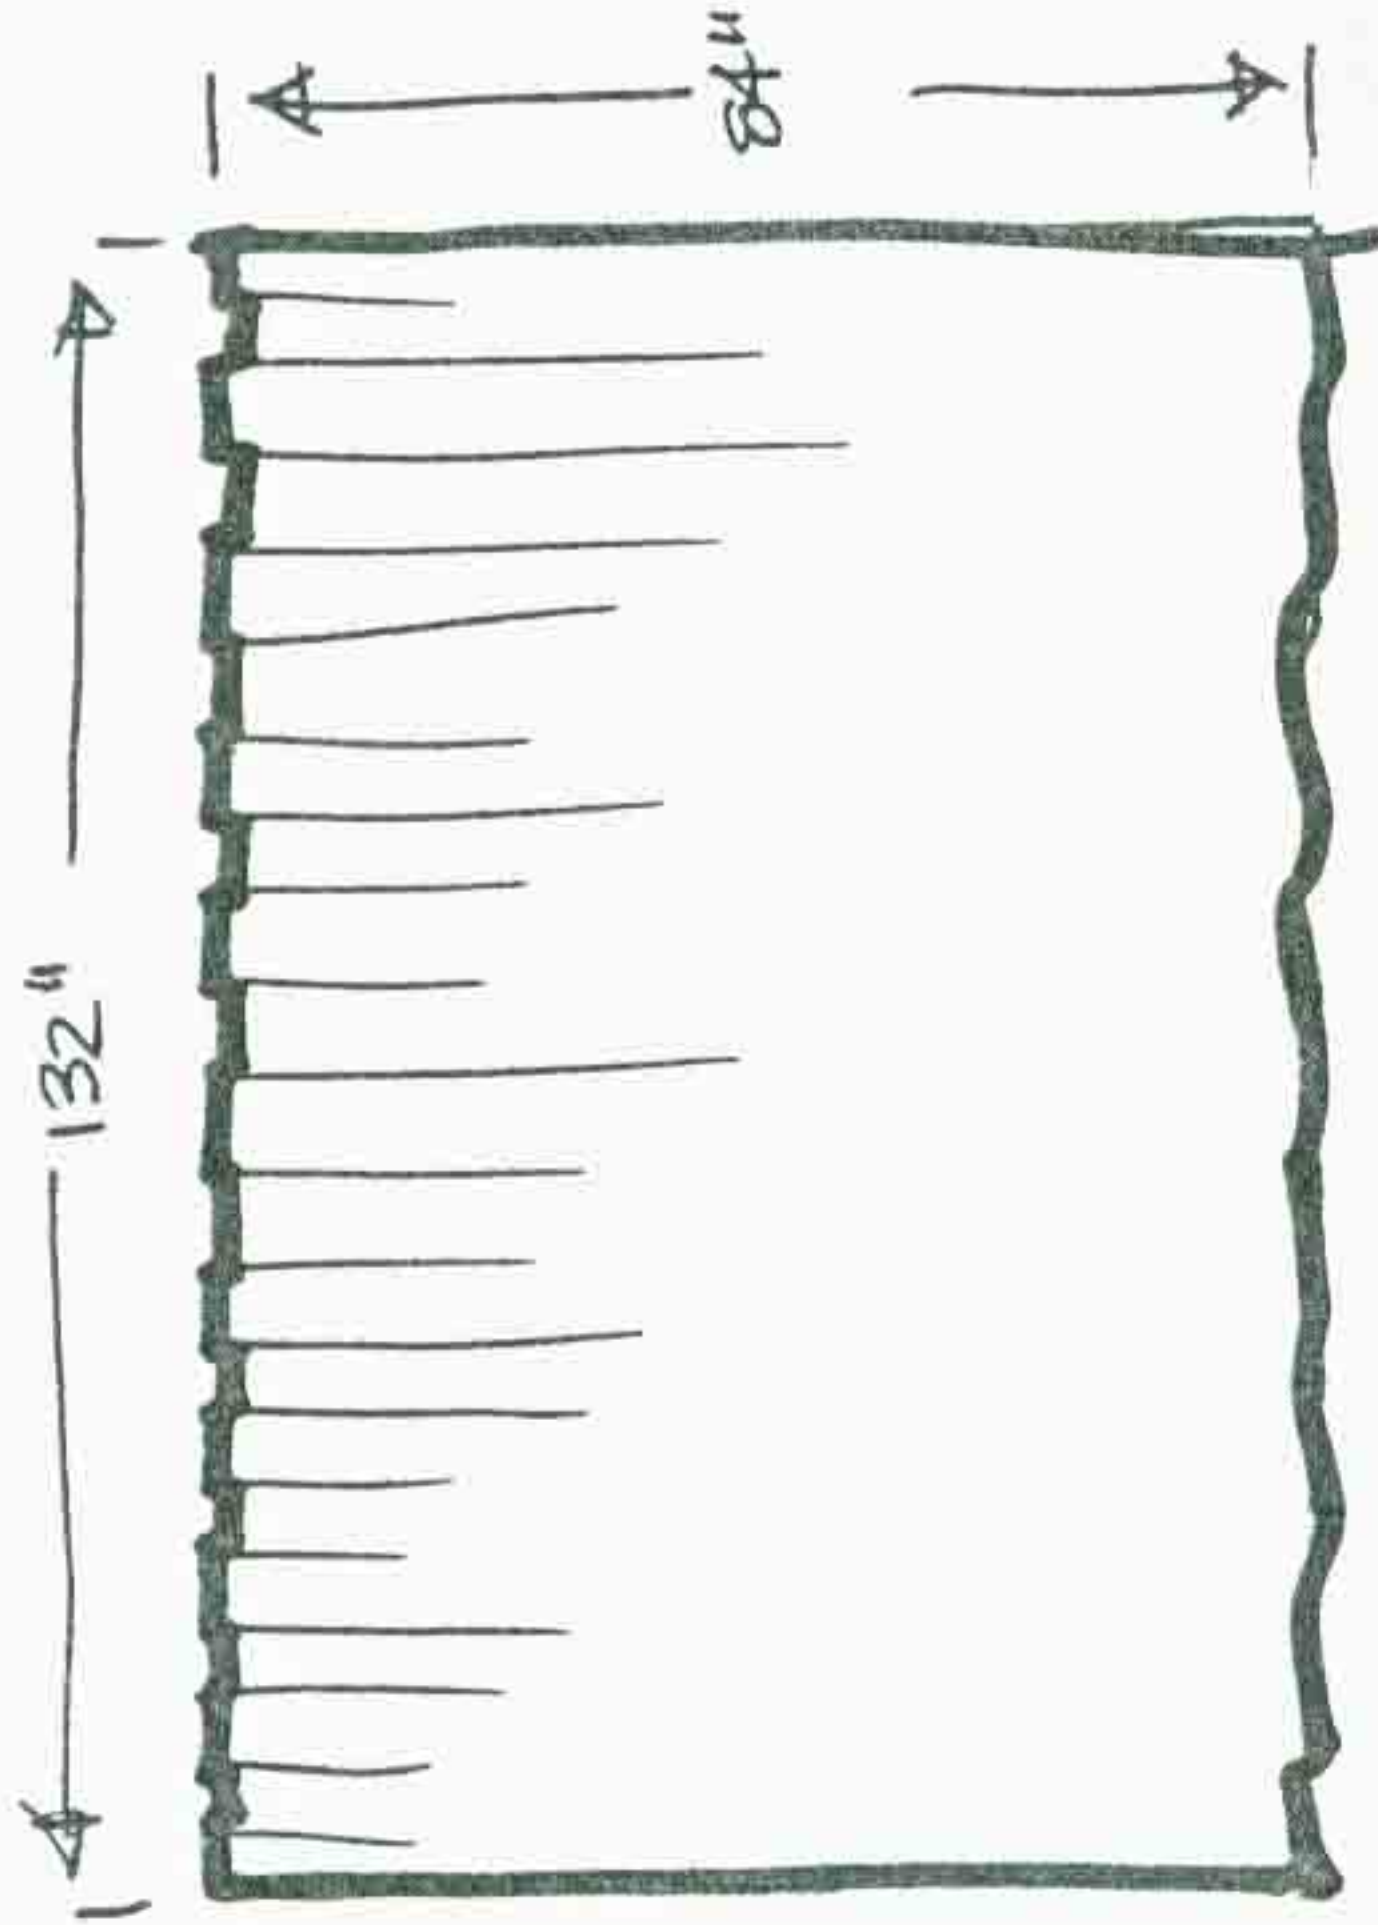


02

1.2.1.1/4

REN

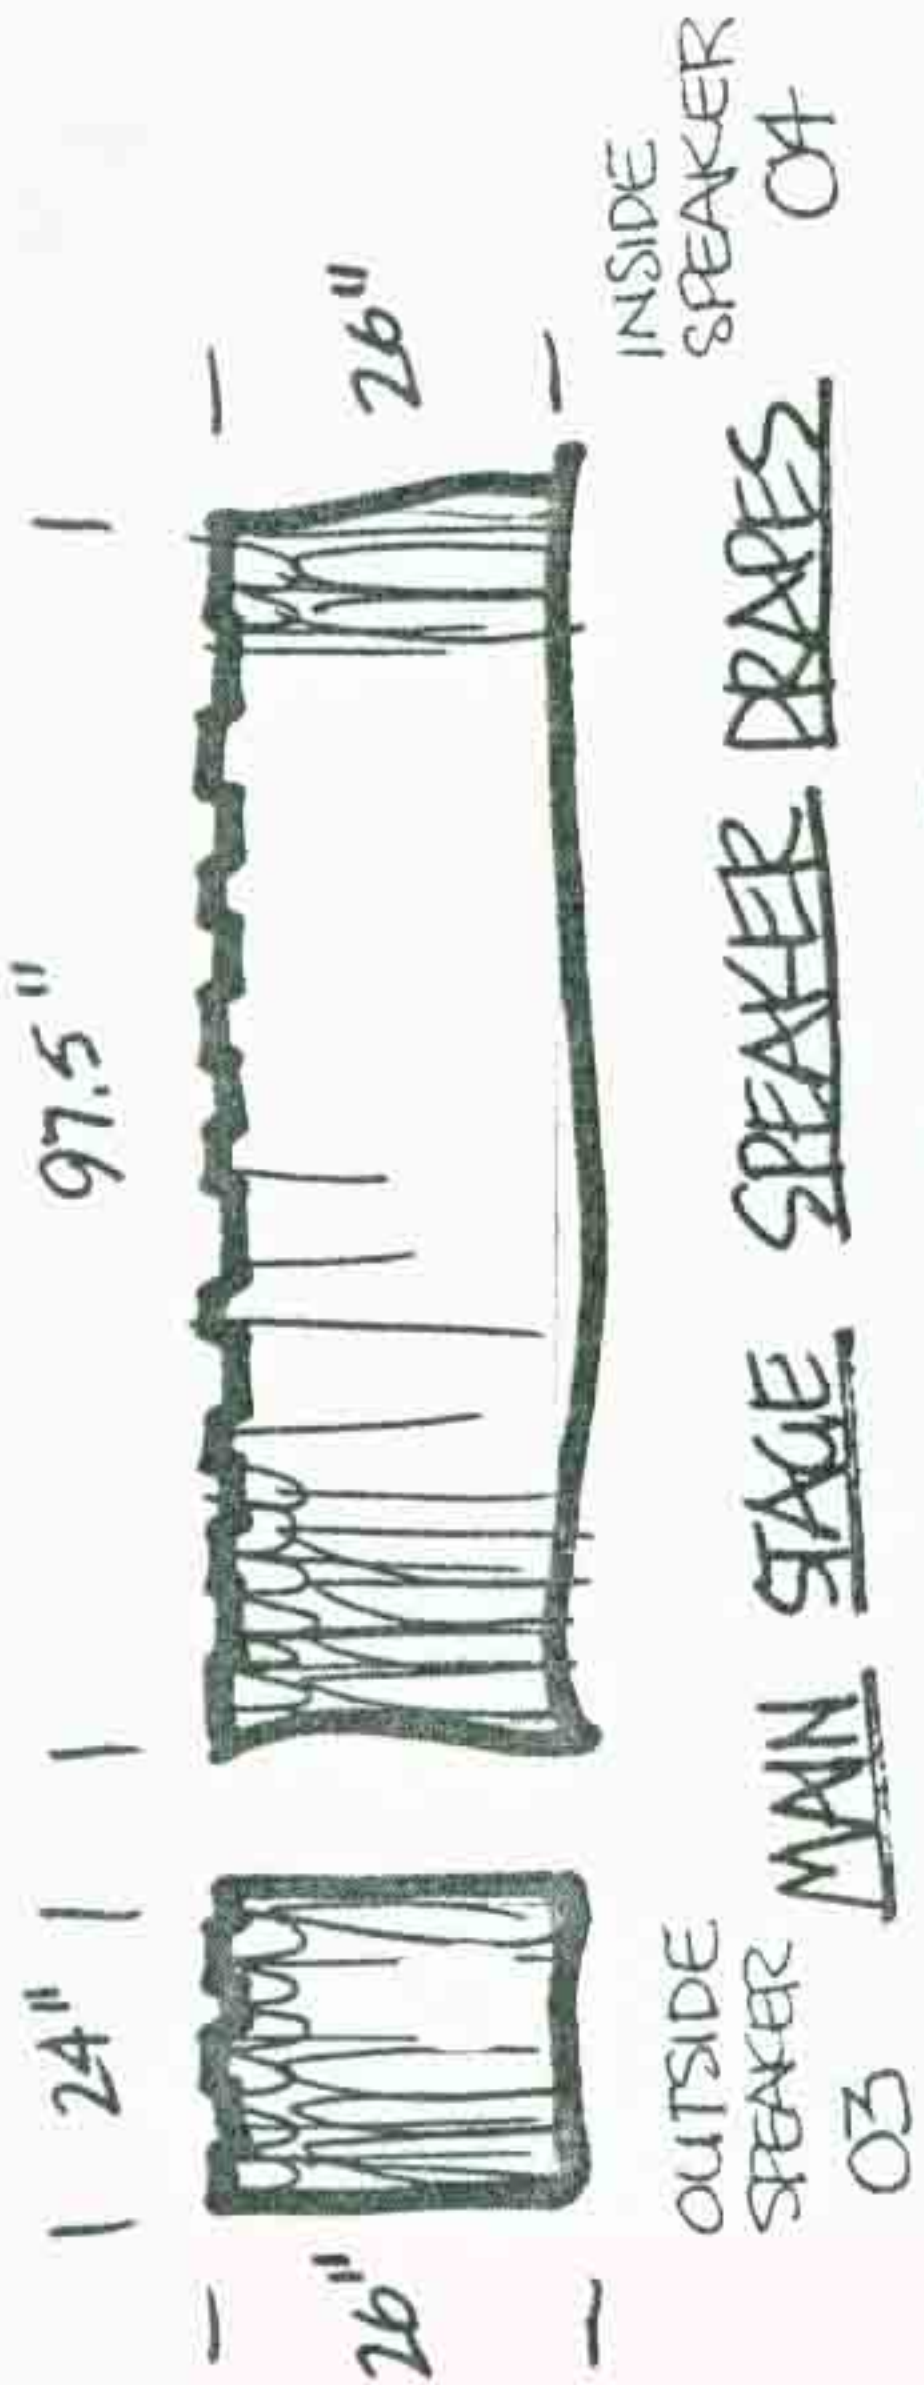


BLACK FIREPROOF  
PINCH PLEATS  
2 EACH REQUIRED

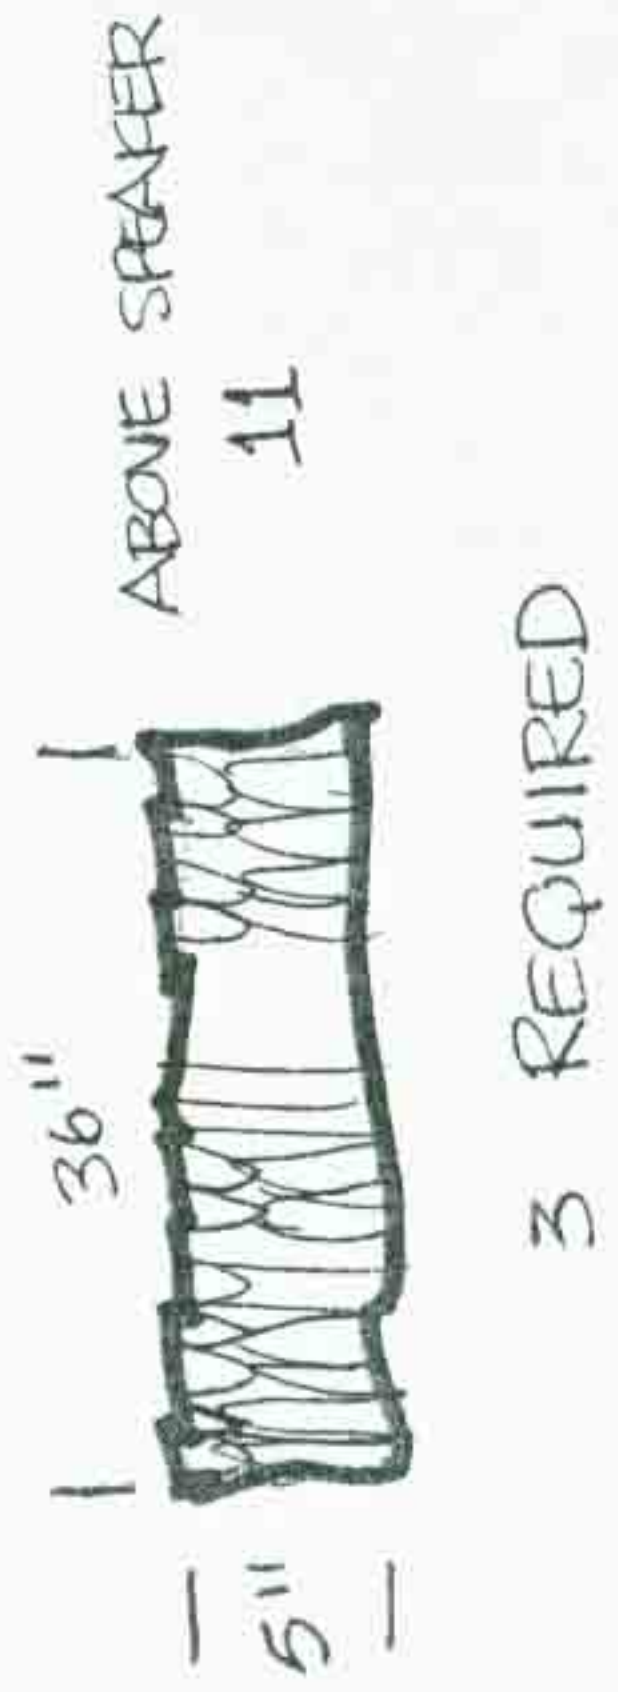




1.2.1.1/5

RZN

BLACK STAGE DRAPE FIREPROOF PINCH PLEATS


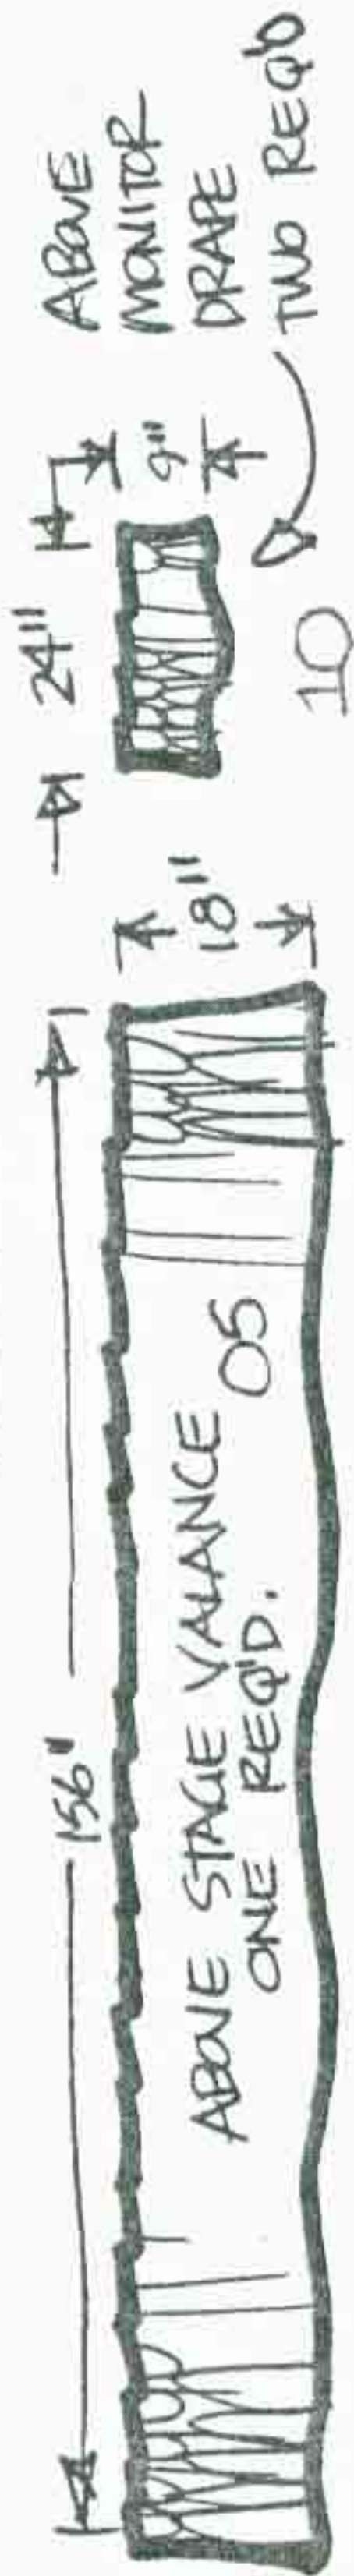


138" ← →

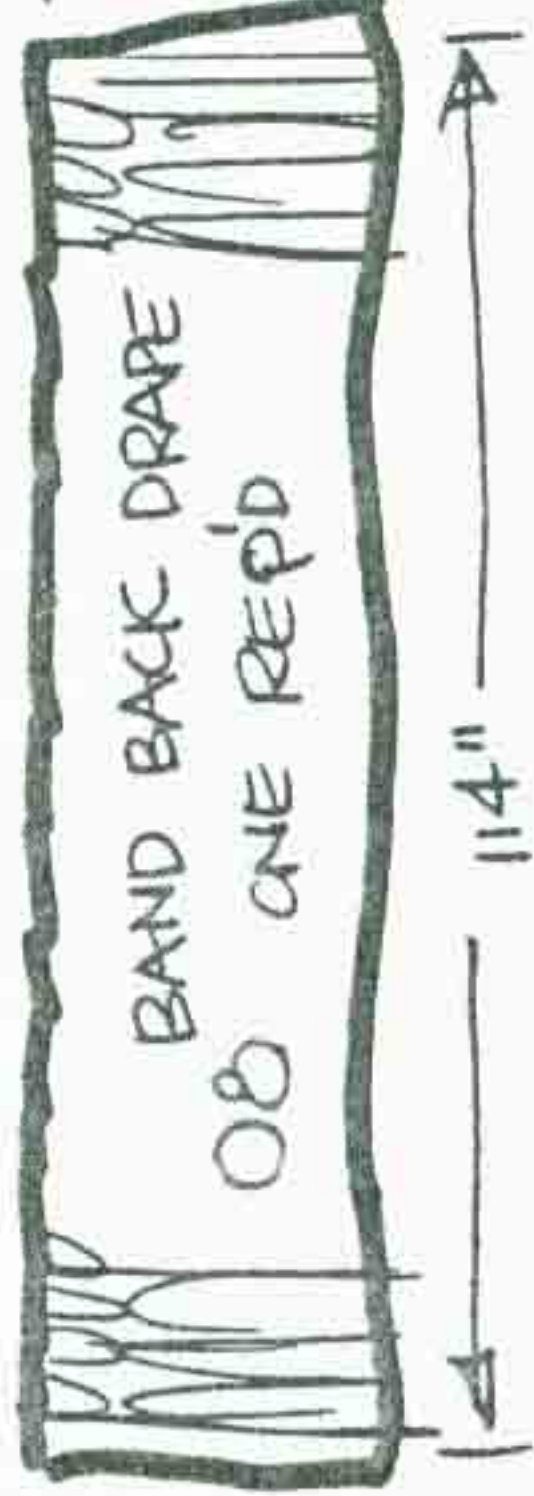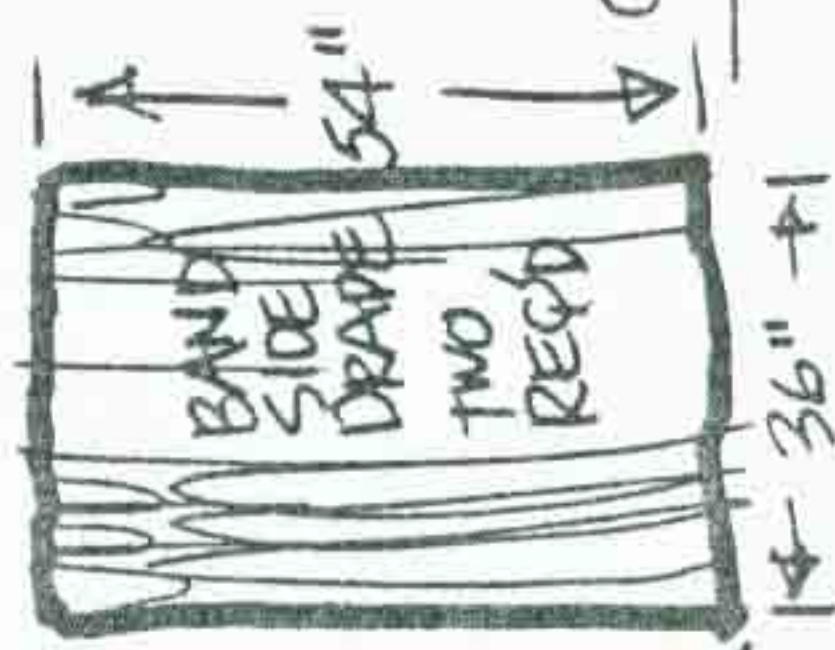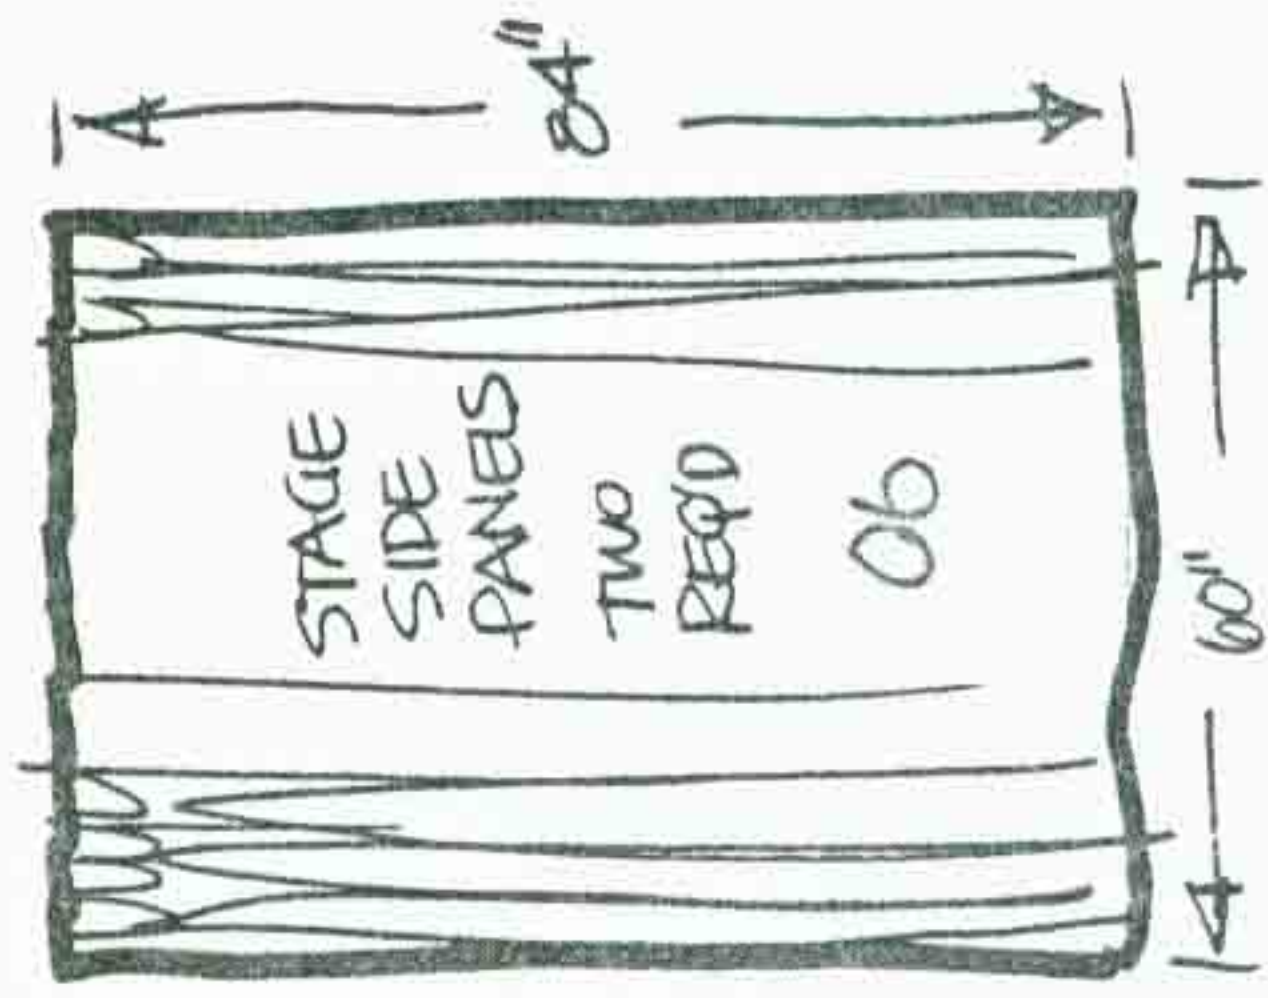

1.2.1.1/6

REN

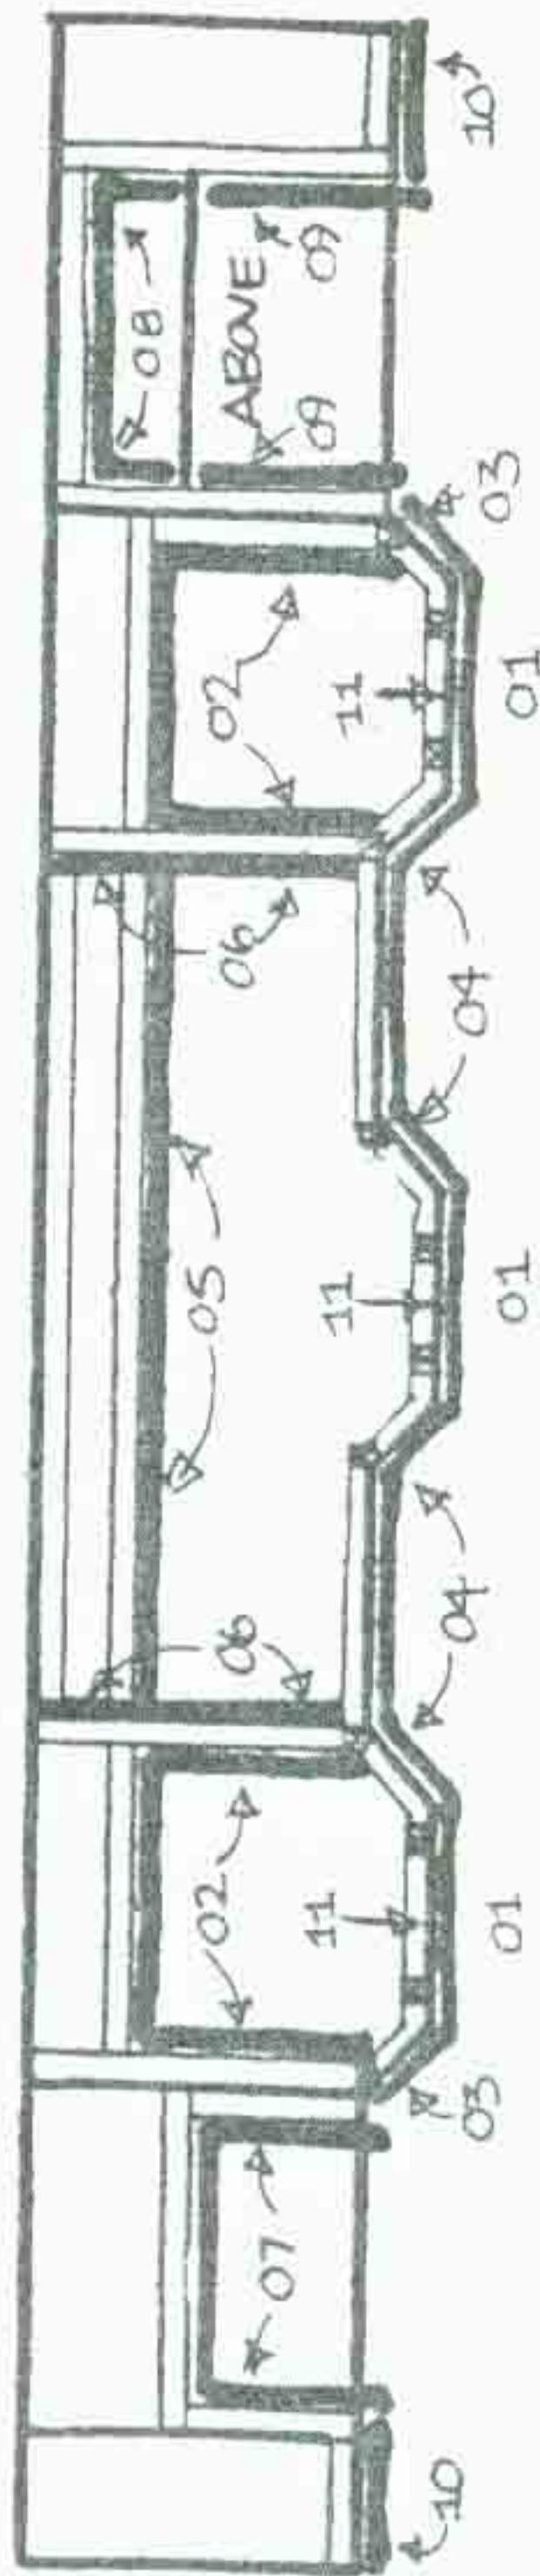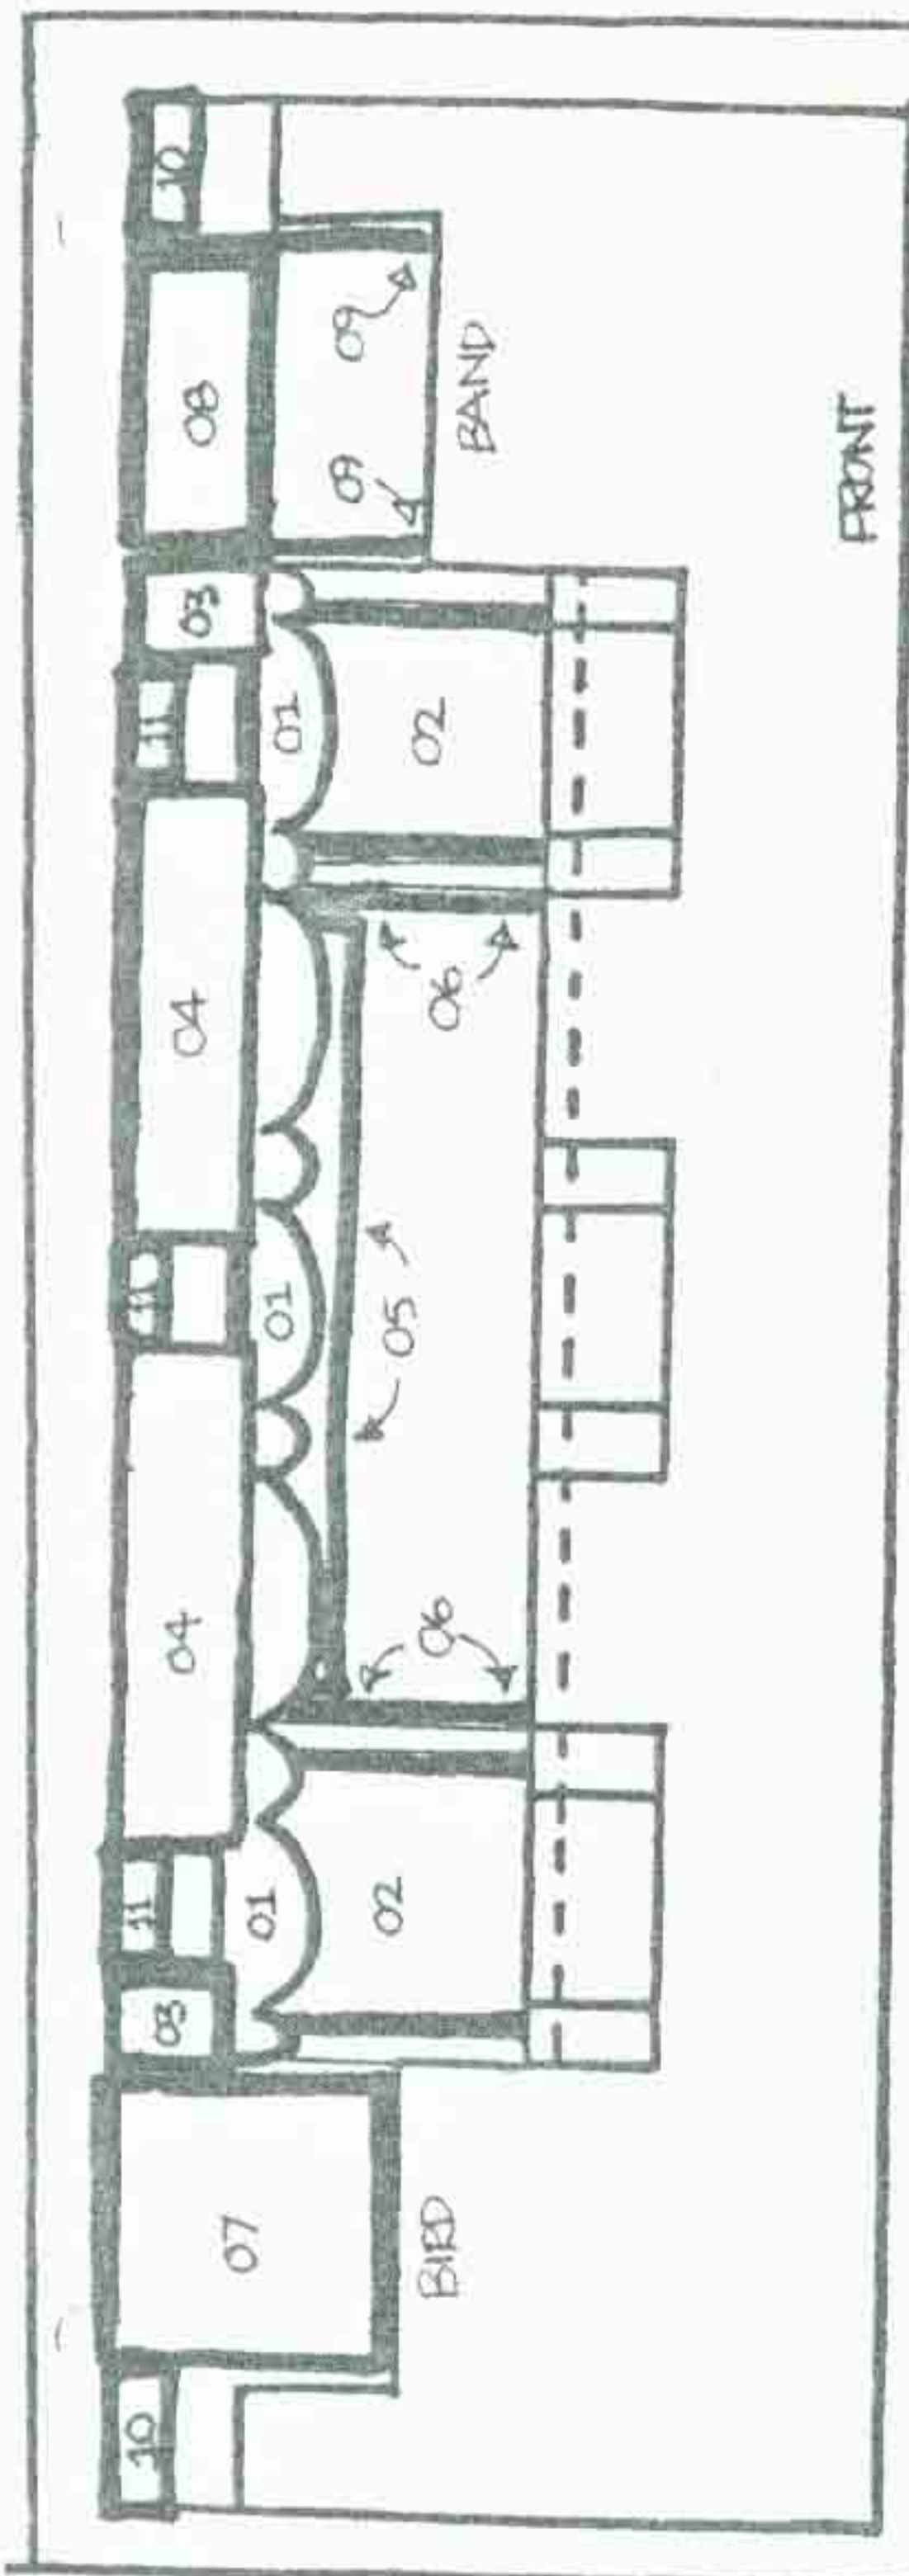

**GLI SOUND SYSTEM DRAPES**

020-0042-XX

1.2.1.1/7

GLI SOUND SYSTEM DRAPES - PARTS LIST


PART NUMBER	DESCRIPTION	QUANTITY
020-0042-01	MAIN STAGE VALANCE	1
020-0042-02	MUNCH & PASQUALLY BOX DRAPE	2
020-0042-03	OUTSIDE SPEAKER DRAPE	2
020-0042-04	INSIDE SPEAKER DRAPE	2
020-0042-05	ABOVE STAGE VALANCE	1
020-0042-06	STAGE SIDE PANELS	2
020-0042-07	BIRD BOX DRAPE	1
020-0042-08	BAND BACK DRAPE	1
020-0042-09	BAND SIDE DRAPE	2
020-0042-10	ABOVE MONITOR DRAPE	2
020-0042-11	ABOVE SPEAKER DRAPE	3

1.2.1.1/8

SECTION 1.3.1.1


DESCRIPTION:

Dimensions  
(GLI Sound System)

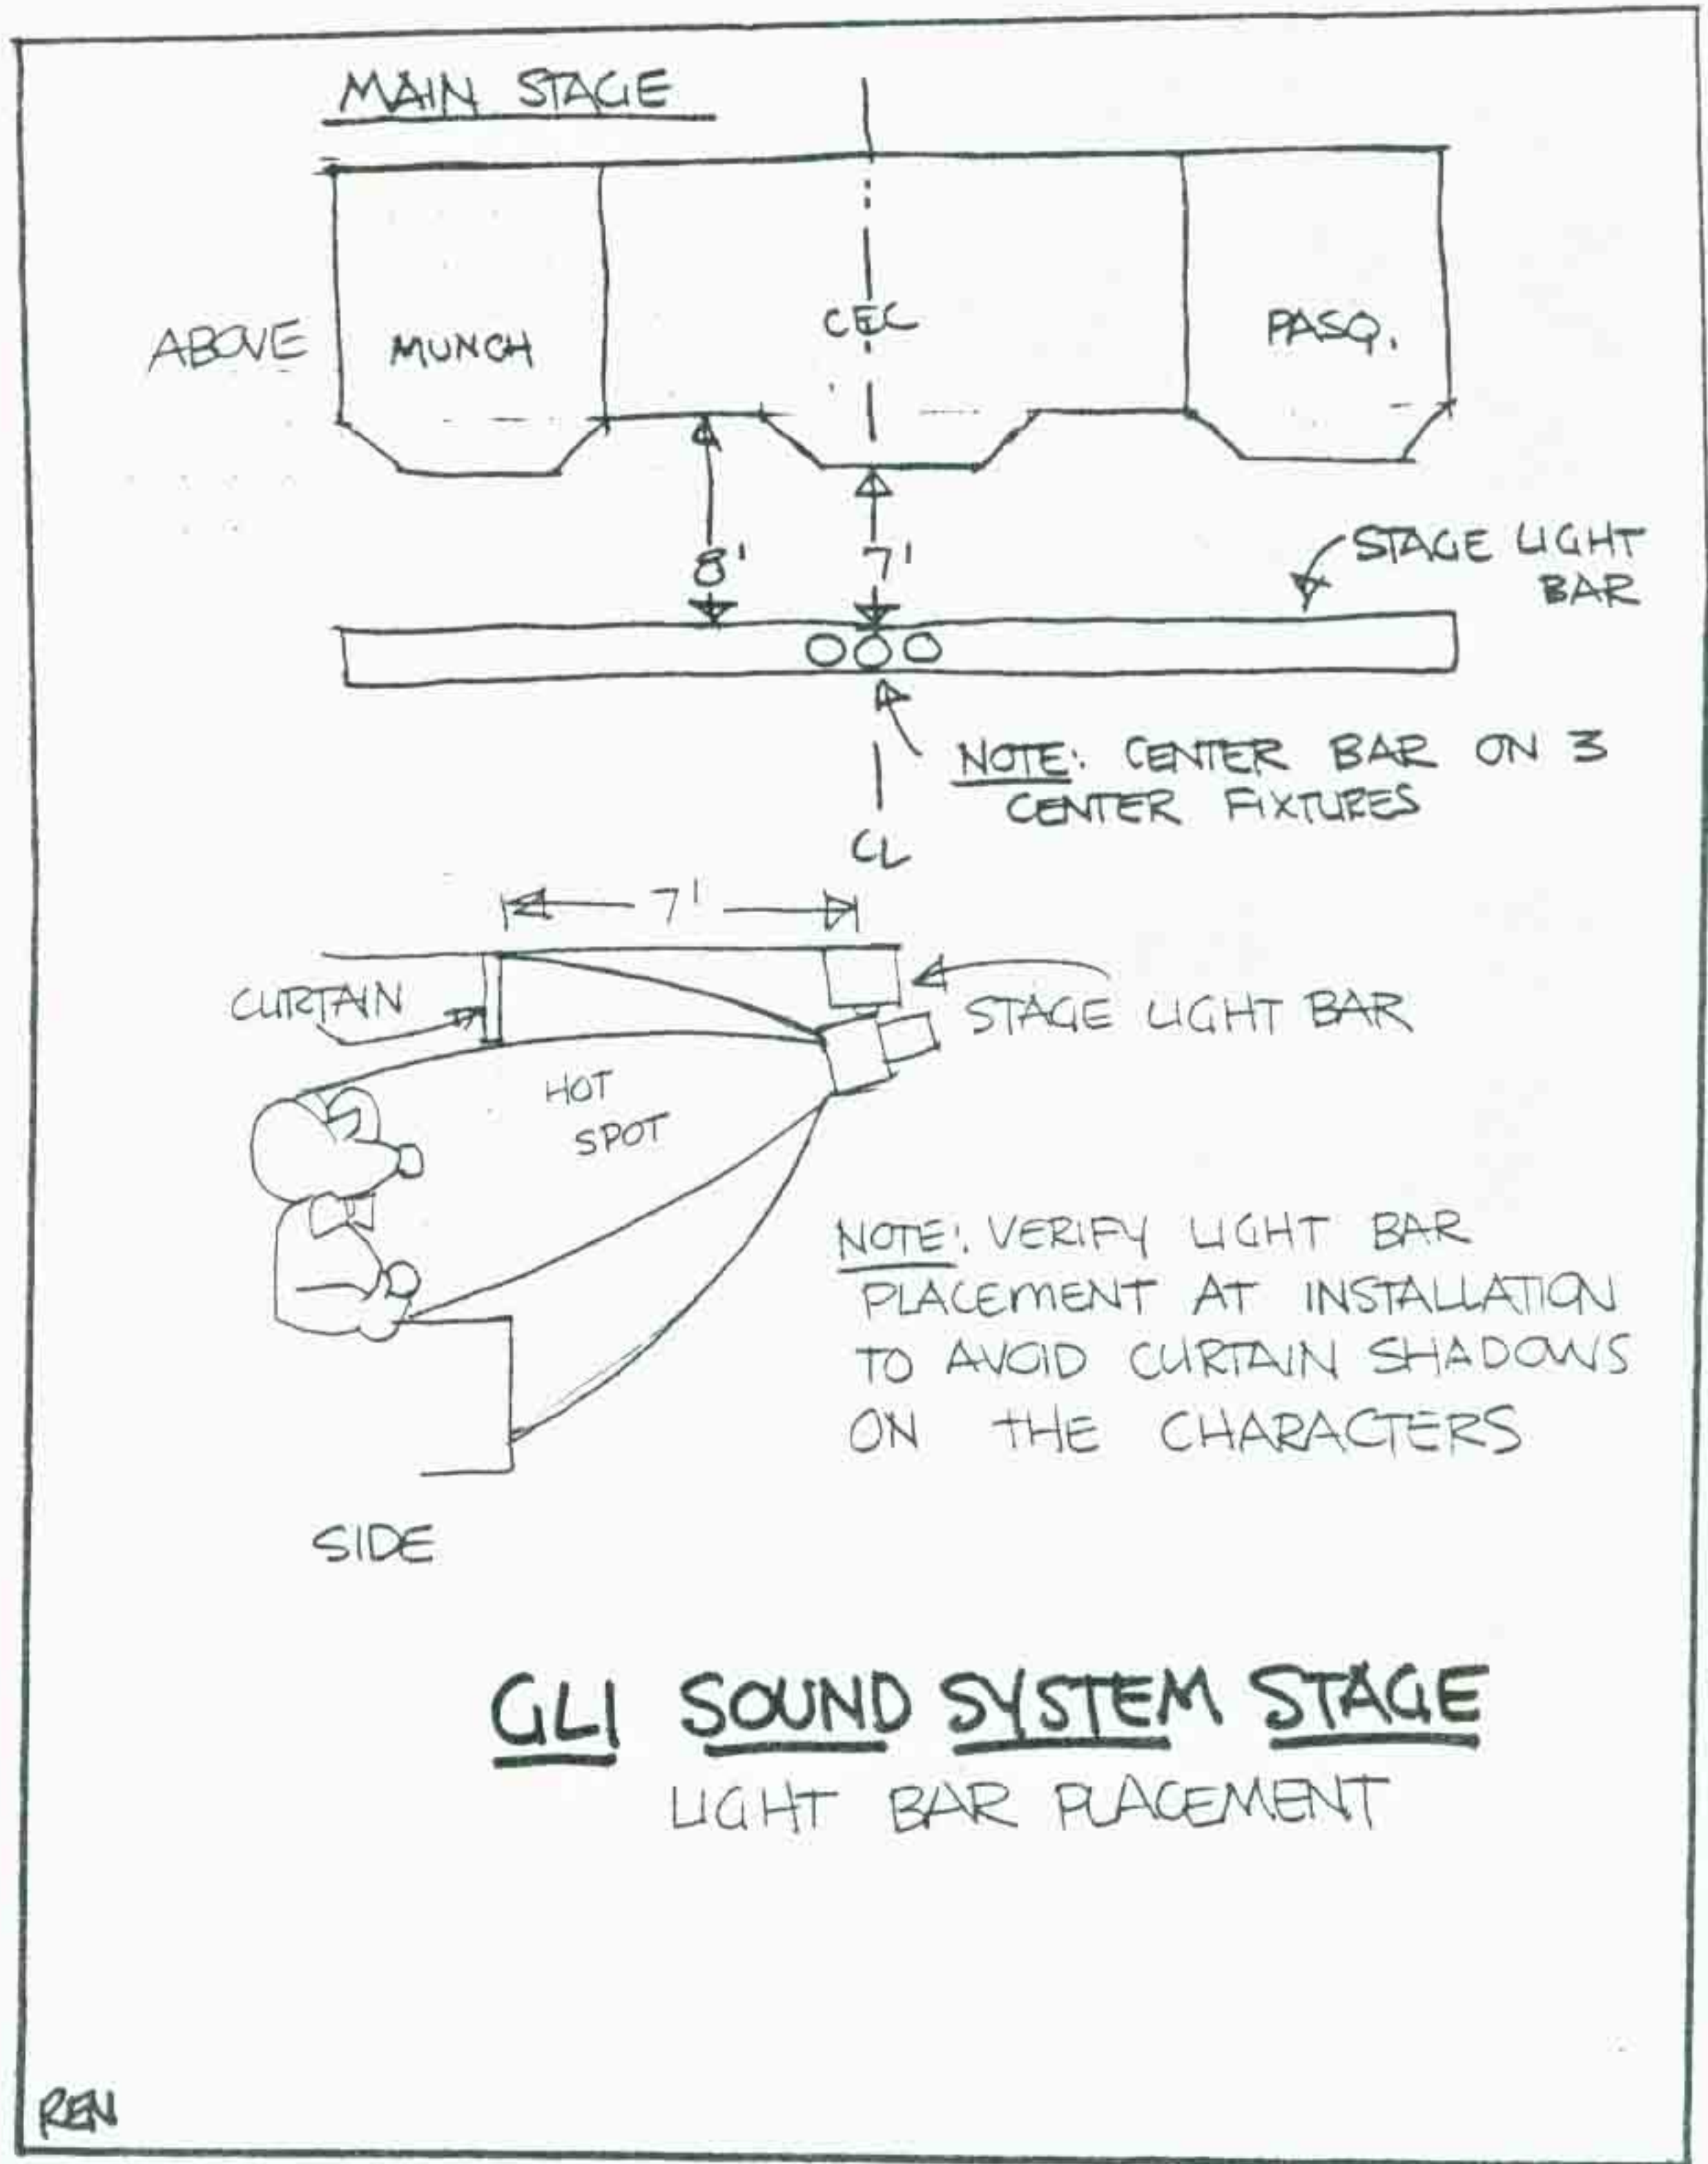

1.3.1.1/1



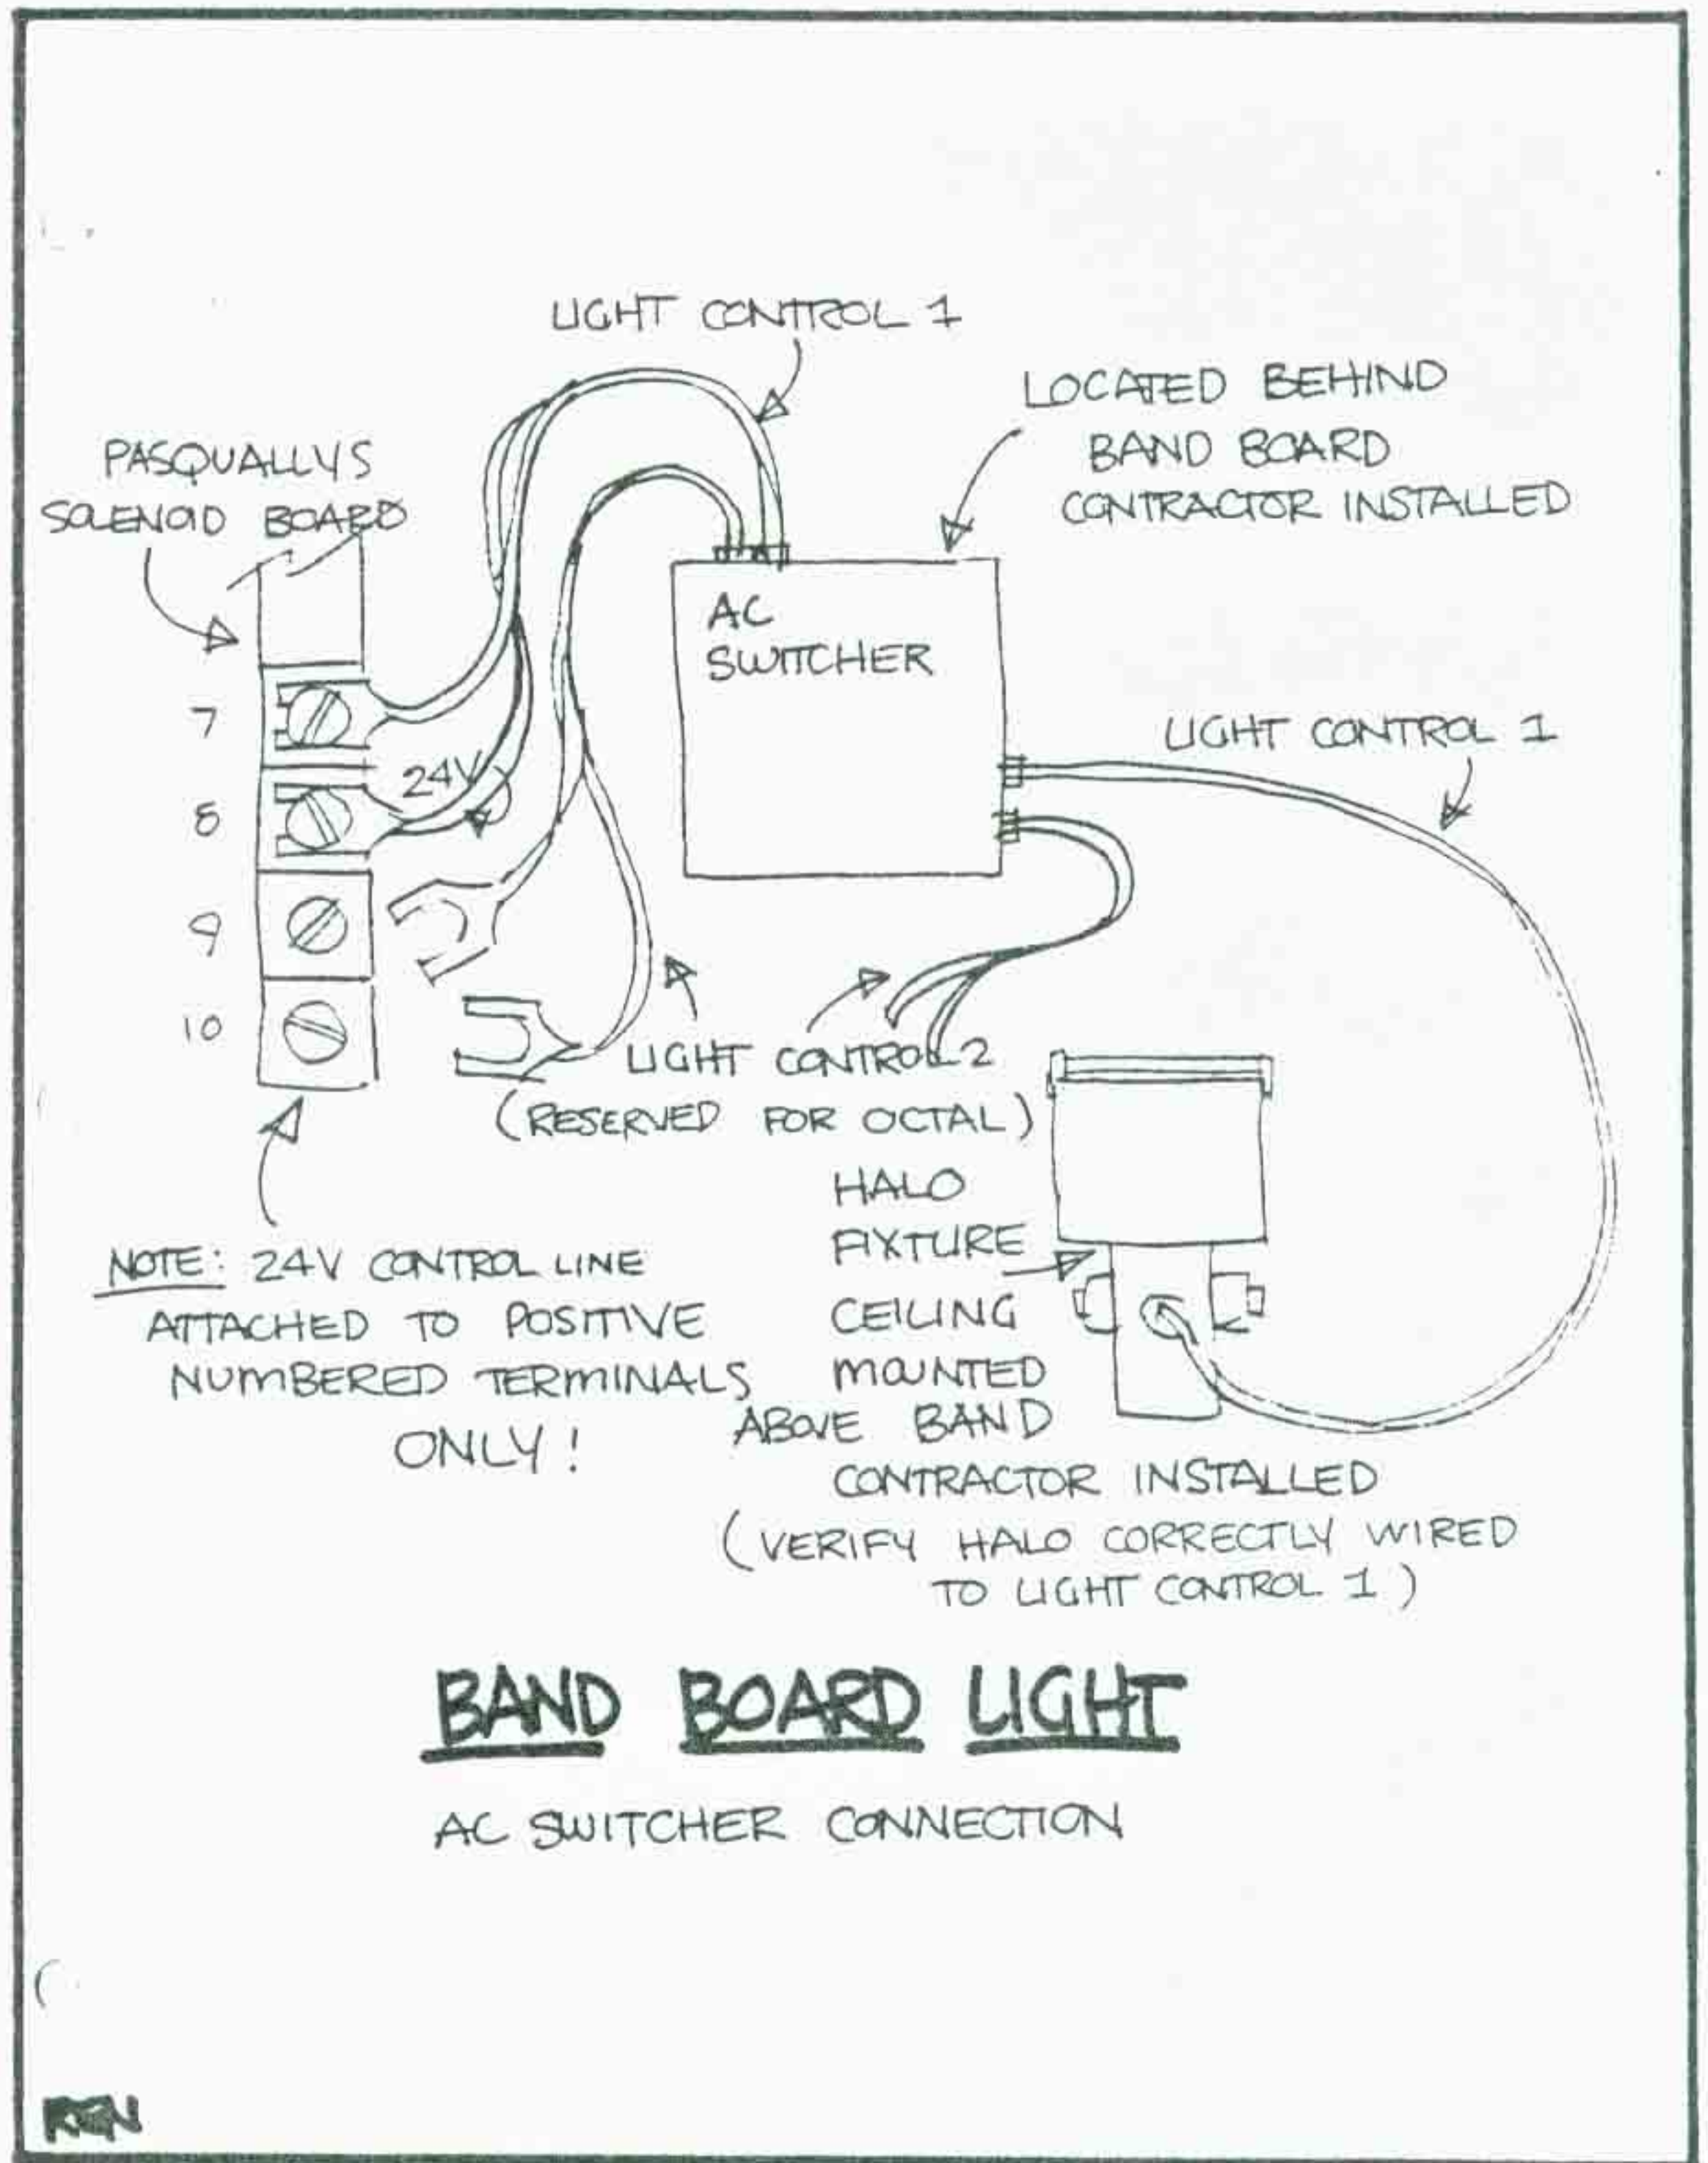

# STAGE LIGHT CONNECTION

		CHUCK 8A	JASP 84	PASQ 88	MUNCH 8C	GUEST 90	DRUMS 94	FRONT LIGHTS 9A	BACK LIGHTS 9C	A0
TB1	3-2	A	A	A	A	A	F	#	#	
		MOUTH	MOUTH	MOUTH	MOUTH	MOUTH	LYMB	CLAP	GUEST	
	3,4	U	H	D	H	D	E	A	U	
		HD LFT	HD LFT	HD LFT	HD LFT	HD LFT	TRIANG	INTRO	CEC BACK	
	5,6	C	G	C	L	C	H	E	C	
		HD RT	HD RT	HD RT	HD RT	HD RT	SHARG	PASQ SFT	CEC BACK	
	7,8	P	P	V	D	P	A	F	B	
		HD TILT	HD TILT	HANDS	LFT ARM	HD TILT	BASS	PASQ	CEC BACK	
9,10	I	I	I	I	F	J	S	D		
	EYES RT	EYES RT	EYES RT	EYES RT	EYES RT	TAMB	GUEST SFT	JASPER BACK		
11,12	N	N	N	N	N	L	T	I		
	EYE LIDS	EYE LIDS	EYE LIDS	EYE LIDS	EYE LIDS	LRG BLOCK	GUEST	LEFT RED FLOOD		
13,14	T	T	H	T	X	I	C	J		
	HAND	HAND	MUSTSCH	RT ARM	HAND	SMALL BLOCK	CEC SFT	LEFT YEL FLOOD		
15,16	V	V	T	V	L	B	F	K		
	EYES LFT	EYES LFT	EYES LFT	EYES LFT	EYES LFT	BELL	CEC	LEFT BLUE FLD		
TB2	BIRDS 82	86	8A	8E	92	96	9A	9E	A2	
	1,2	A	B	G	G	#	A	L	V	
		MOUTH	—	DOORS	DOORS	DIMMER	MED PAN	CEC SFT	CENT RED FLOOD	
	3,4	D	C	B	B	+X	F	G	X	
		ROCK	—	STARS L	—	USA	LRG PAN	JASPER SFT	CENT YEL FLOOD	
	5,6	C	D	E	C	+X	I	R	L	
		CHASE ON	—	STAR R	—	CONFED	SMALL PAN	JASPER	CENT BLUE FLOOD	
	7,8	P	E	F	E	+X	M	M	W	
CHASE LEFT		—	LIGHT OCTAL	—	STATE	CLAP RAZZ	MUNCH SFT	RIGHT RED FLOOD		
9,10	I	F	J	F	+X	K	N	V		
	CHASE RIGHT	—	SMALL BACK	—	CHUCK	CLAP	MUNCH	RIGHT YEL FLOOD		
11,12	B	J	K	J	+X	L	G	]		
	—	—	—	—	ITALIAN	ELEPH	BIRDS SFT	RIGHT BLUE FLD		
13,14	—	—	—	—	—	—	H	N		
	—	—	—	—	—	—	BIRDS	SPARE		
15,16	—	—	—	—	—	—	—	A		
	—	—	—	—	—	—	SPARE	SPARE		
STAGE ROSETTA STONE										
3-24-87 RWS										
VERSION B										

SECTION 2.2

DESCRIPTION:

Harmony Howlette II  
"Harmony's Hoedown"

SECTION 2.2.1

DESCRIPTION:

Set Installation



HARMAN HAWLETTE II


SET  
INSTALLATION

INSTRUCTIONS


© 1981 PTT

030-0015-01


2.2.1/1

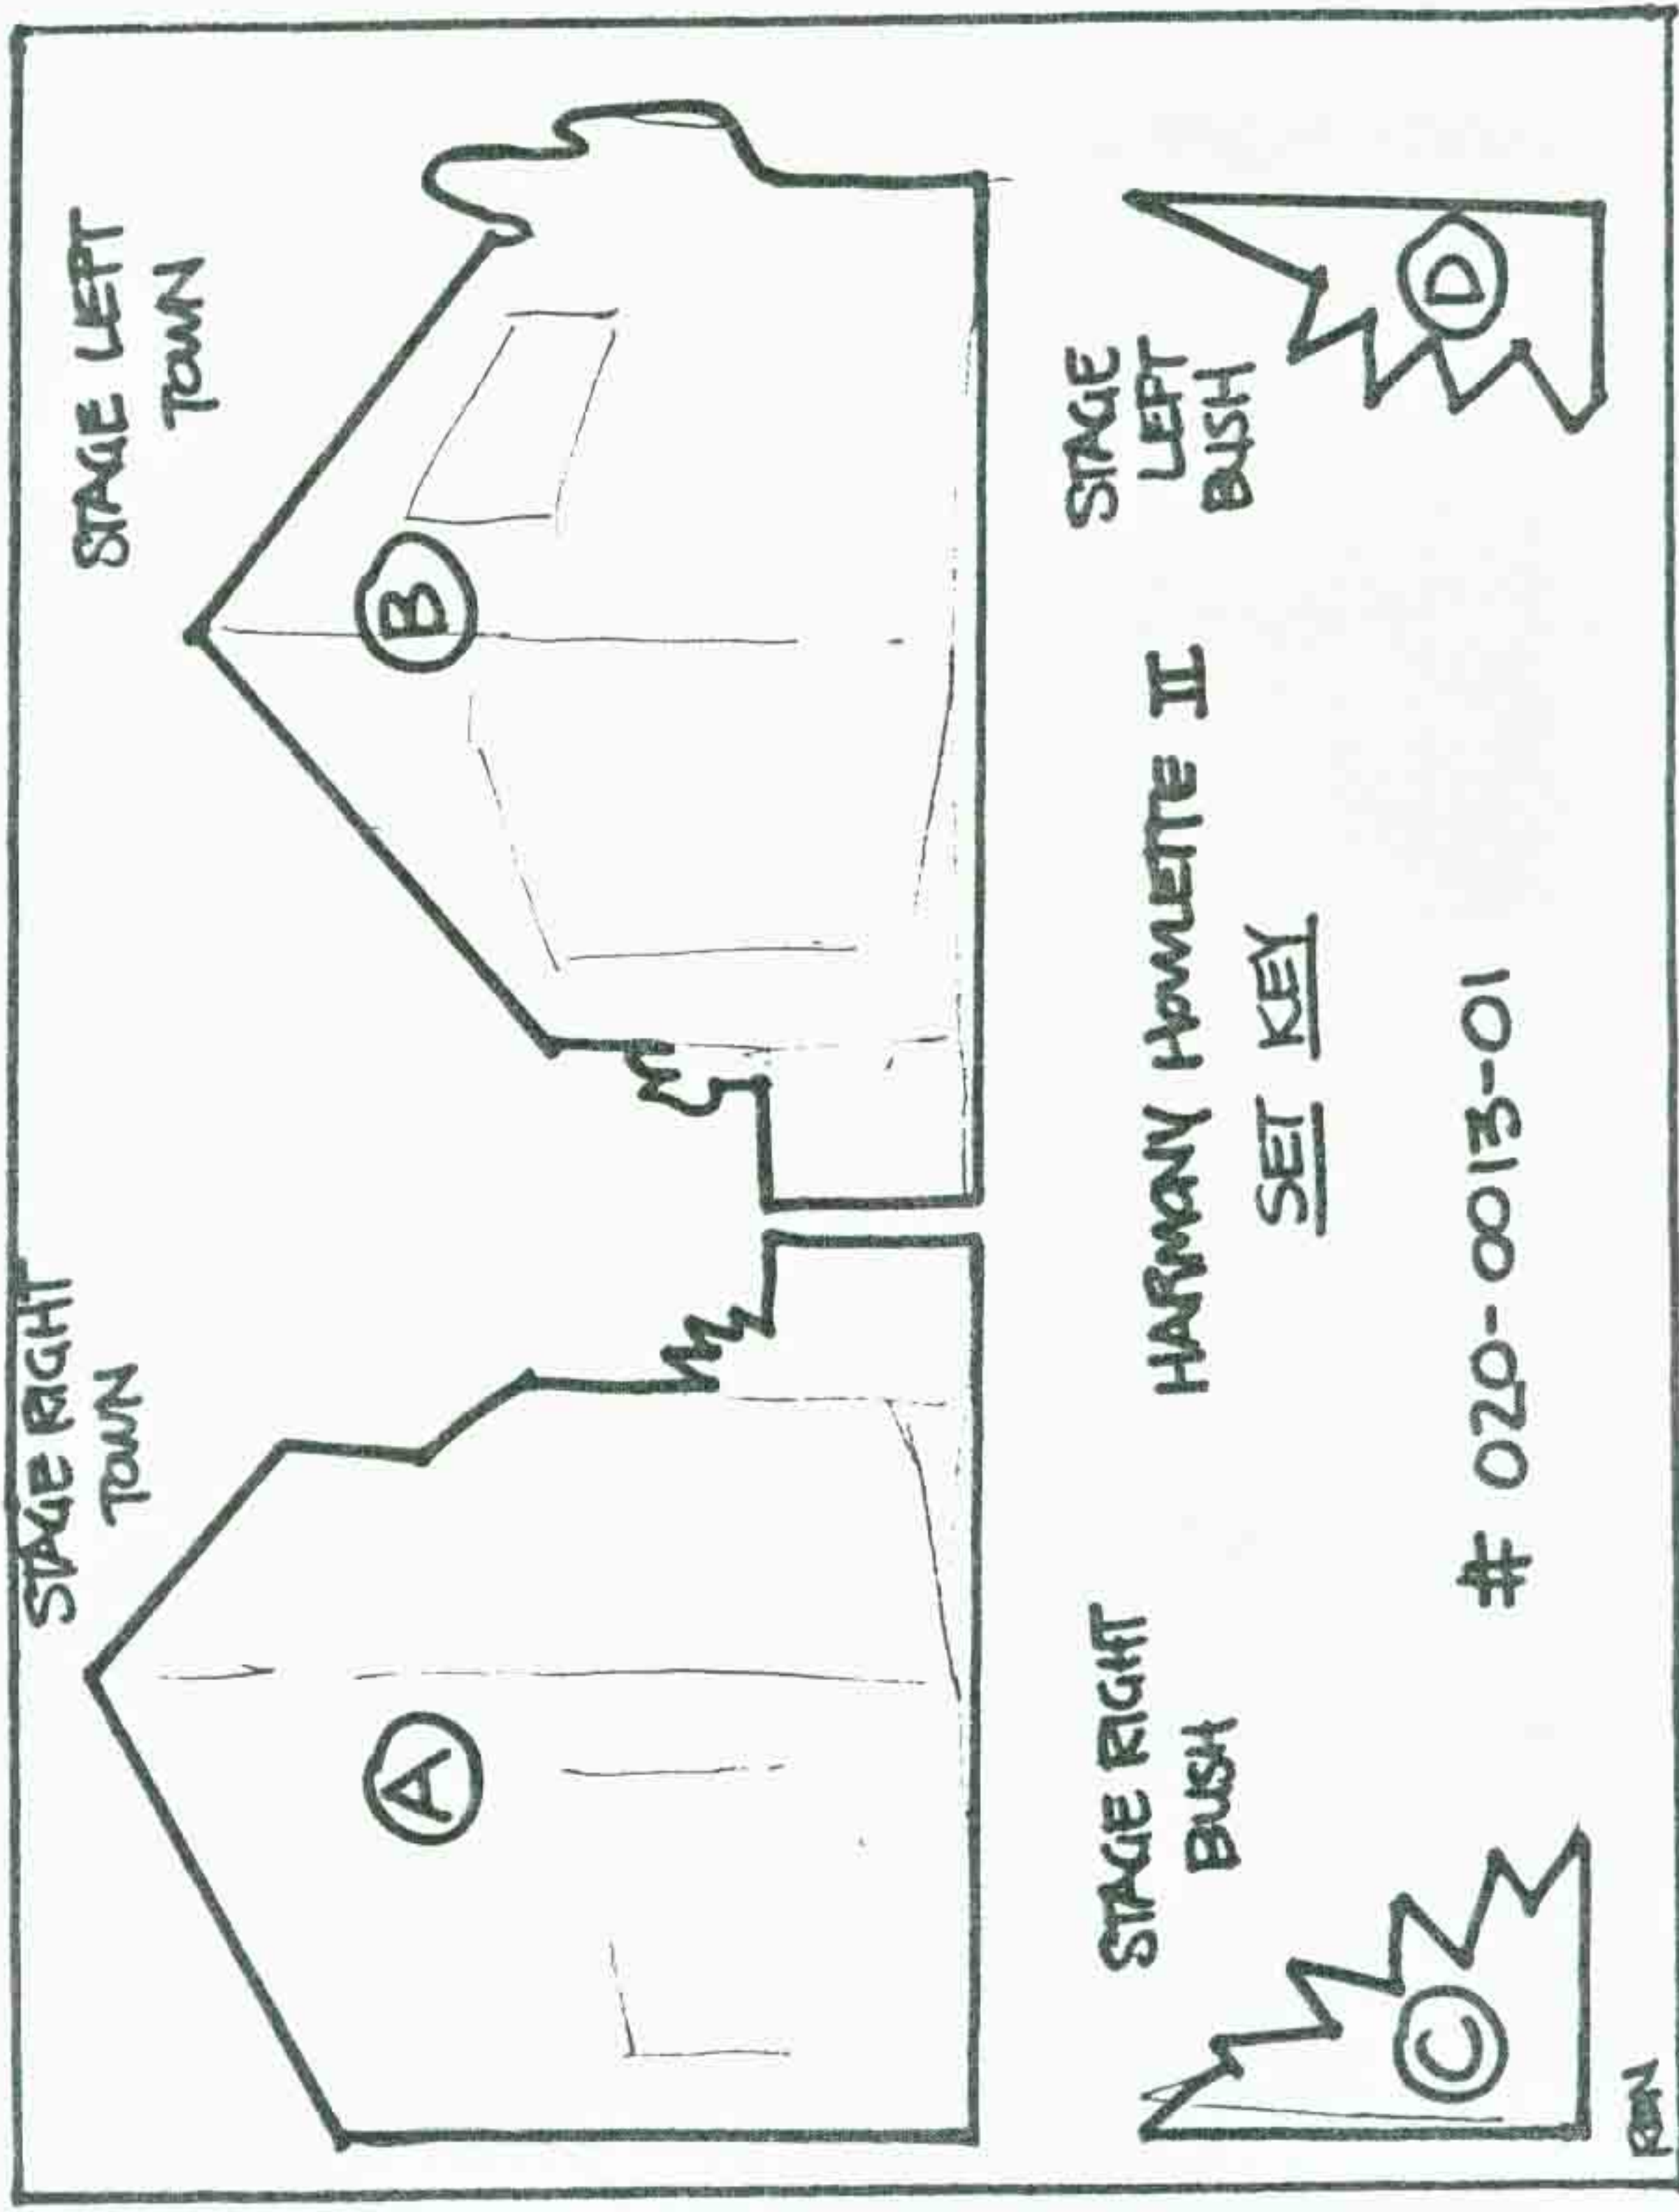

2.2.1/2

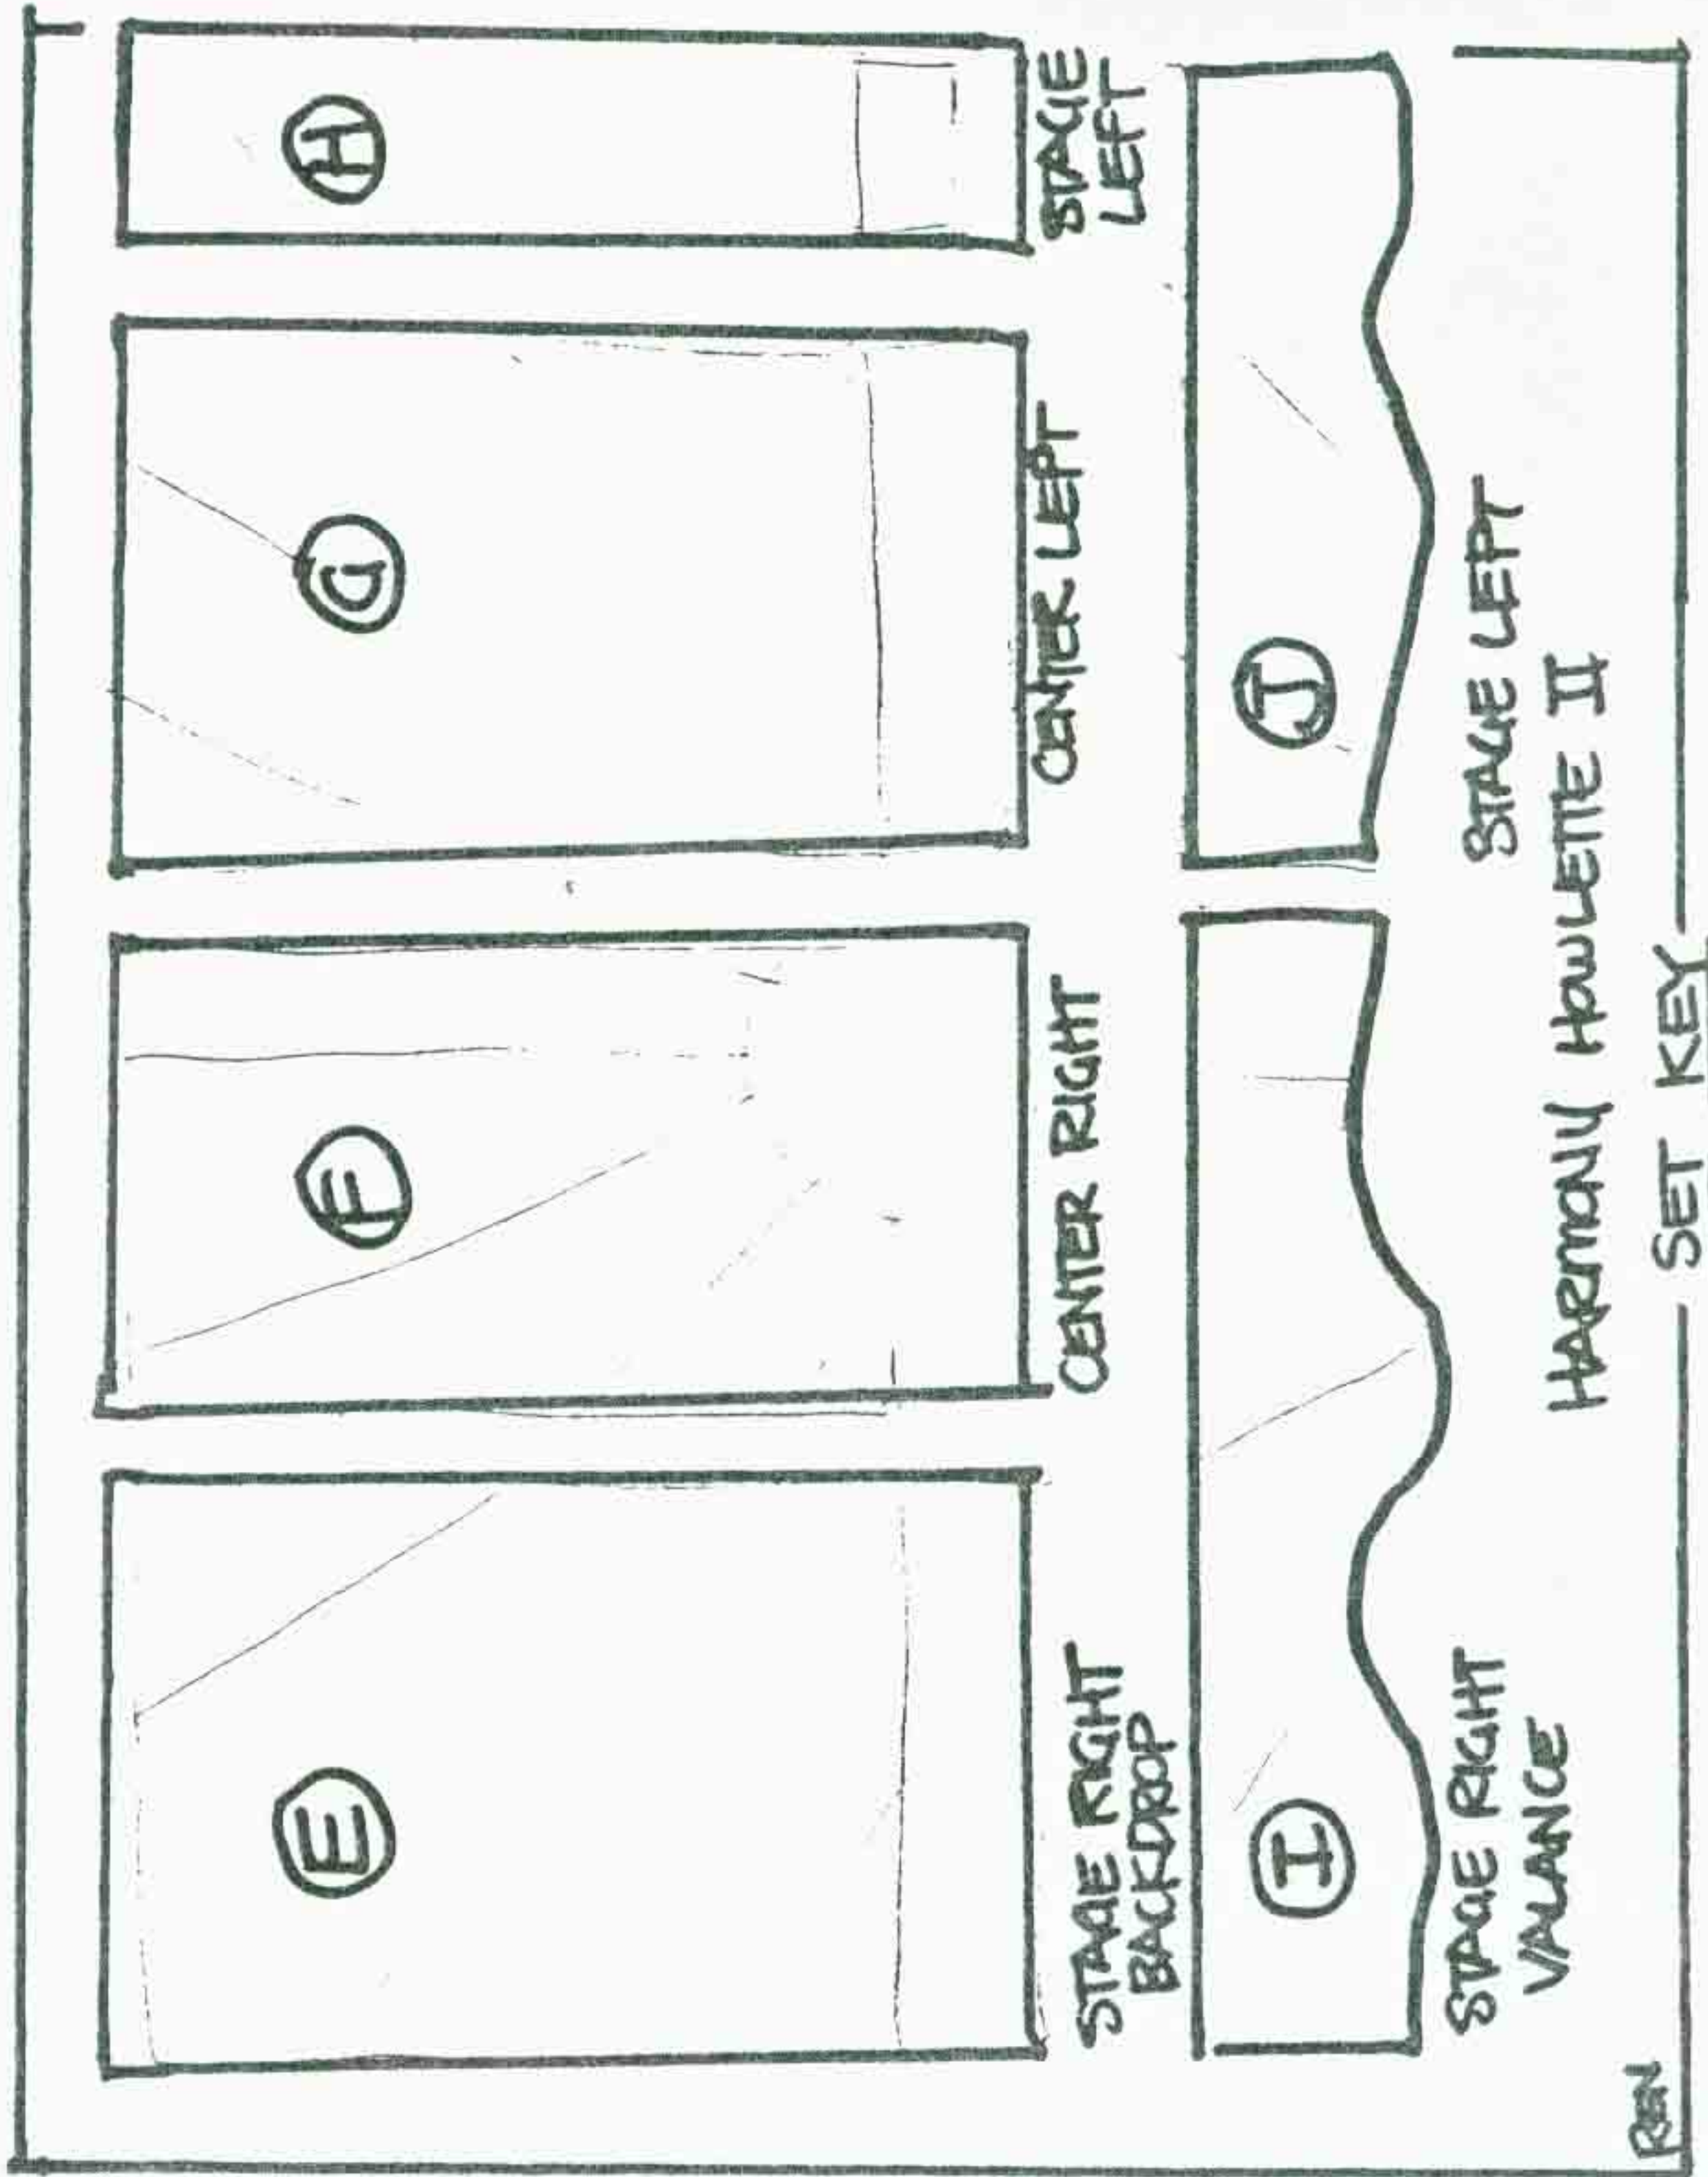

2.2.1/3

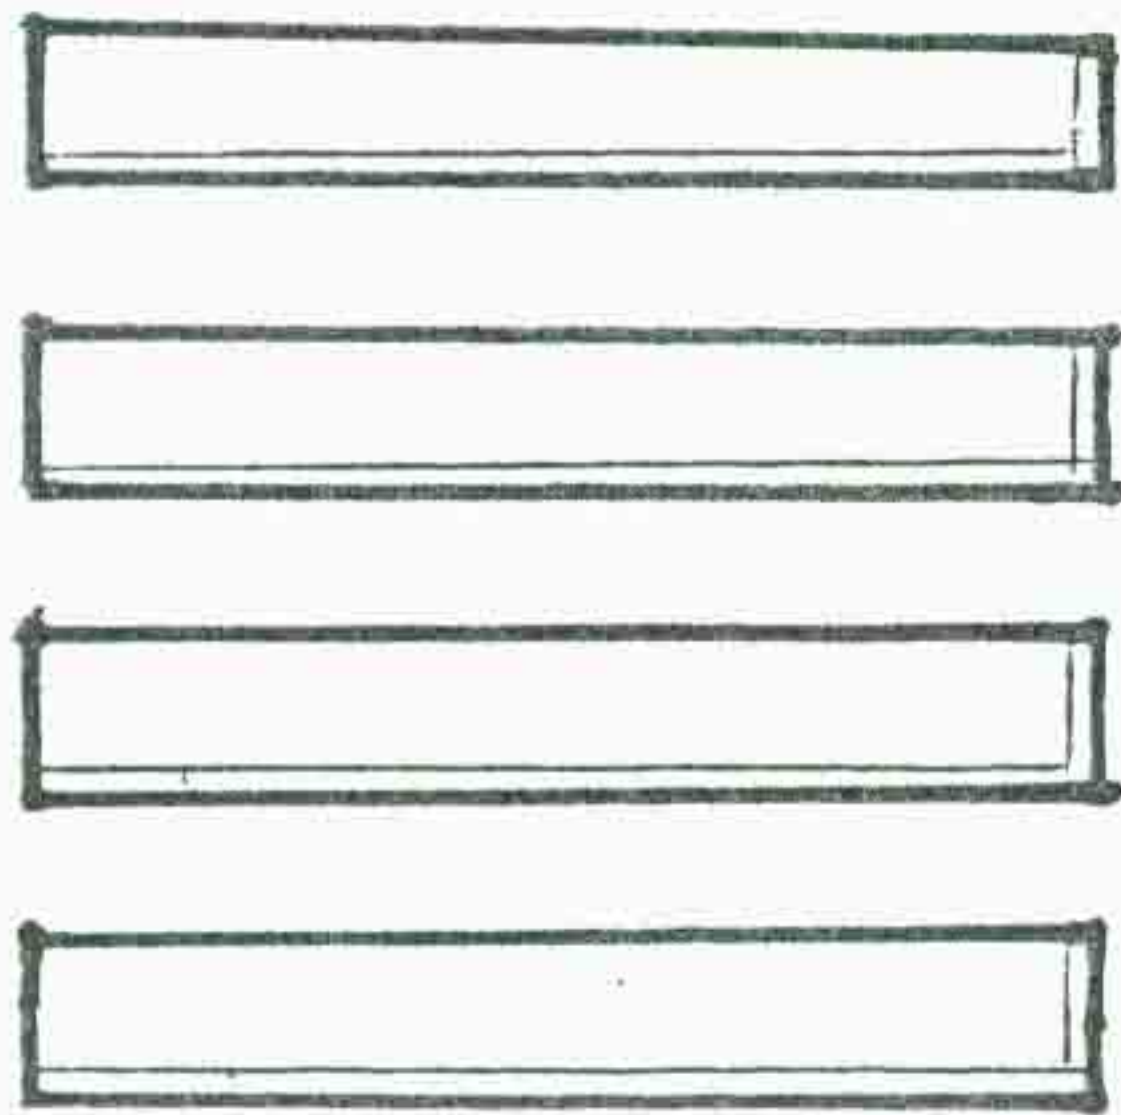


4 36" ALUMINUM

'L' BRACKETS

2 FOR (A)

2 FOR (B)

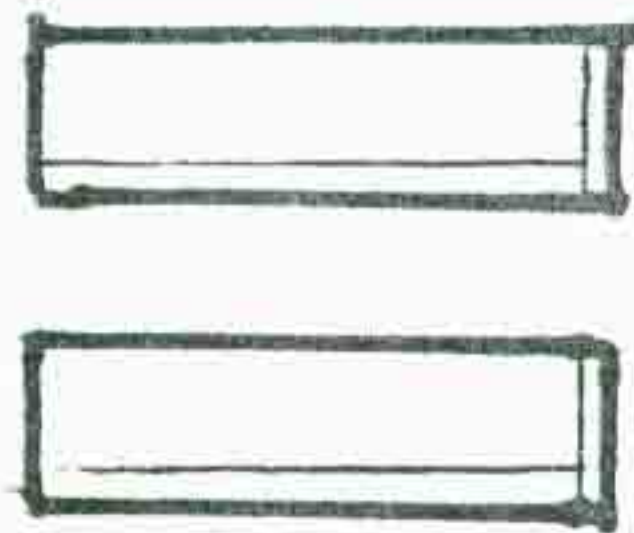

2 14" ALUMINUM

'L' BRACKETS

1 FOR (C)


1 FOR (D)

HARMONY HAMLETTE II

REN

SET KEY



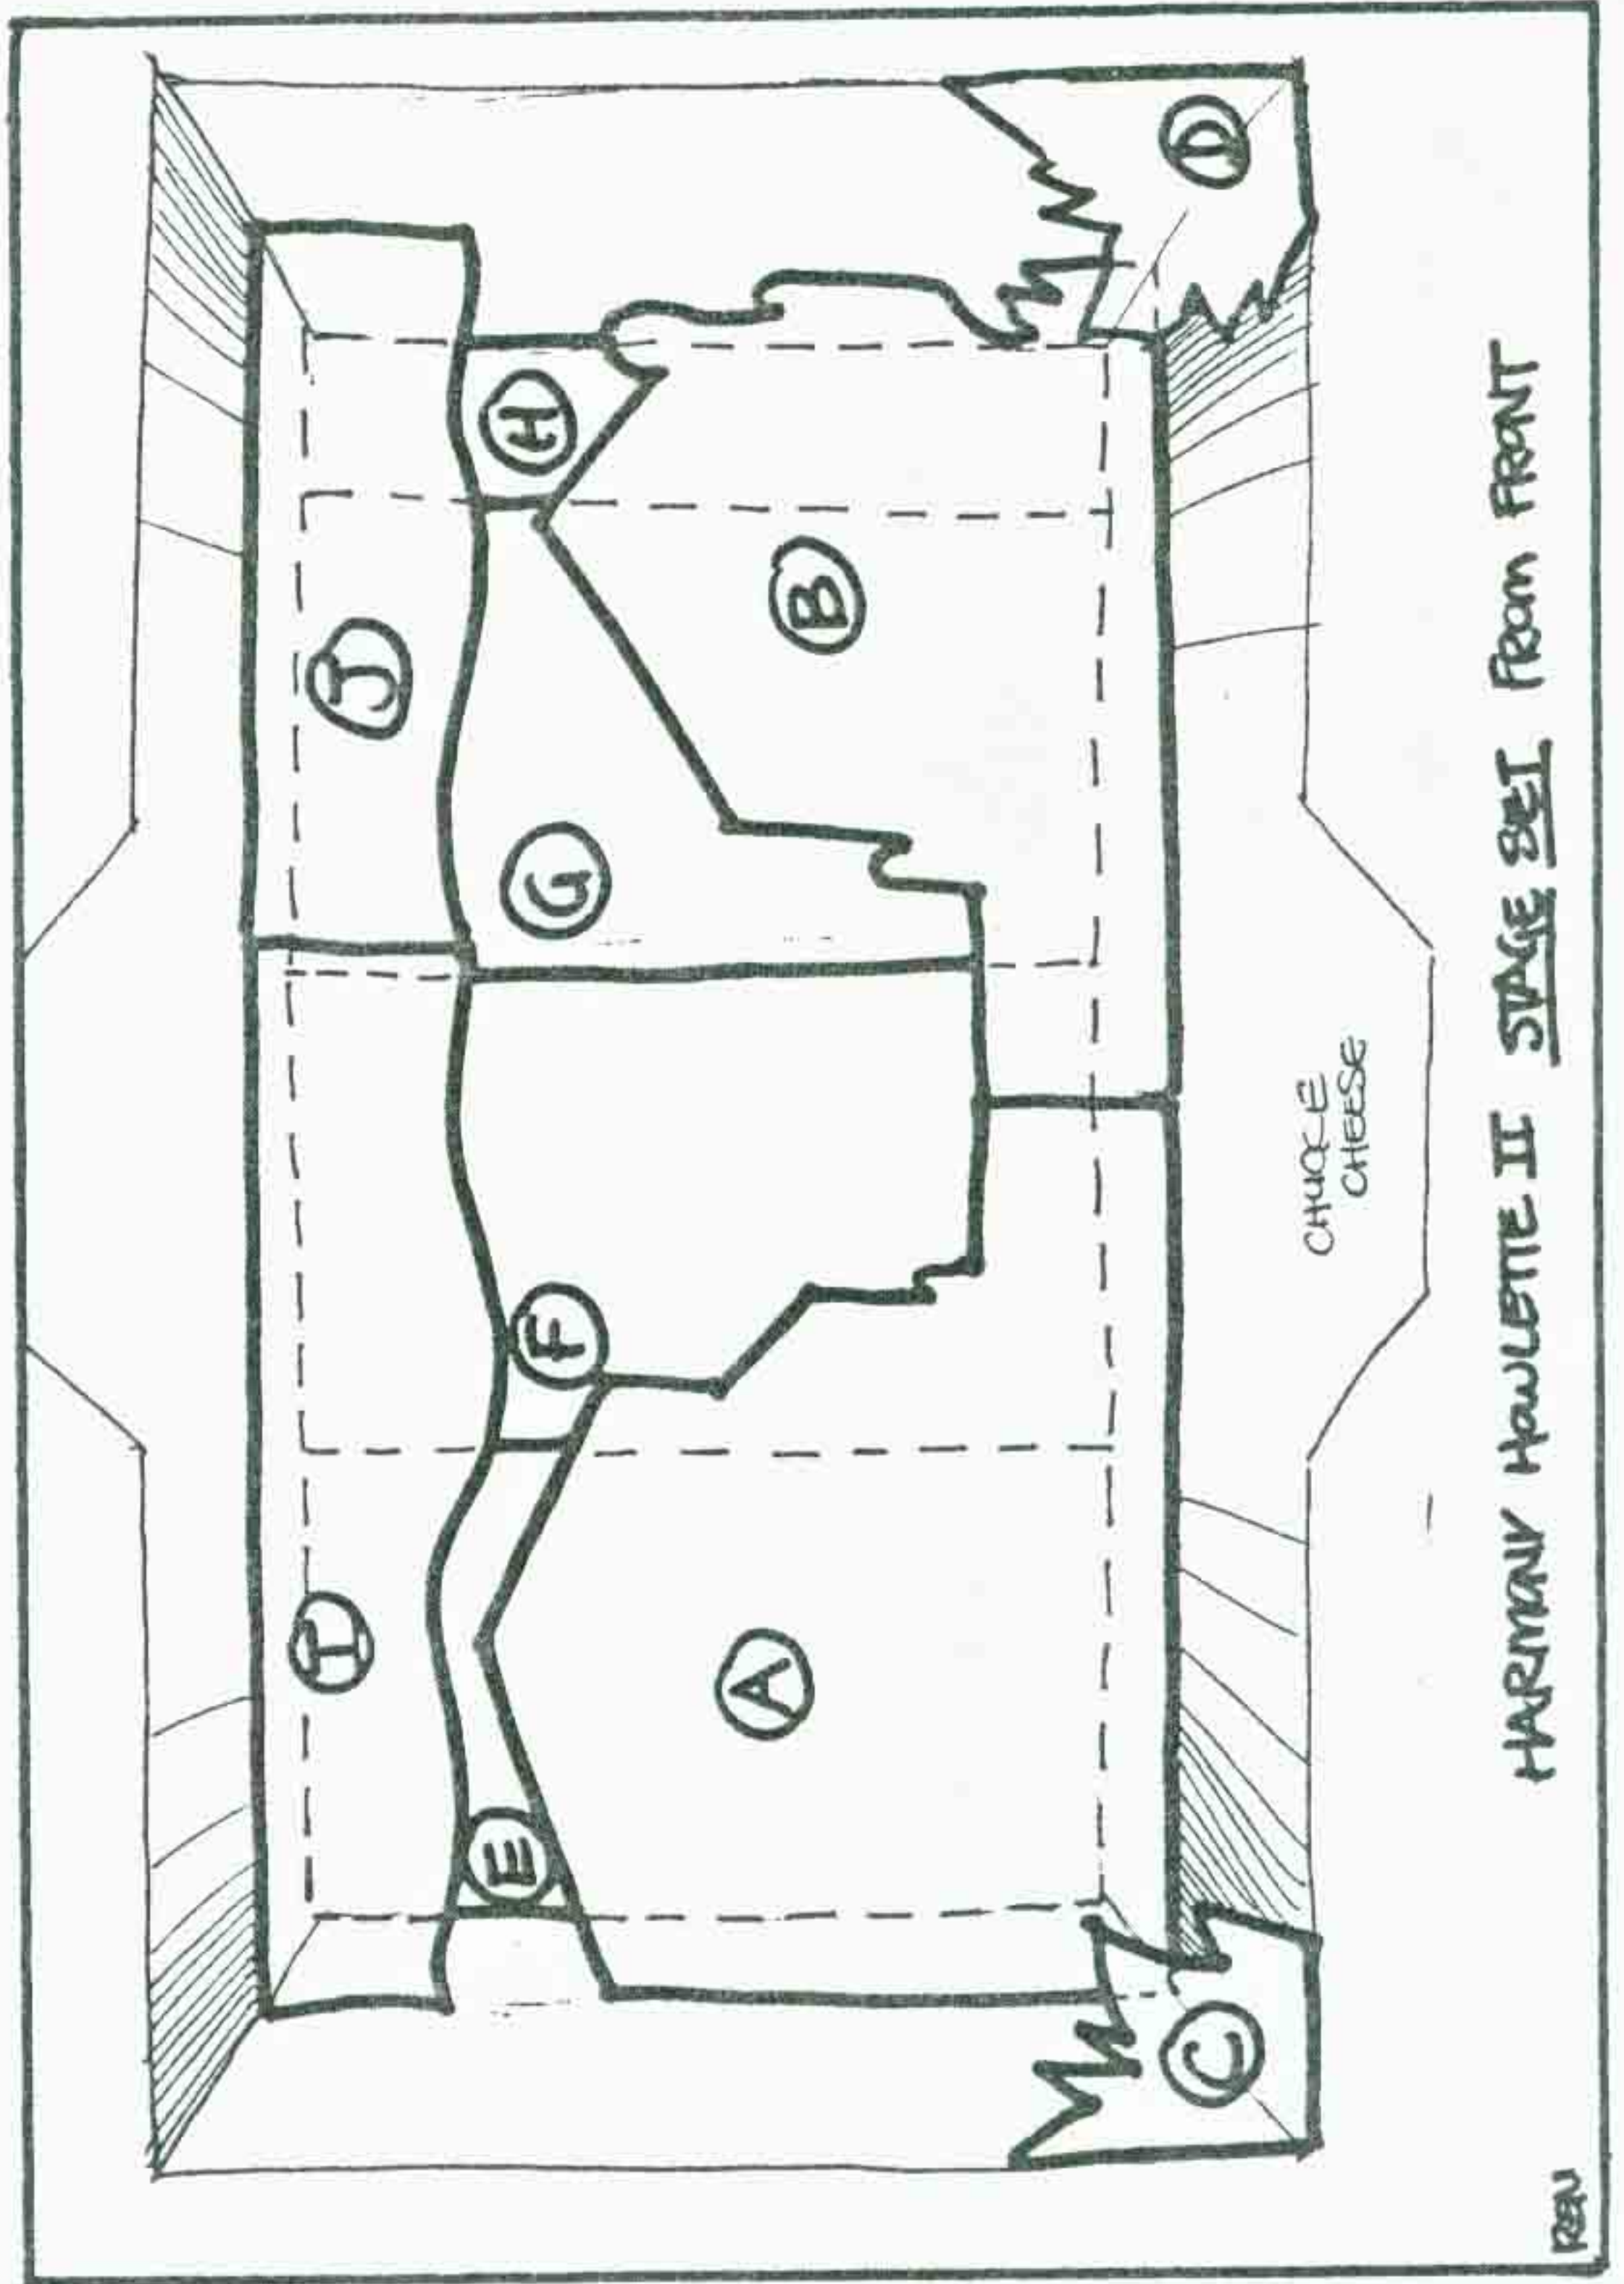


2.2.1/5

## INSTALLING BACKFLATS

PART E, F, G, H (refer to Set Key)

Staple the flats to the header at the top of the back wall of the stage. Make sure the design on all 4 panels lines up & that the seams

(E) between the panels are not obvious.

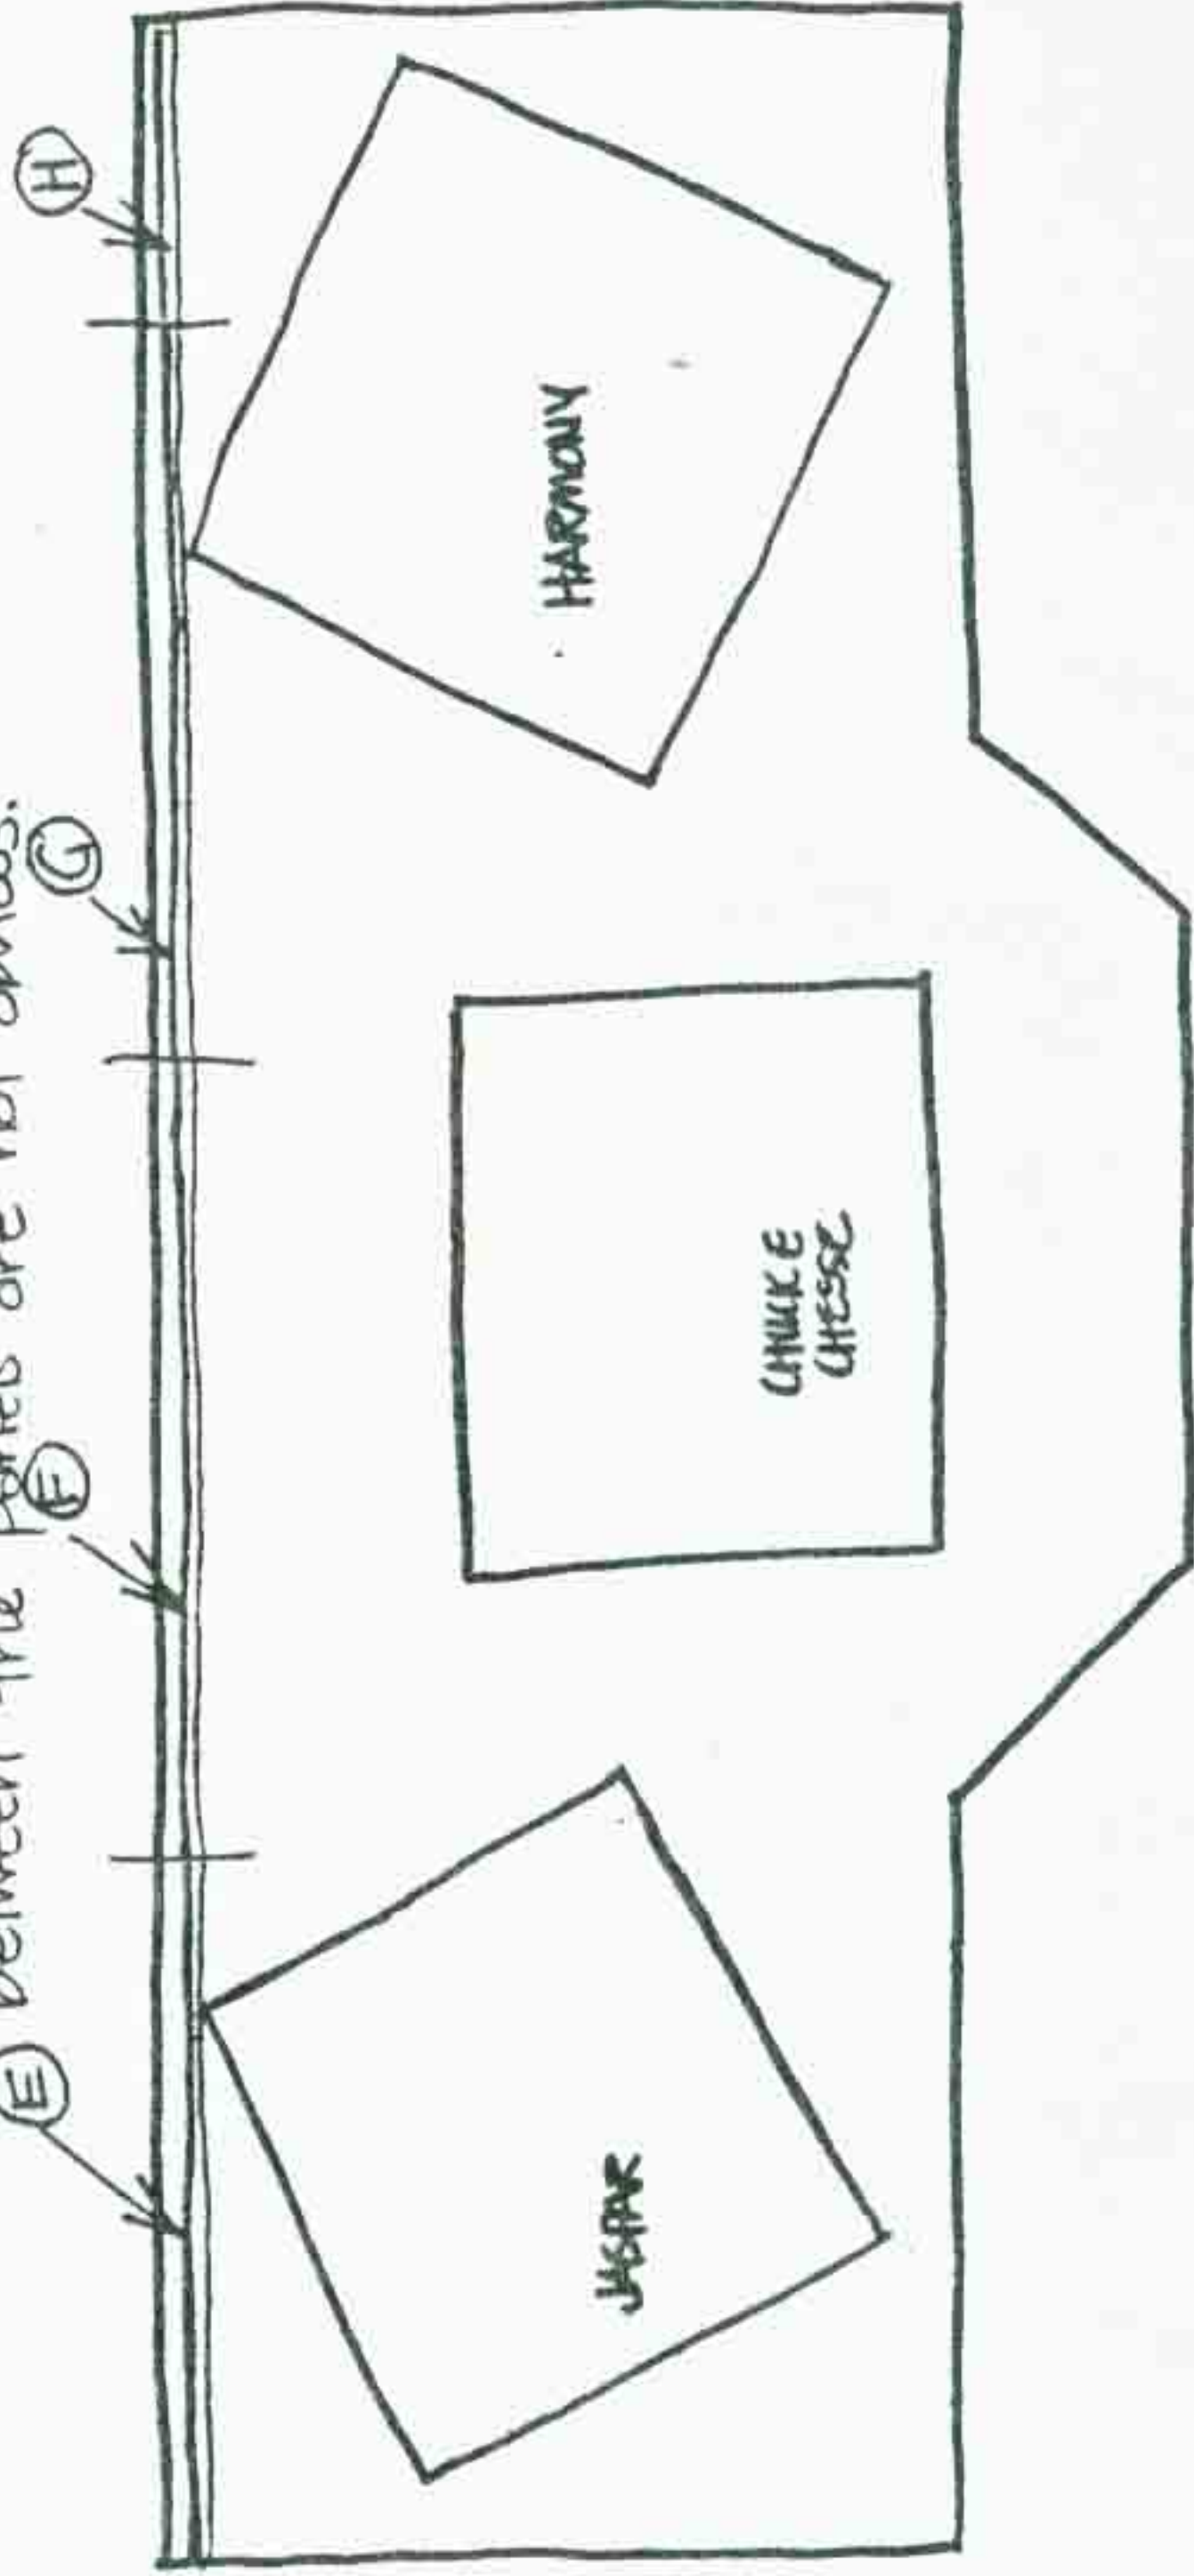


Front

★ NOTE: It may be necessary to trim Panel (H) slightly for width, or extend it behind PASQUALI'S drapes. The same applies to the width of the valance.

# WIRING THE LIGHTS

mini Light String

**\* USE THE LIGHTS FROM THE HHI INSTALLATION FOR THIS SET AS WELL.**

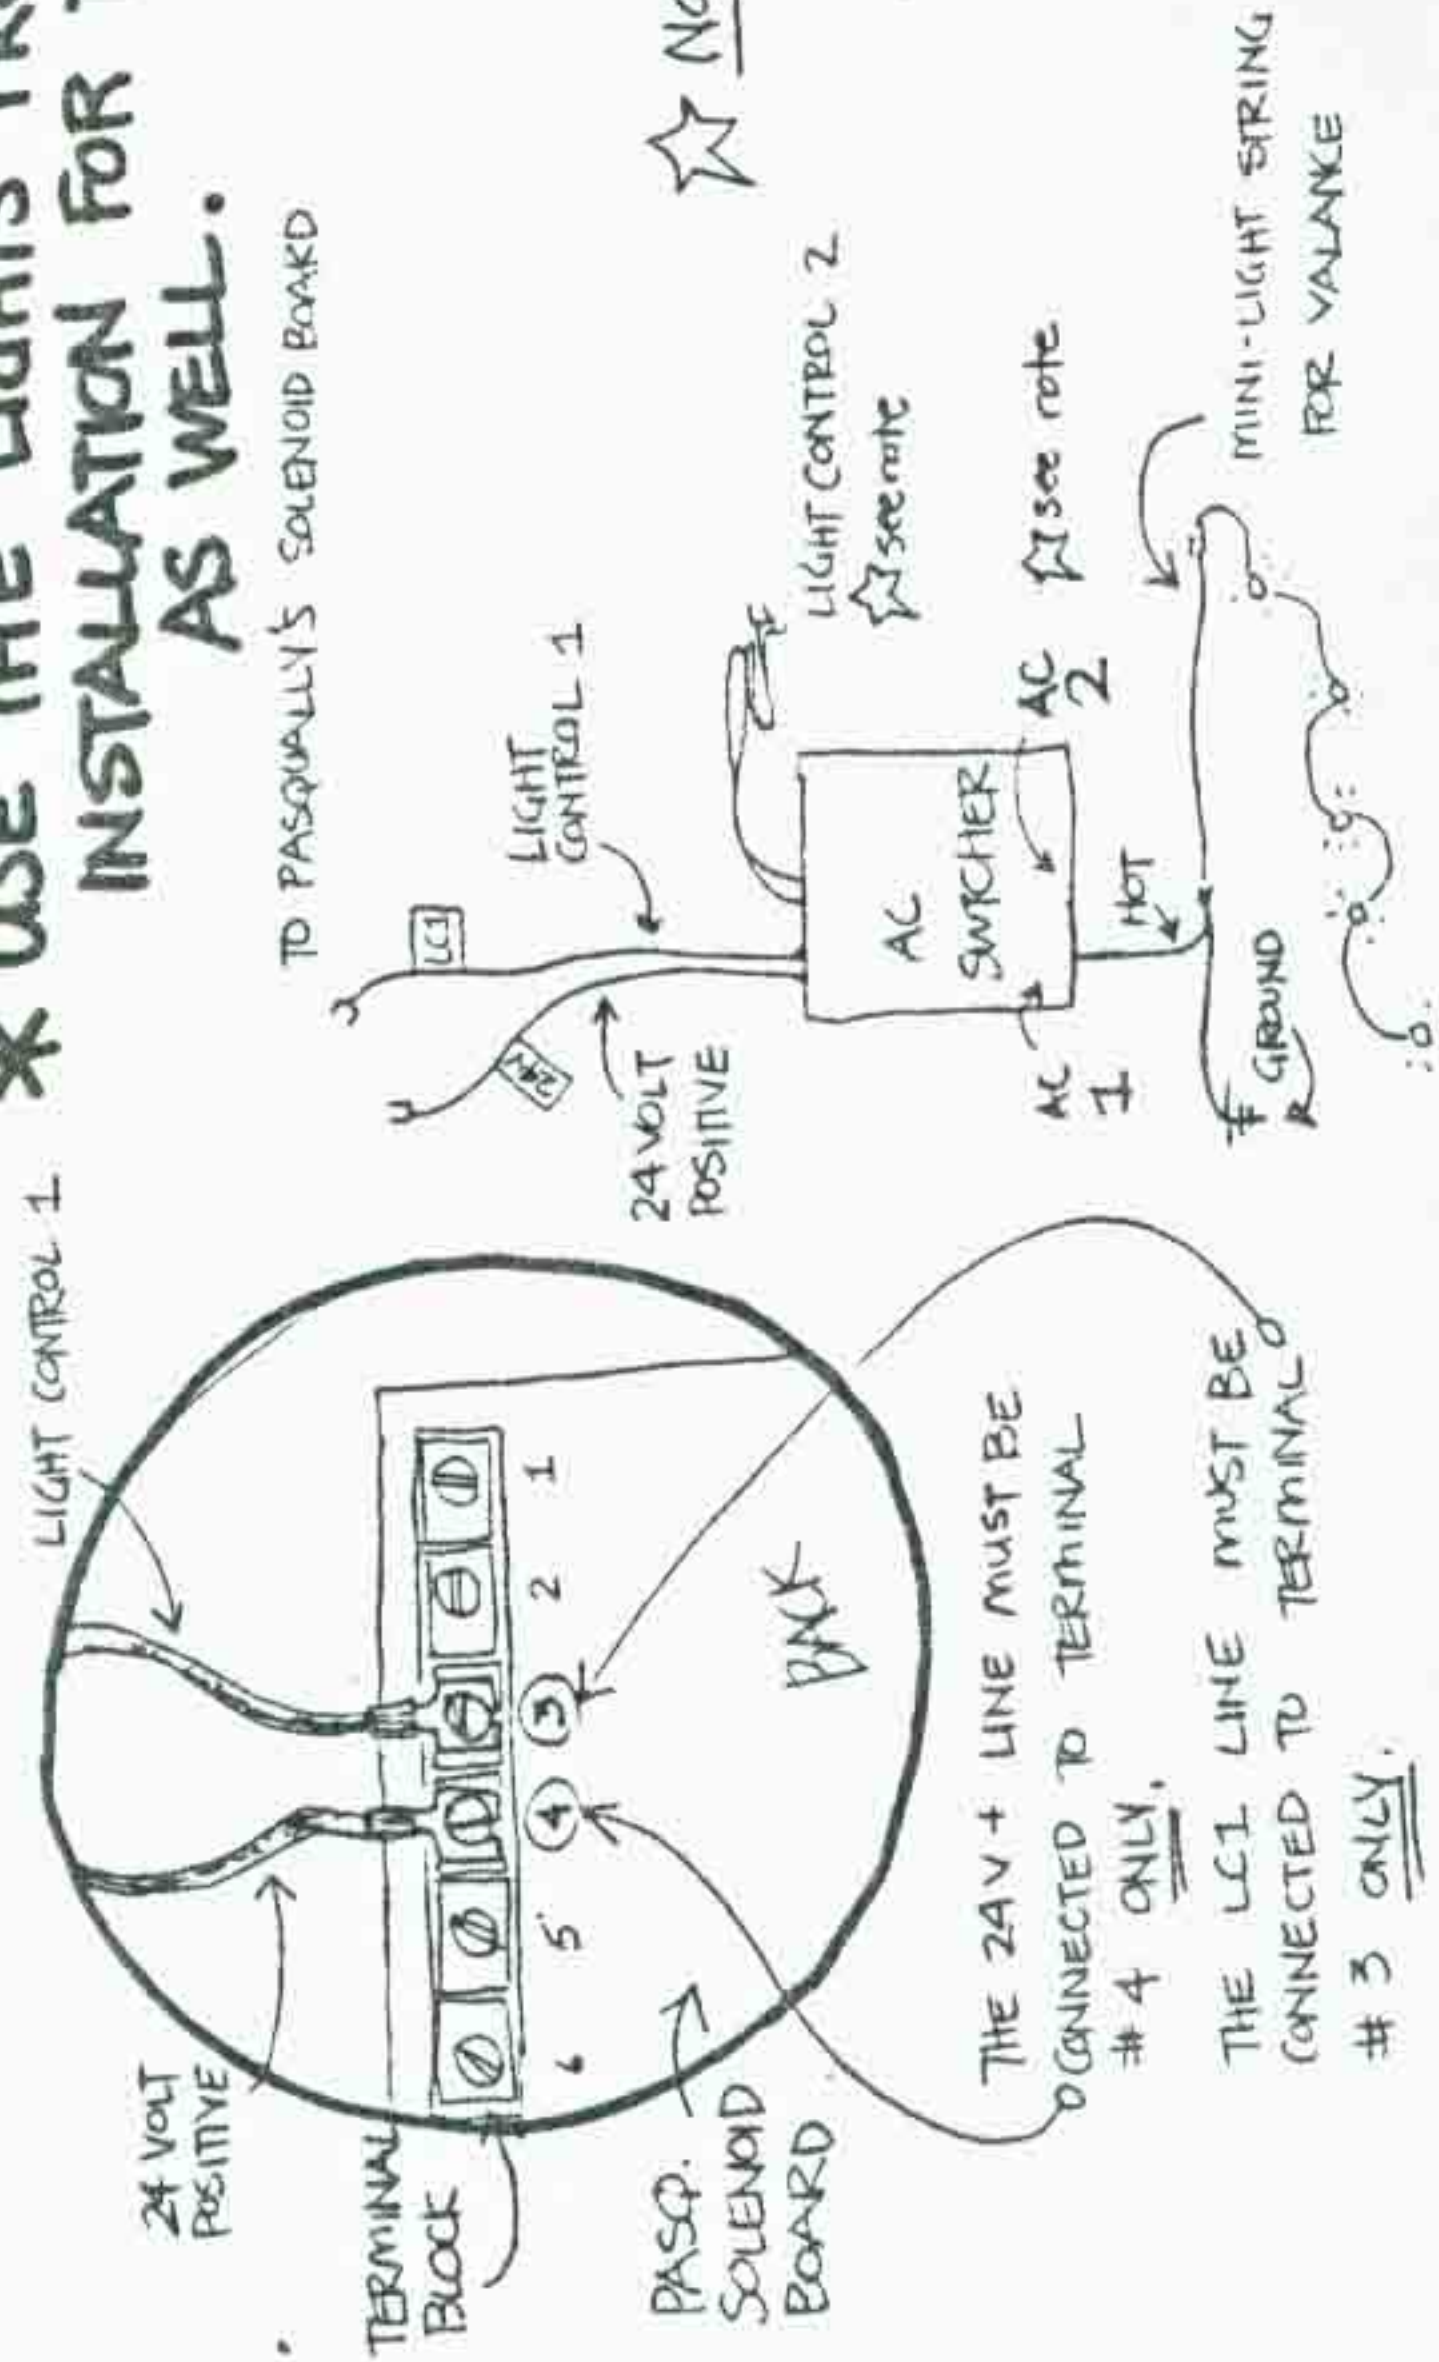


Find the existing AC SWITCHER near the back wall behind PASQUALLY. Connect the lines marked 24V+ & LC1 from the switcher to the terminals on the back of PASQUALLY'S solenoid board. The 24V+ line is attached to terminal 4. The LC1 line is attached to terminal 3. Attach one wire from the mini-light string to the HOT AC on the switcher controlled by Light Control 1. The ground is wired common thru the switcher.

NOTE: In some stores, AC Switcher will be terminated in a Duplex outlet. Plug Mini-Light string into appropriate receptacle. Light Control attachment as above.

## INSTALLING VALANCE

PARTS I & J (refer to Set Key)  
Mini-Light String

The valance has 50 small crosses cut in it from the back. These are for the 50 lights on the Mini-Light String. Starting from JASPARS side of the stage, that is your left when facing the stage, gently press the lights, one by one, thru the holes from the back of the valance.

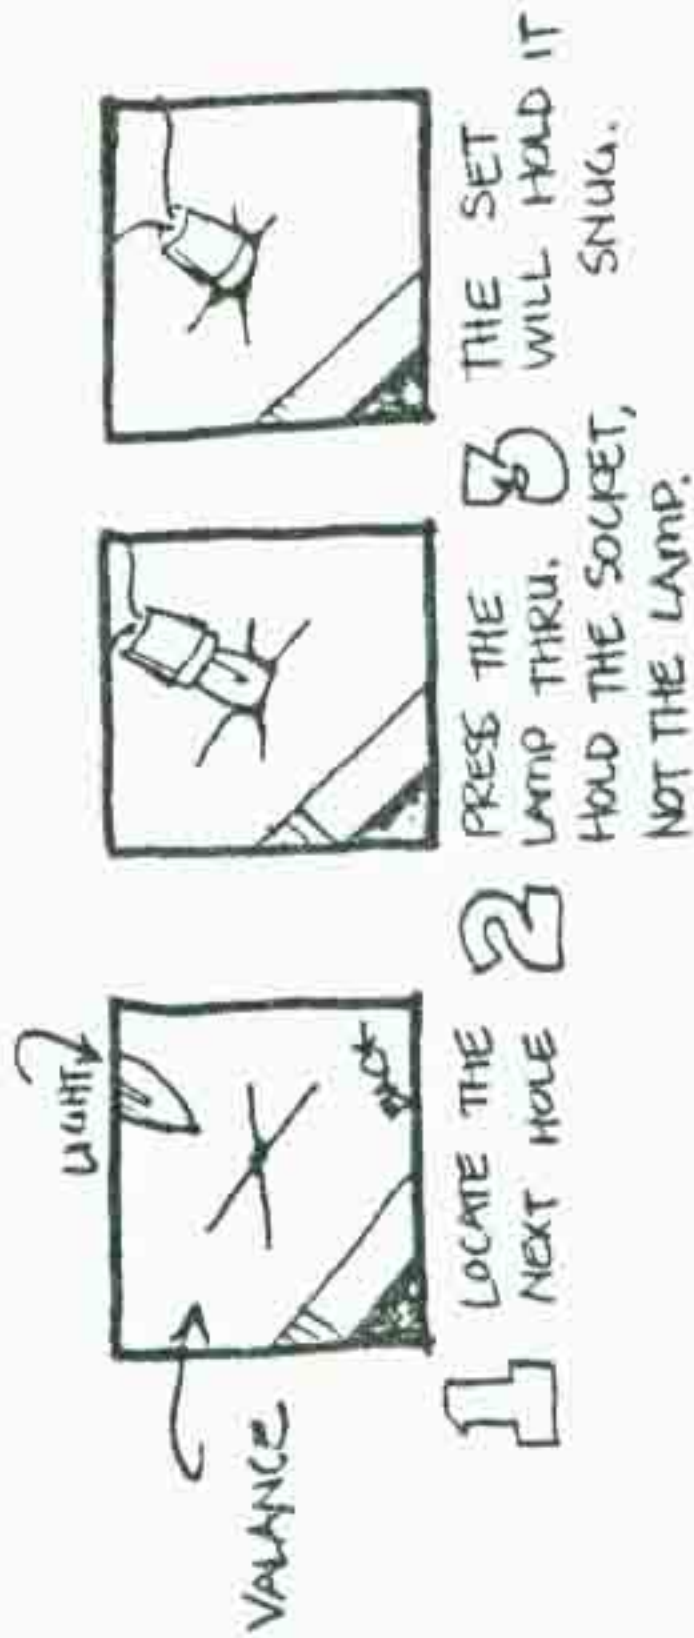

★ NOTE: In order to hang the valance, you might find it helpful to tape I & J together. If you do, be certain that the design lines up on both panels.


You might also find it easier to first hang the valance and then install the lights. If so, go the next page & then back to this step.

This might be a two person job depending on your specific installation.


# INSTALLING VALANCE (cont)

## Long Tie-Wraps

There will be about 6 T-Bar locations across the ceiling. About 18" forward of the Back wall, ahead of Dichromic lights, loop a Long Tie-wrap over the T-Bar & close it loosely. You'll have to push the tiles supported by the T-bar out of the way. Be sure to replace them properly. Repeat for all 6 locations. (see below)

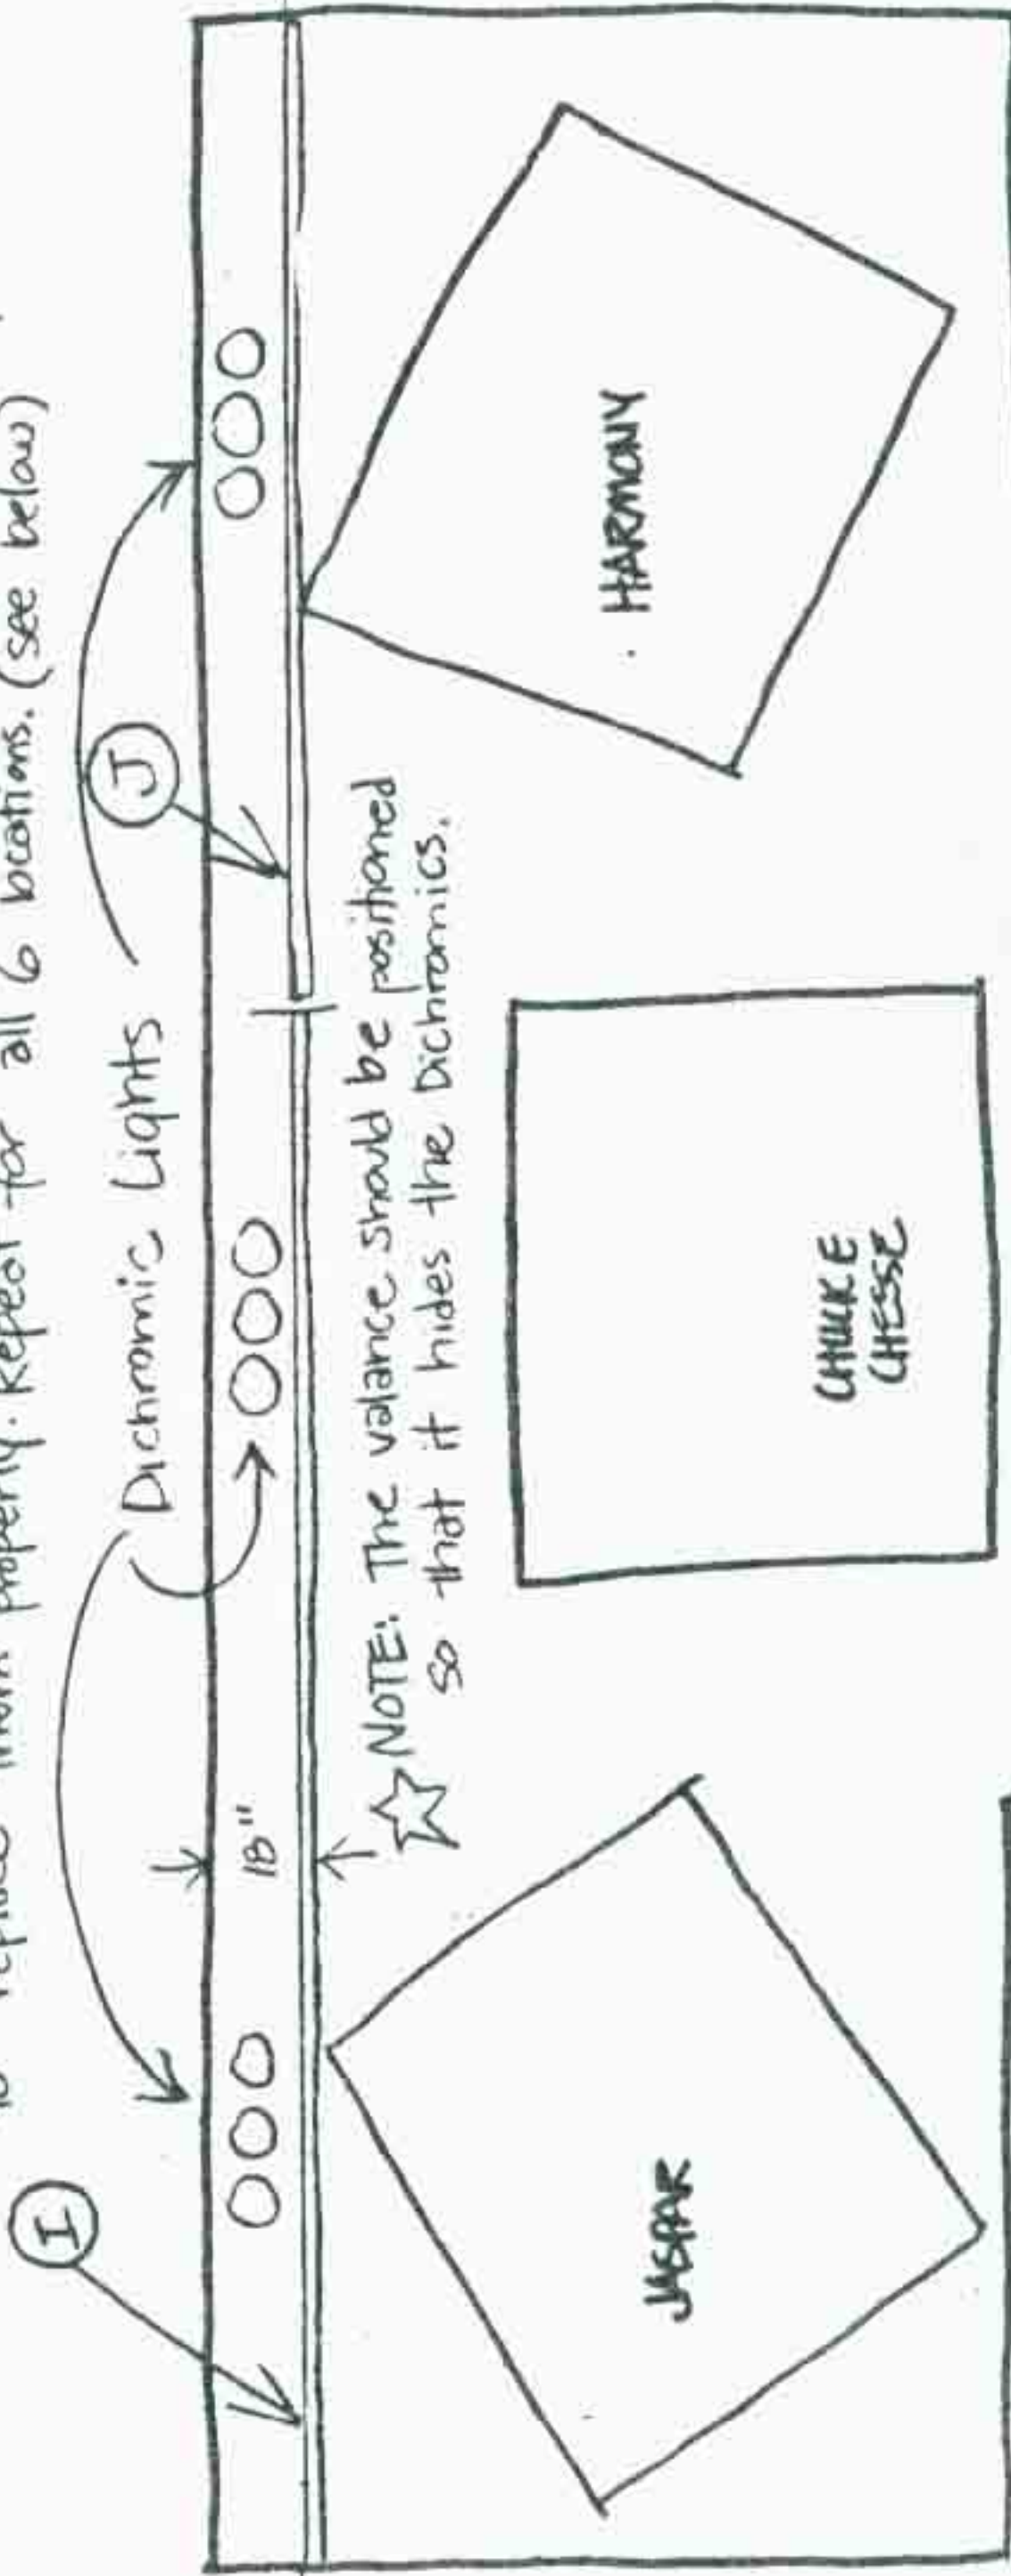


NOTE: The valance should be positioned so that it hides the Dichromics.

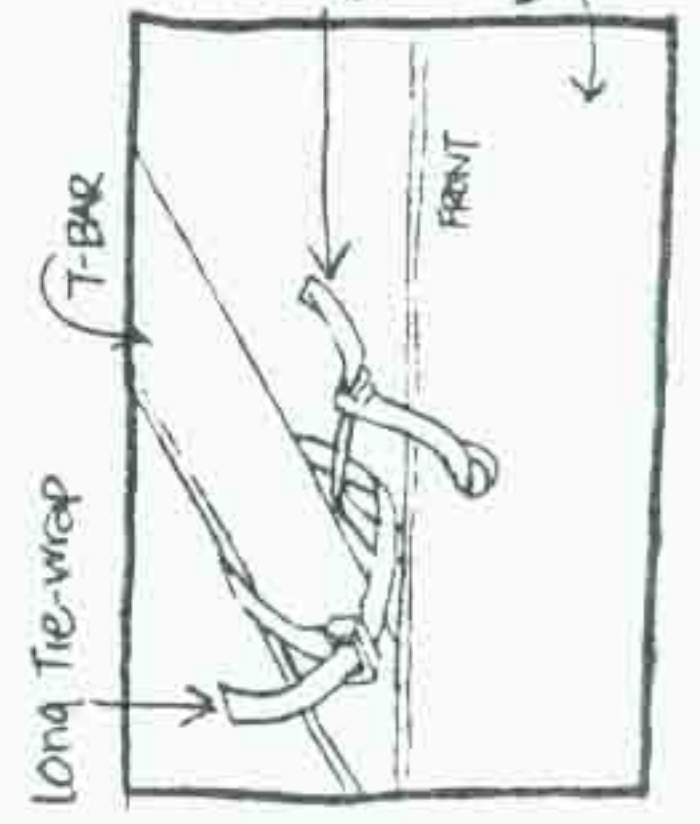

(from above) Then, hold the valance in place & mark the locations of the looped tie-wraps. With a razor blade, make a small cut in the top edge of the valance at each of the locations. Loop the long tie-wrap thru the hole in the set to the long tie-wrap. Pull both tight.

# INSTALLING VALANCE

IN SOME INSTALLATIONS THERE IS A BAR WITH A CURTAIN ABOVE IT, HIDING THE BACK LIGHTS. IN THIS CASE, USE THE BAR TO HANG THE VALANCE AS DESCRIBED, MAKING SURE THE DRAPE OVERLAPS THE VALANCE.

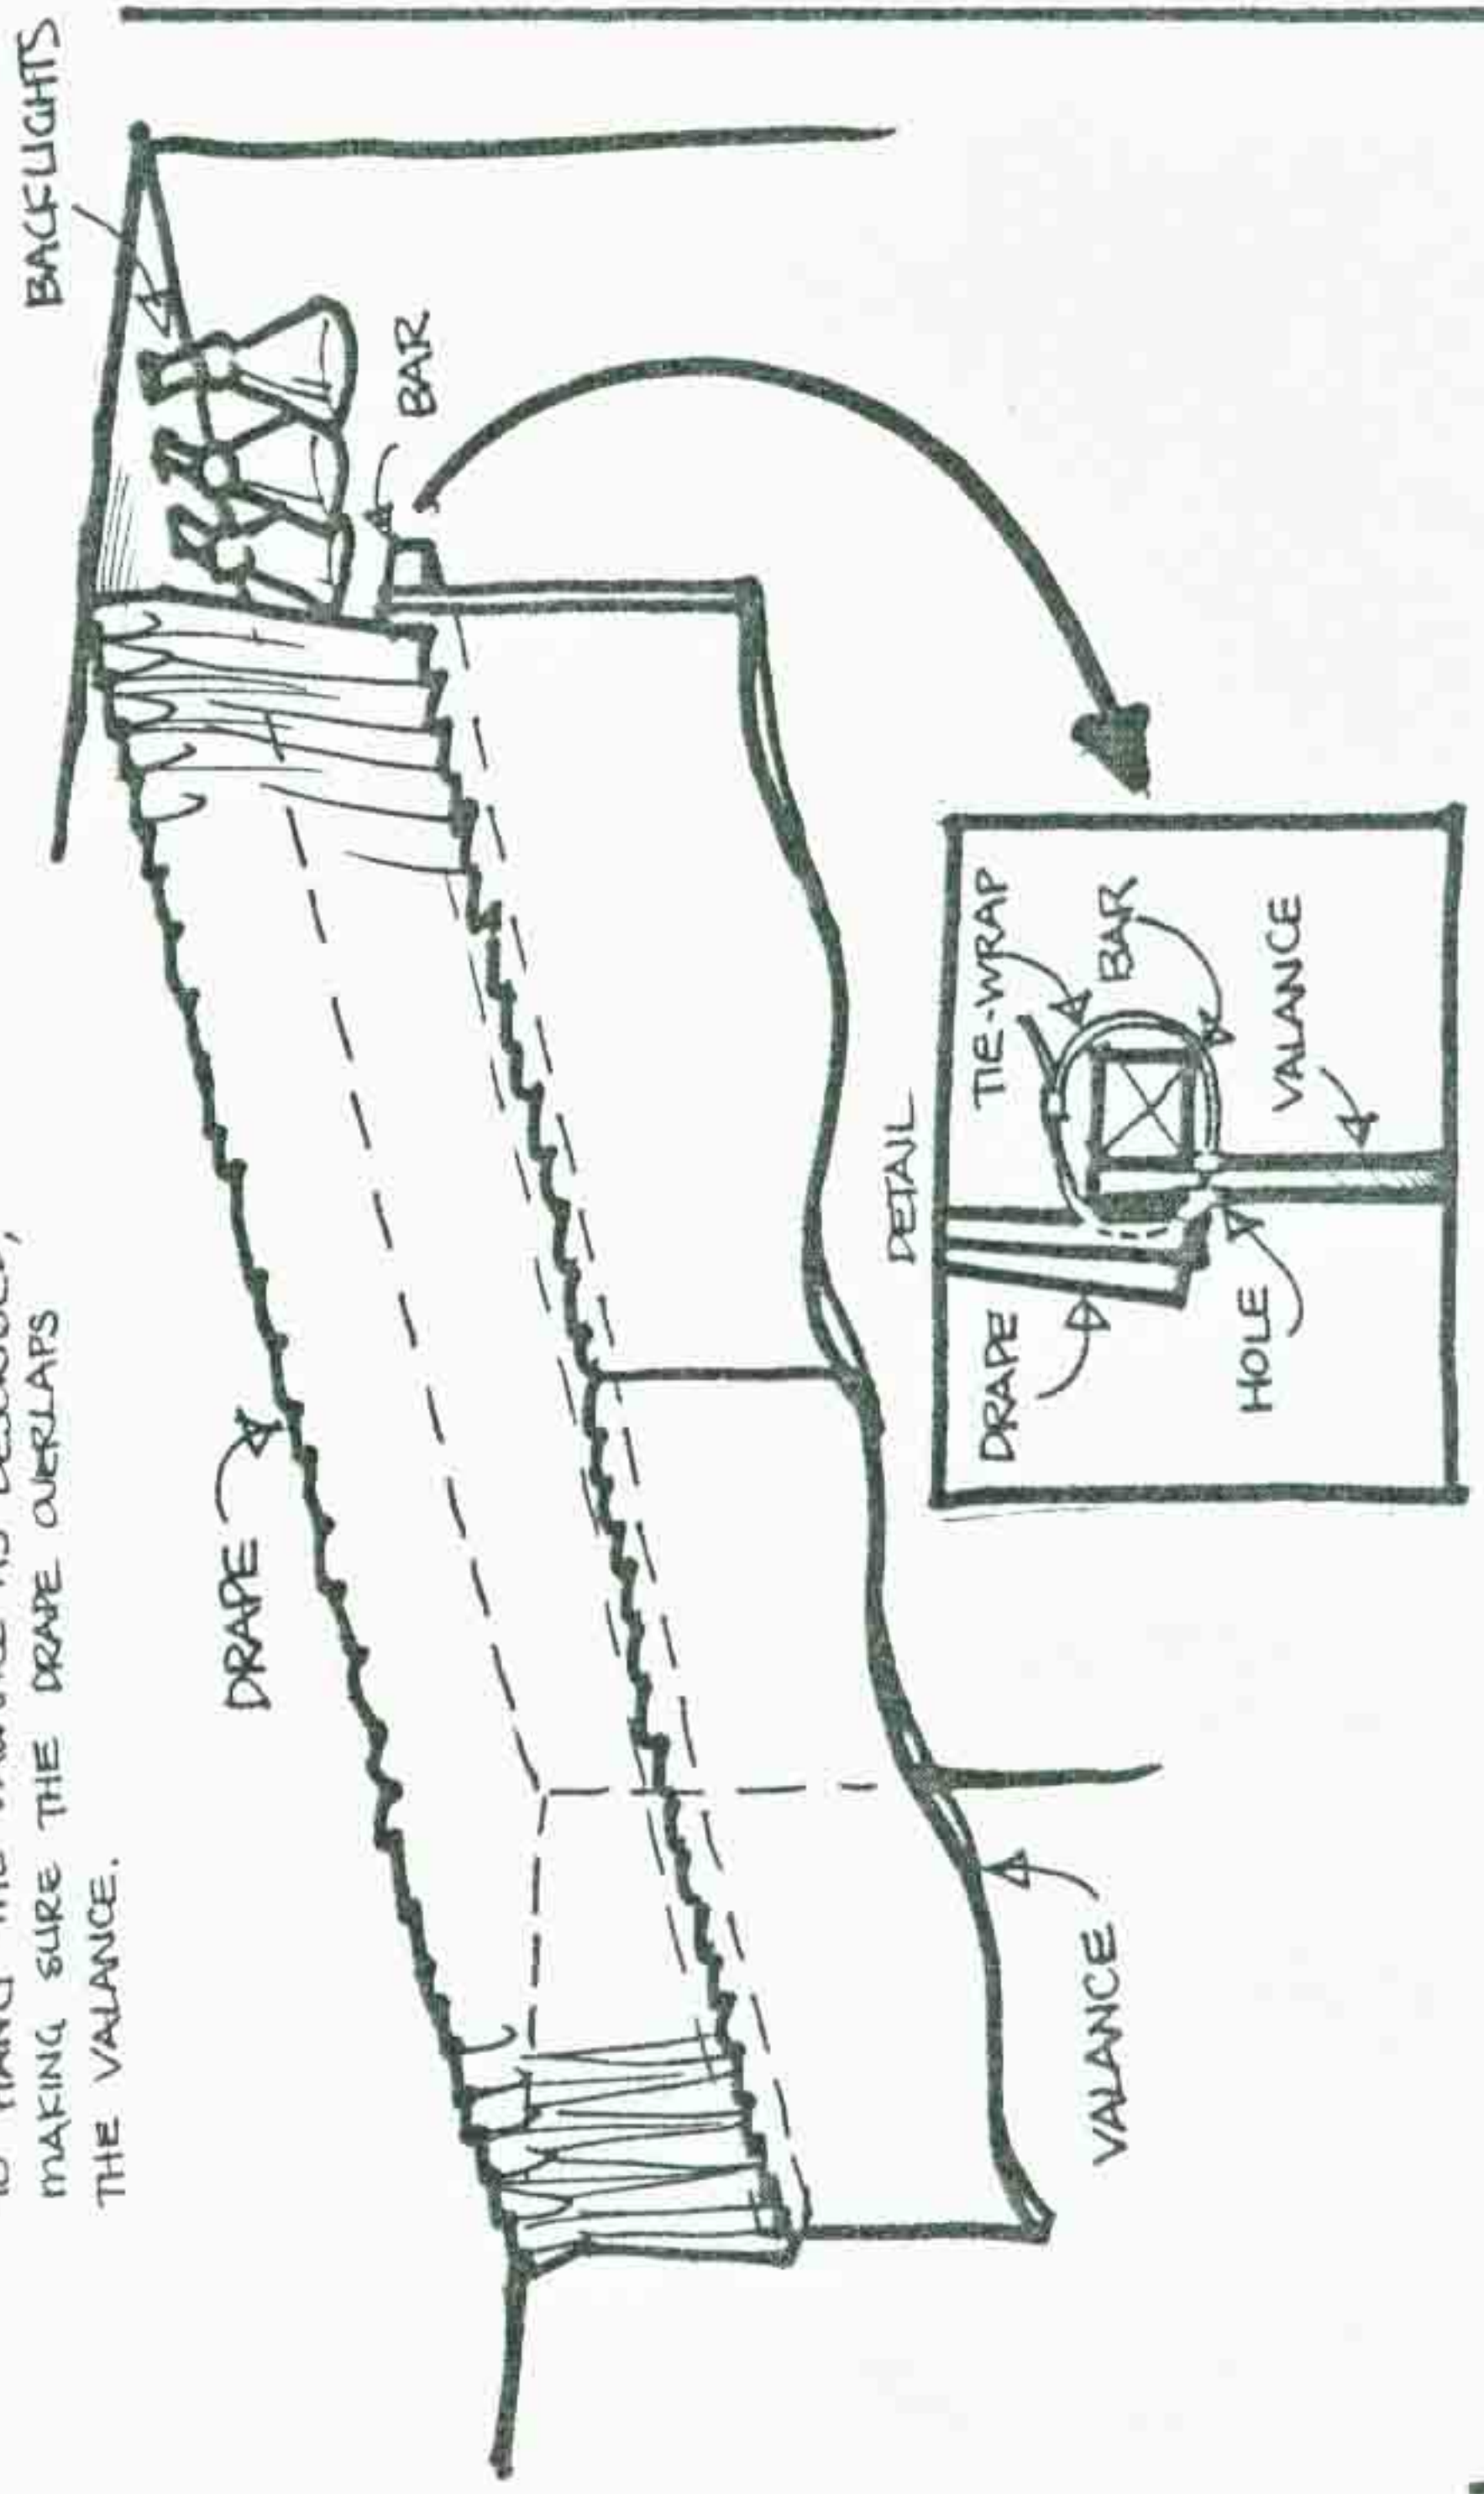


REN

2.2.1/10

## INSTALLING FLOOR SETS

FLOOR SET PIECES SHOULD BE ATTACHED TO THEIR PROPER ALUMINUM "L" BRACKETS (SEE SET KEY) AND POSITIONED AS SHOWN.

**NOTE:** IDEALLY, THE PIECES (A) AND (B) SHOULD BE DIRECTLY UNDER THE VALANCE PIECES (D) AND (E), 18" FORWARD OF THE BACK WALL. HOWEVER, DEPENDING ON YOUR INSTALLATION THEY MAY HAVE TO BE PLACED FURTHER BACK BECAUSE OF THE ARC OF JASPER'S BANJO.

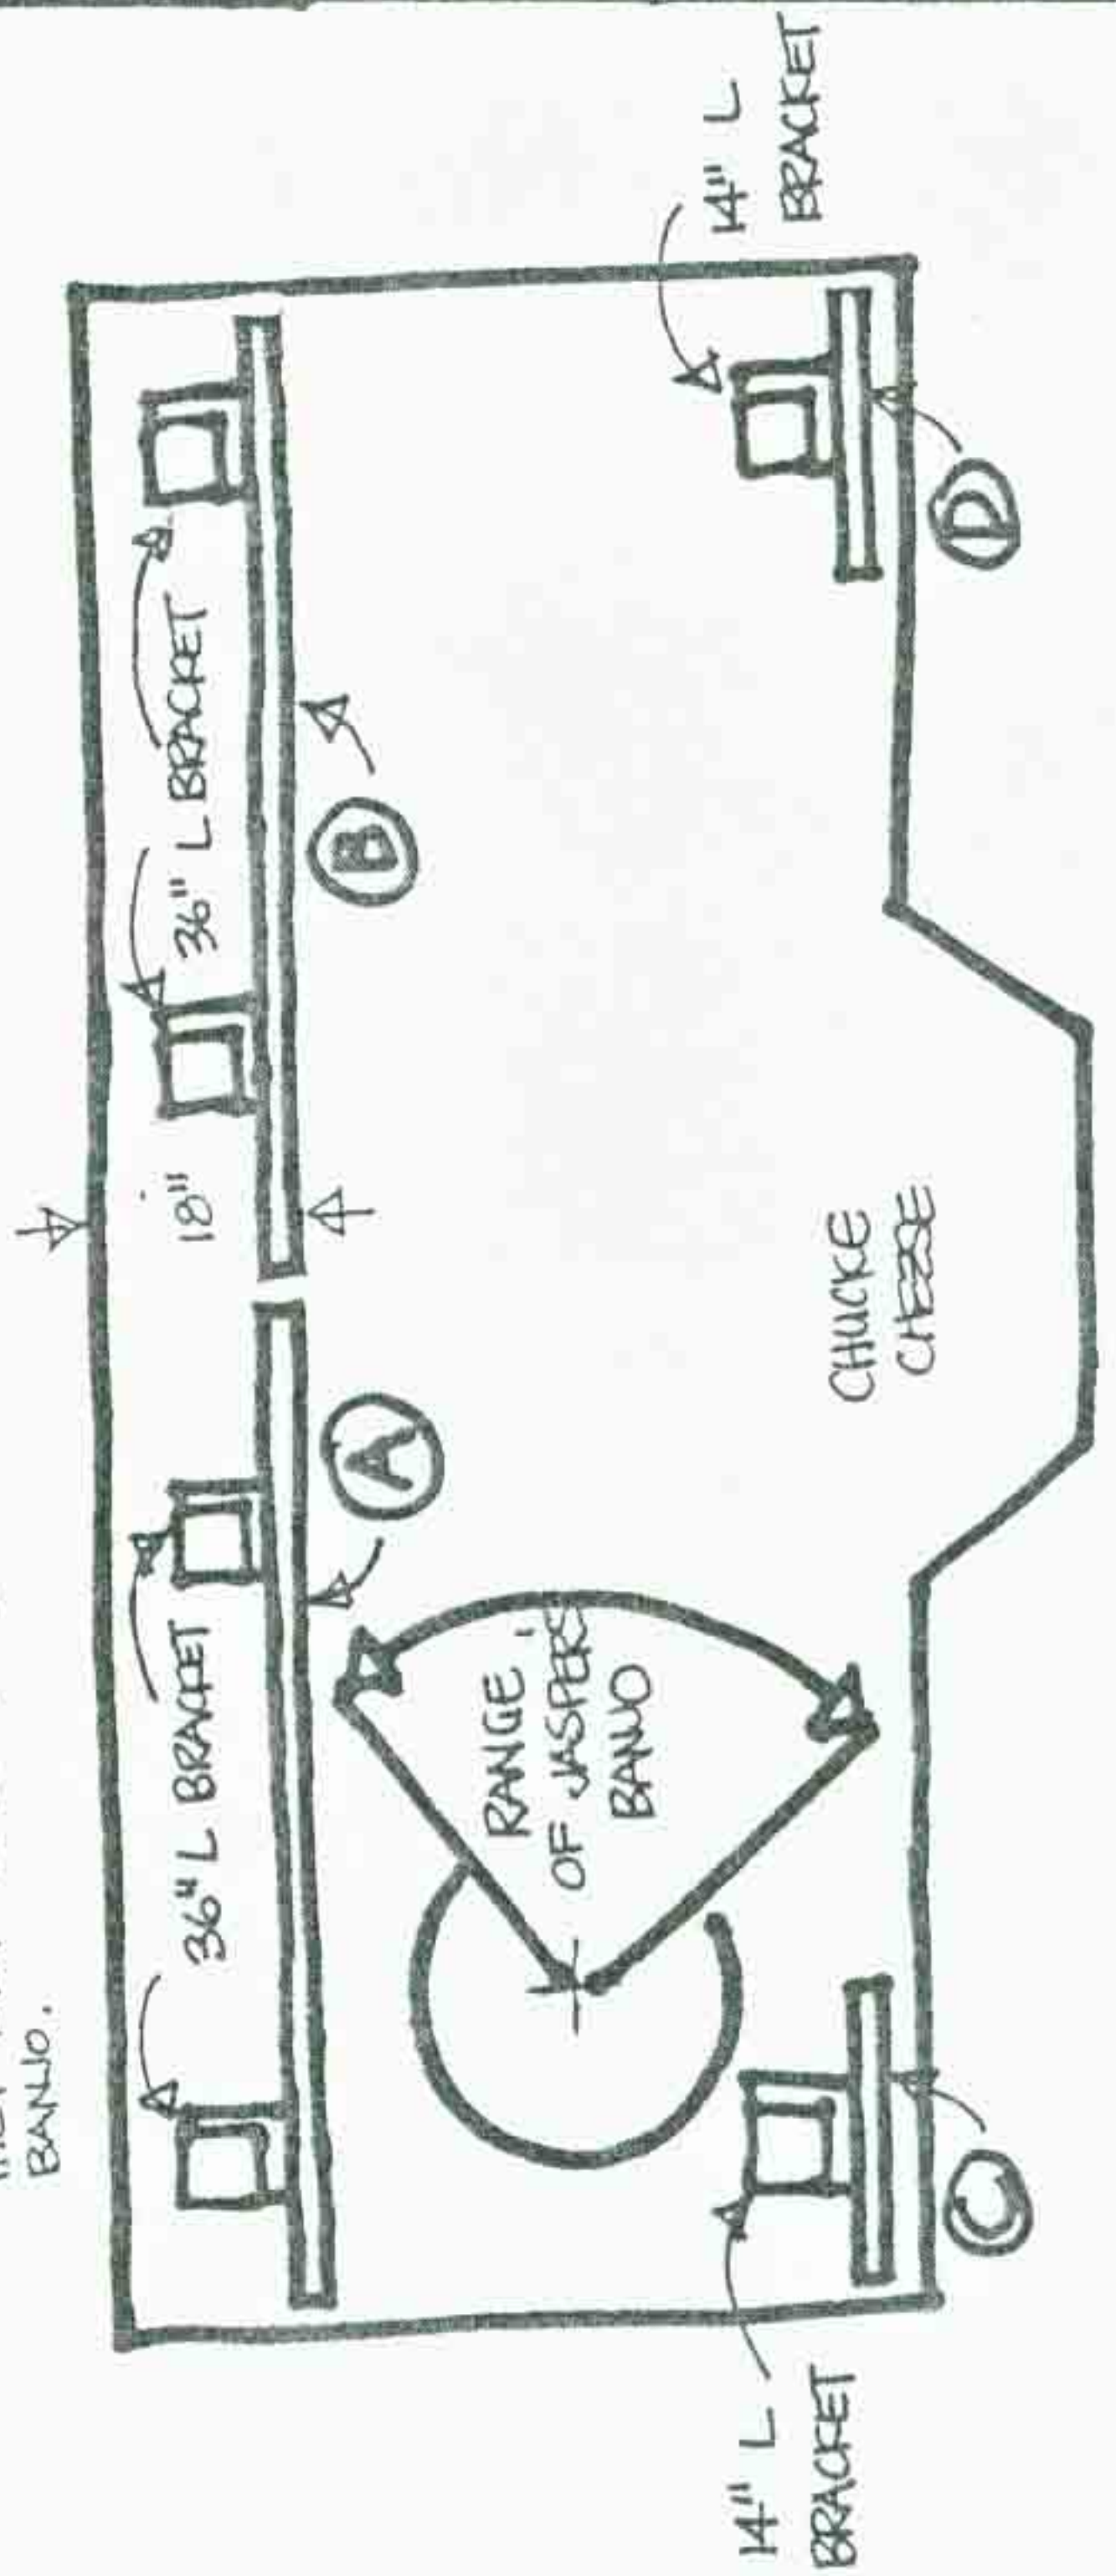

2.2.1/11

SECTION 2.4

DESCRIPTION:

Madam Oink 3  
"THE TUNNEL OF LOVE"



SECTION 2.4.1

DESCRIPTION:

Set Installation

MADAM OMK #3  
"THE TUNNEL OF LOVE"

STAGE SET DESCRIPTION


FOR

020-0043-01

INSTRUCTIONS NUMBER

020-0019-01

MEDIUM PINK #3 SET

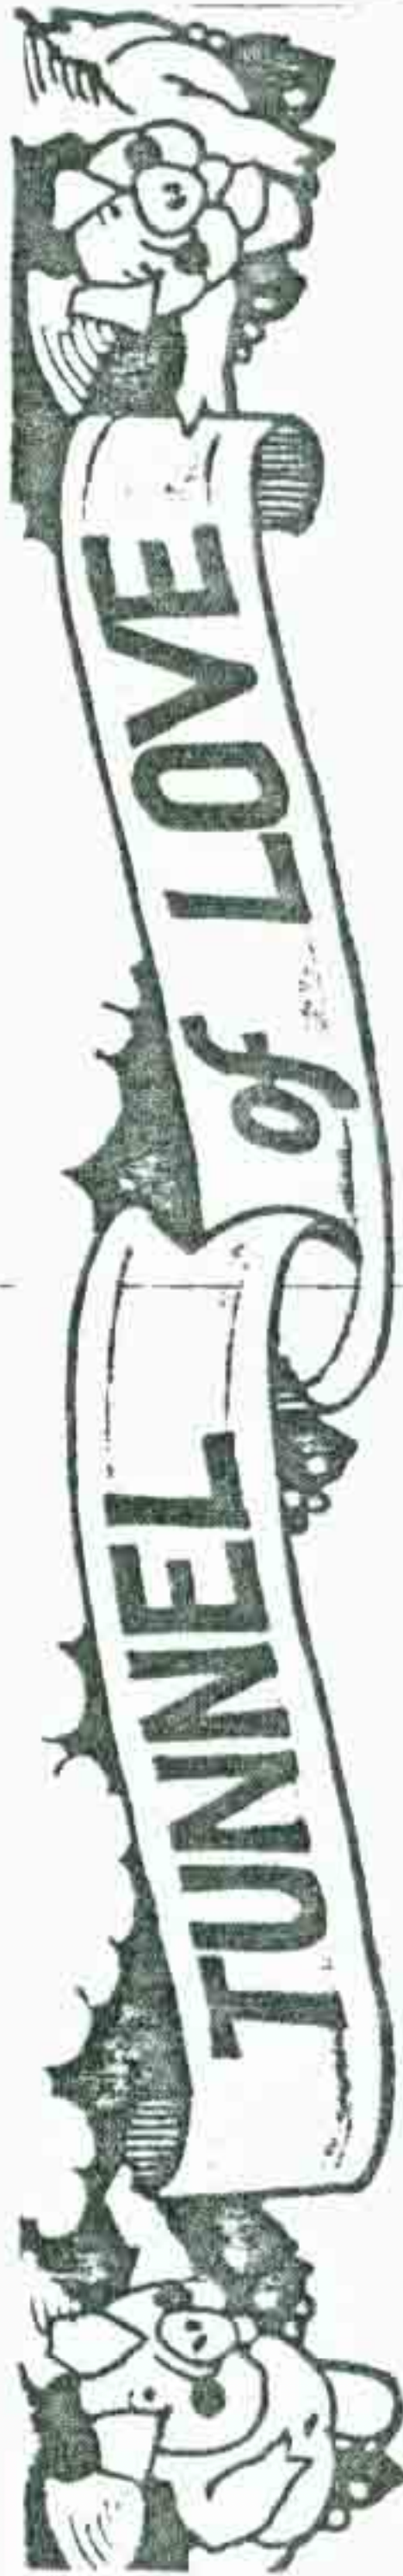


CENTER VALANCE (1 PIECE)

REN

2.4.1/2

MADAM OINK #3 SET

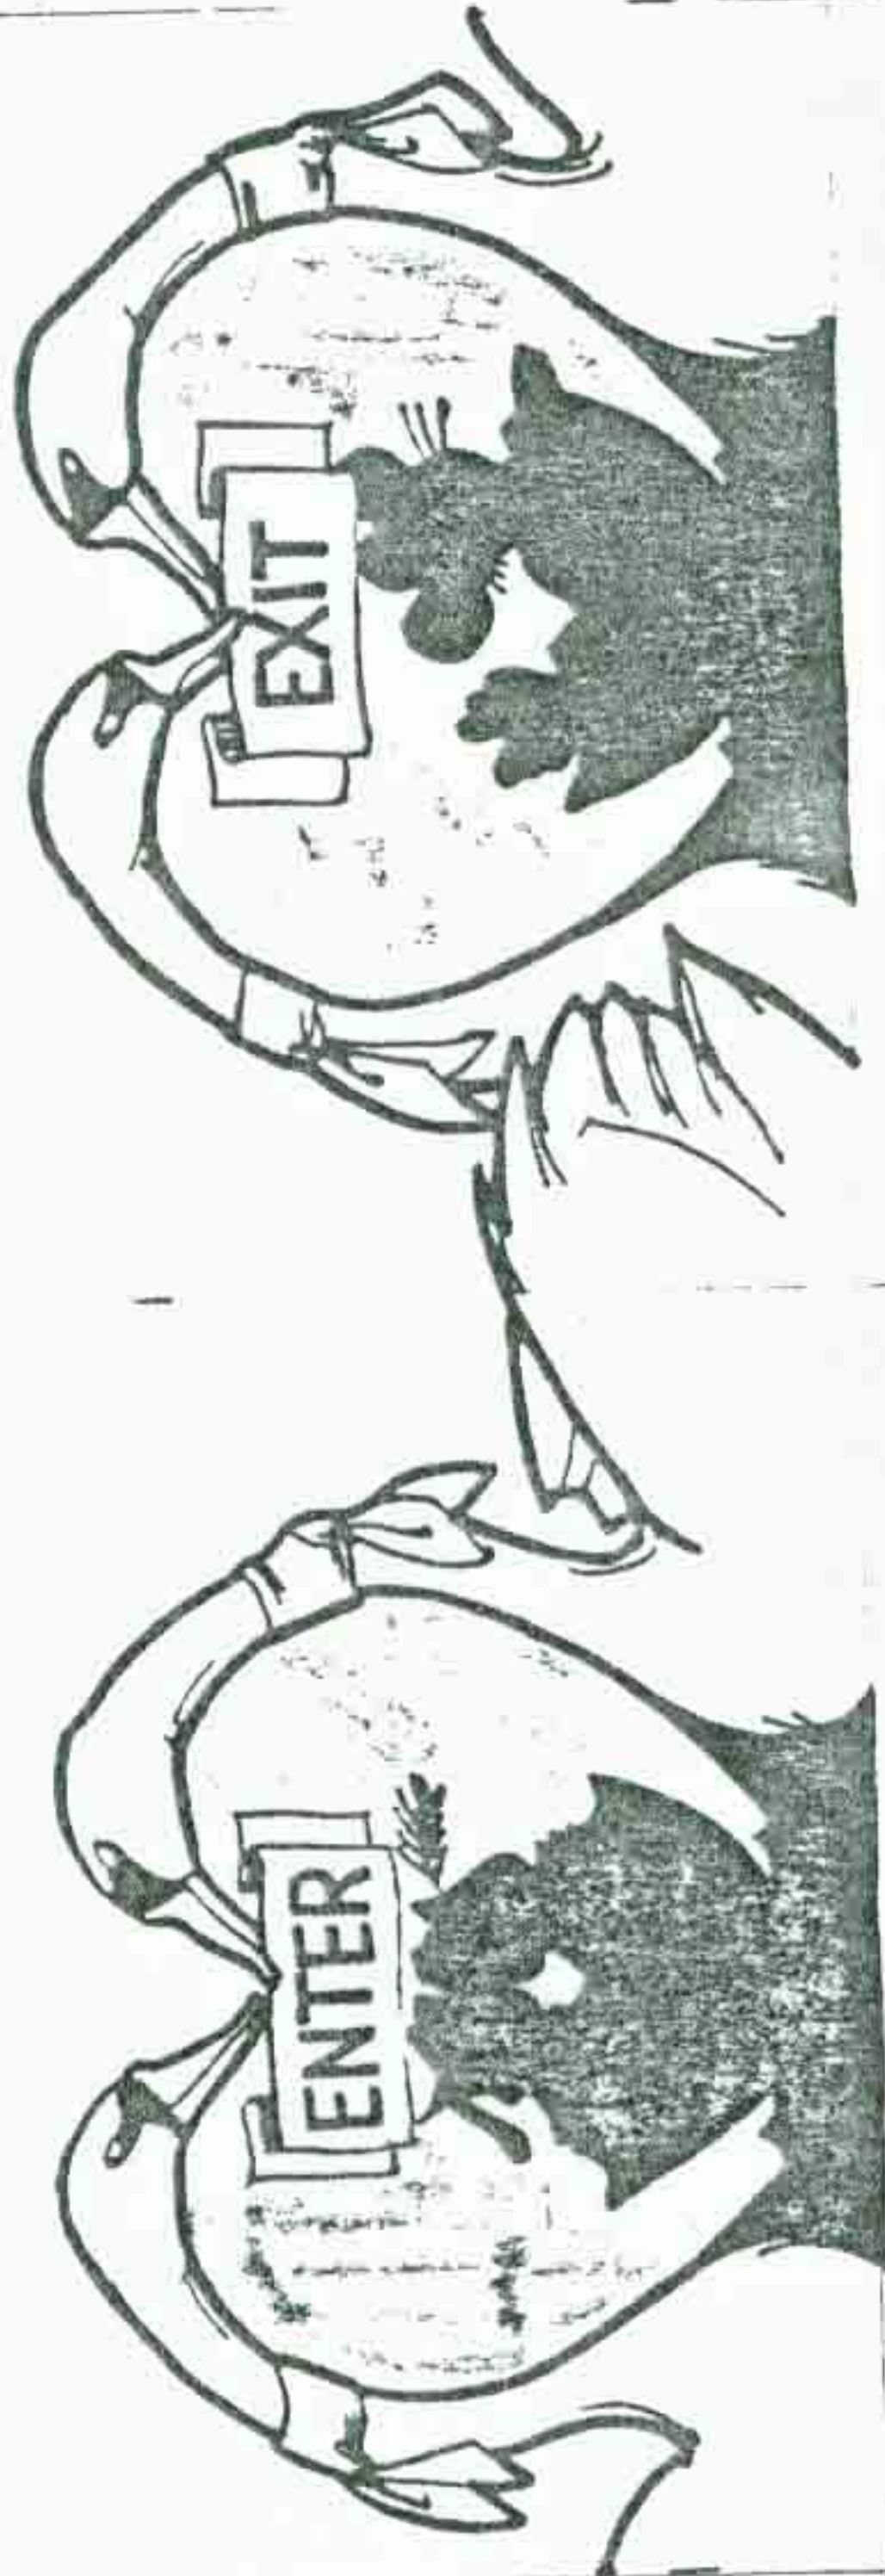


CENTER SWANS - 1 PIECE

REN

2.4.1/3

MADAM OINKS #3 SET

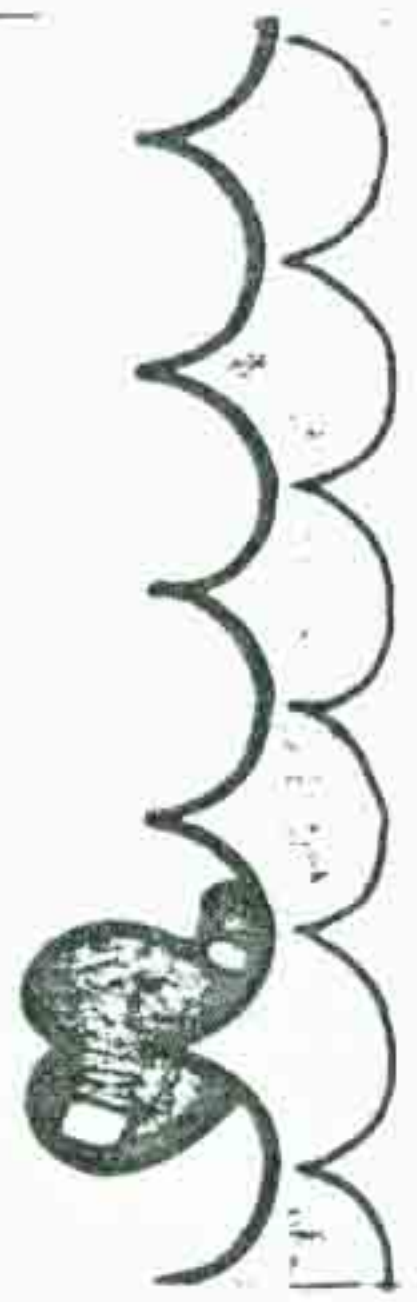


MUNCH WATER 1 PIECE



PASQUALLY WATER 1 PIECE




CENTER WATER - 1 PIECE

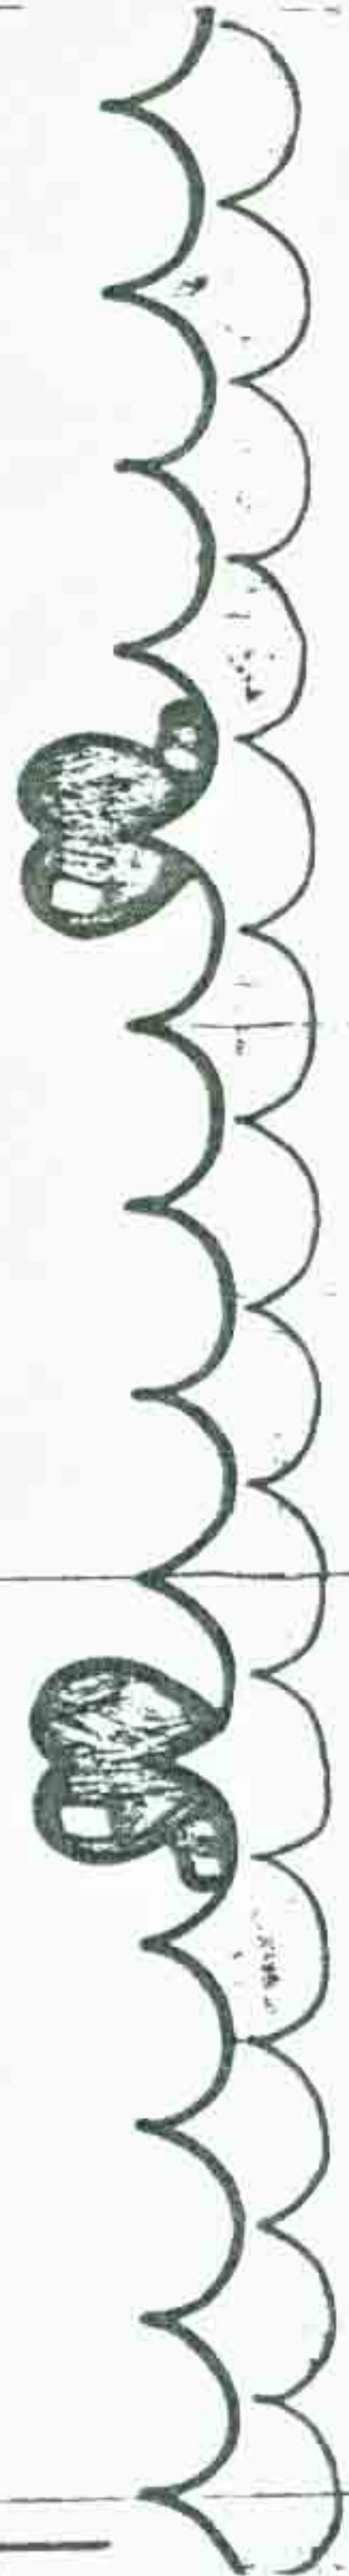


MADA, OINK #3 SET

MIRRORED BACKDROP -(4 PIECES)

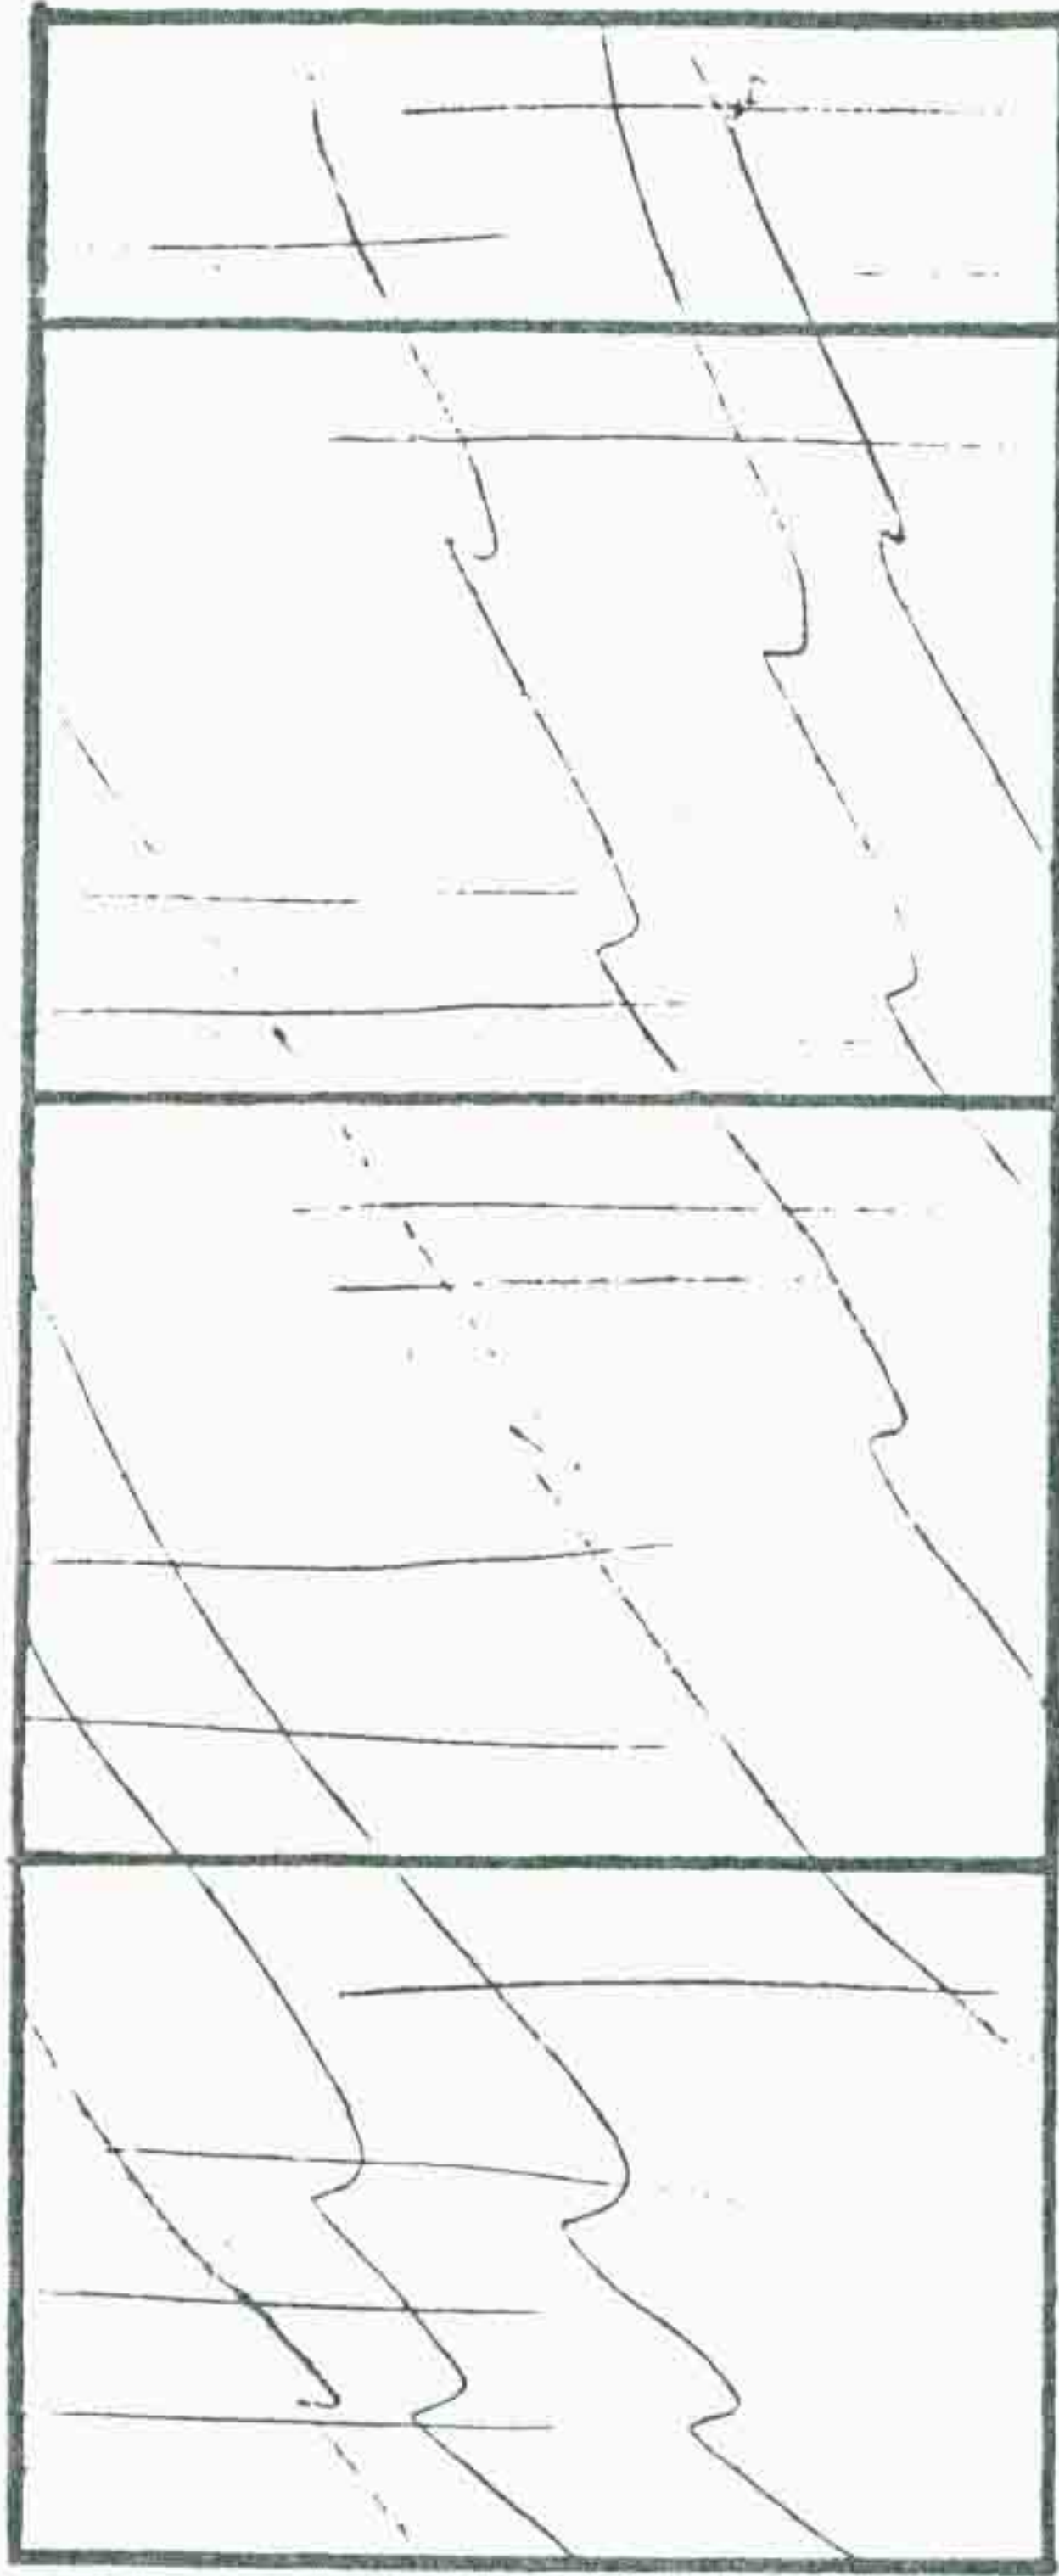


SWAN  
T-BRACKETS  
AND 2X2  
CENTER  
SUPPORT -45"  
(3 PIECES)

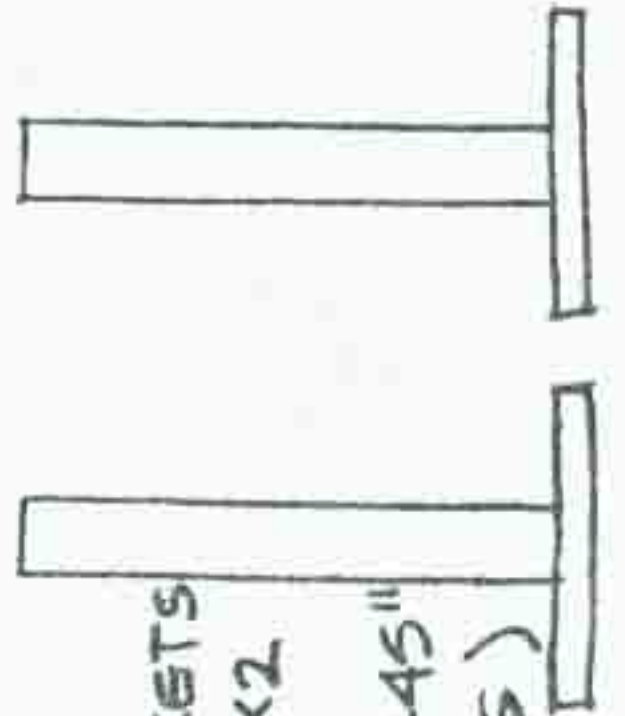

CENTER WATER  
SUPPORTS -74"  
(2 PIECES)

MUNCH AND PASQUALI  
WATER SUPPORTS -30"  
(2 PIECES)

REN

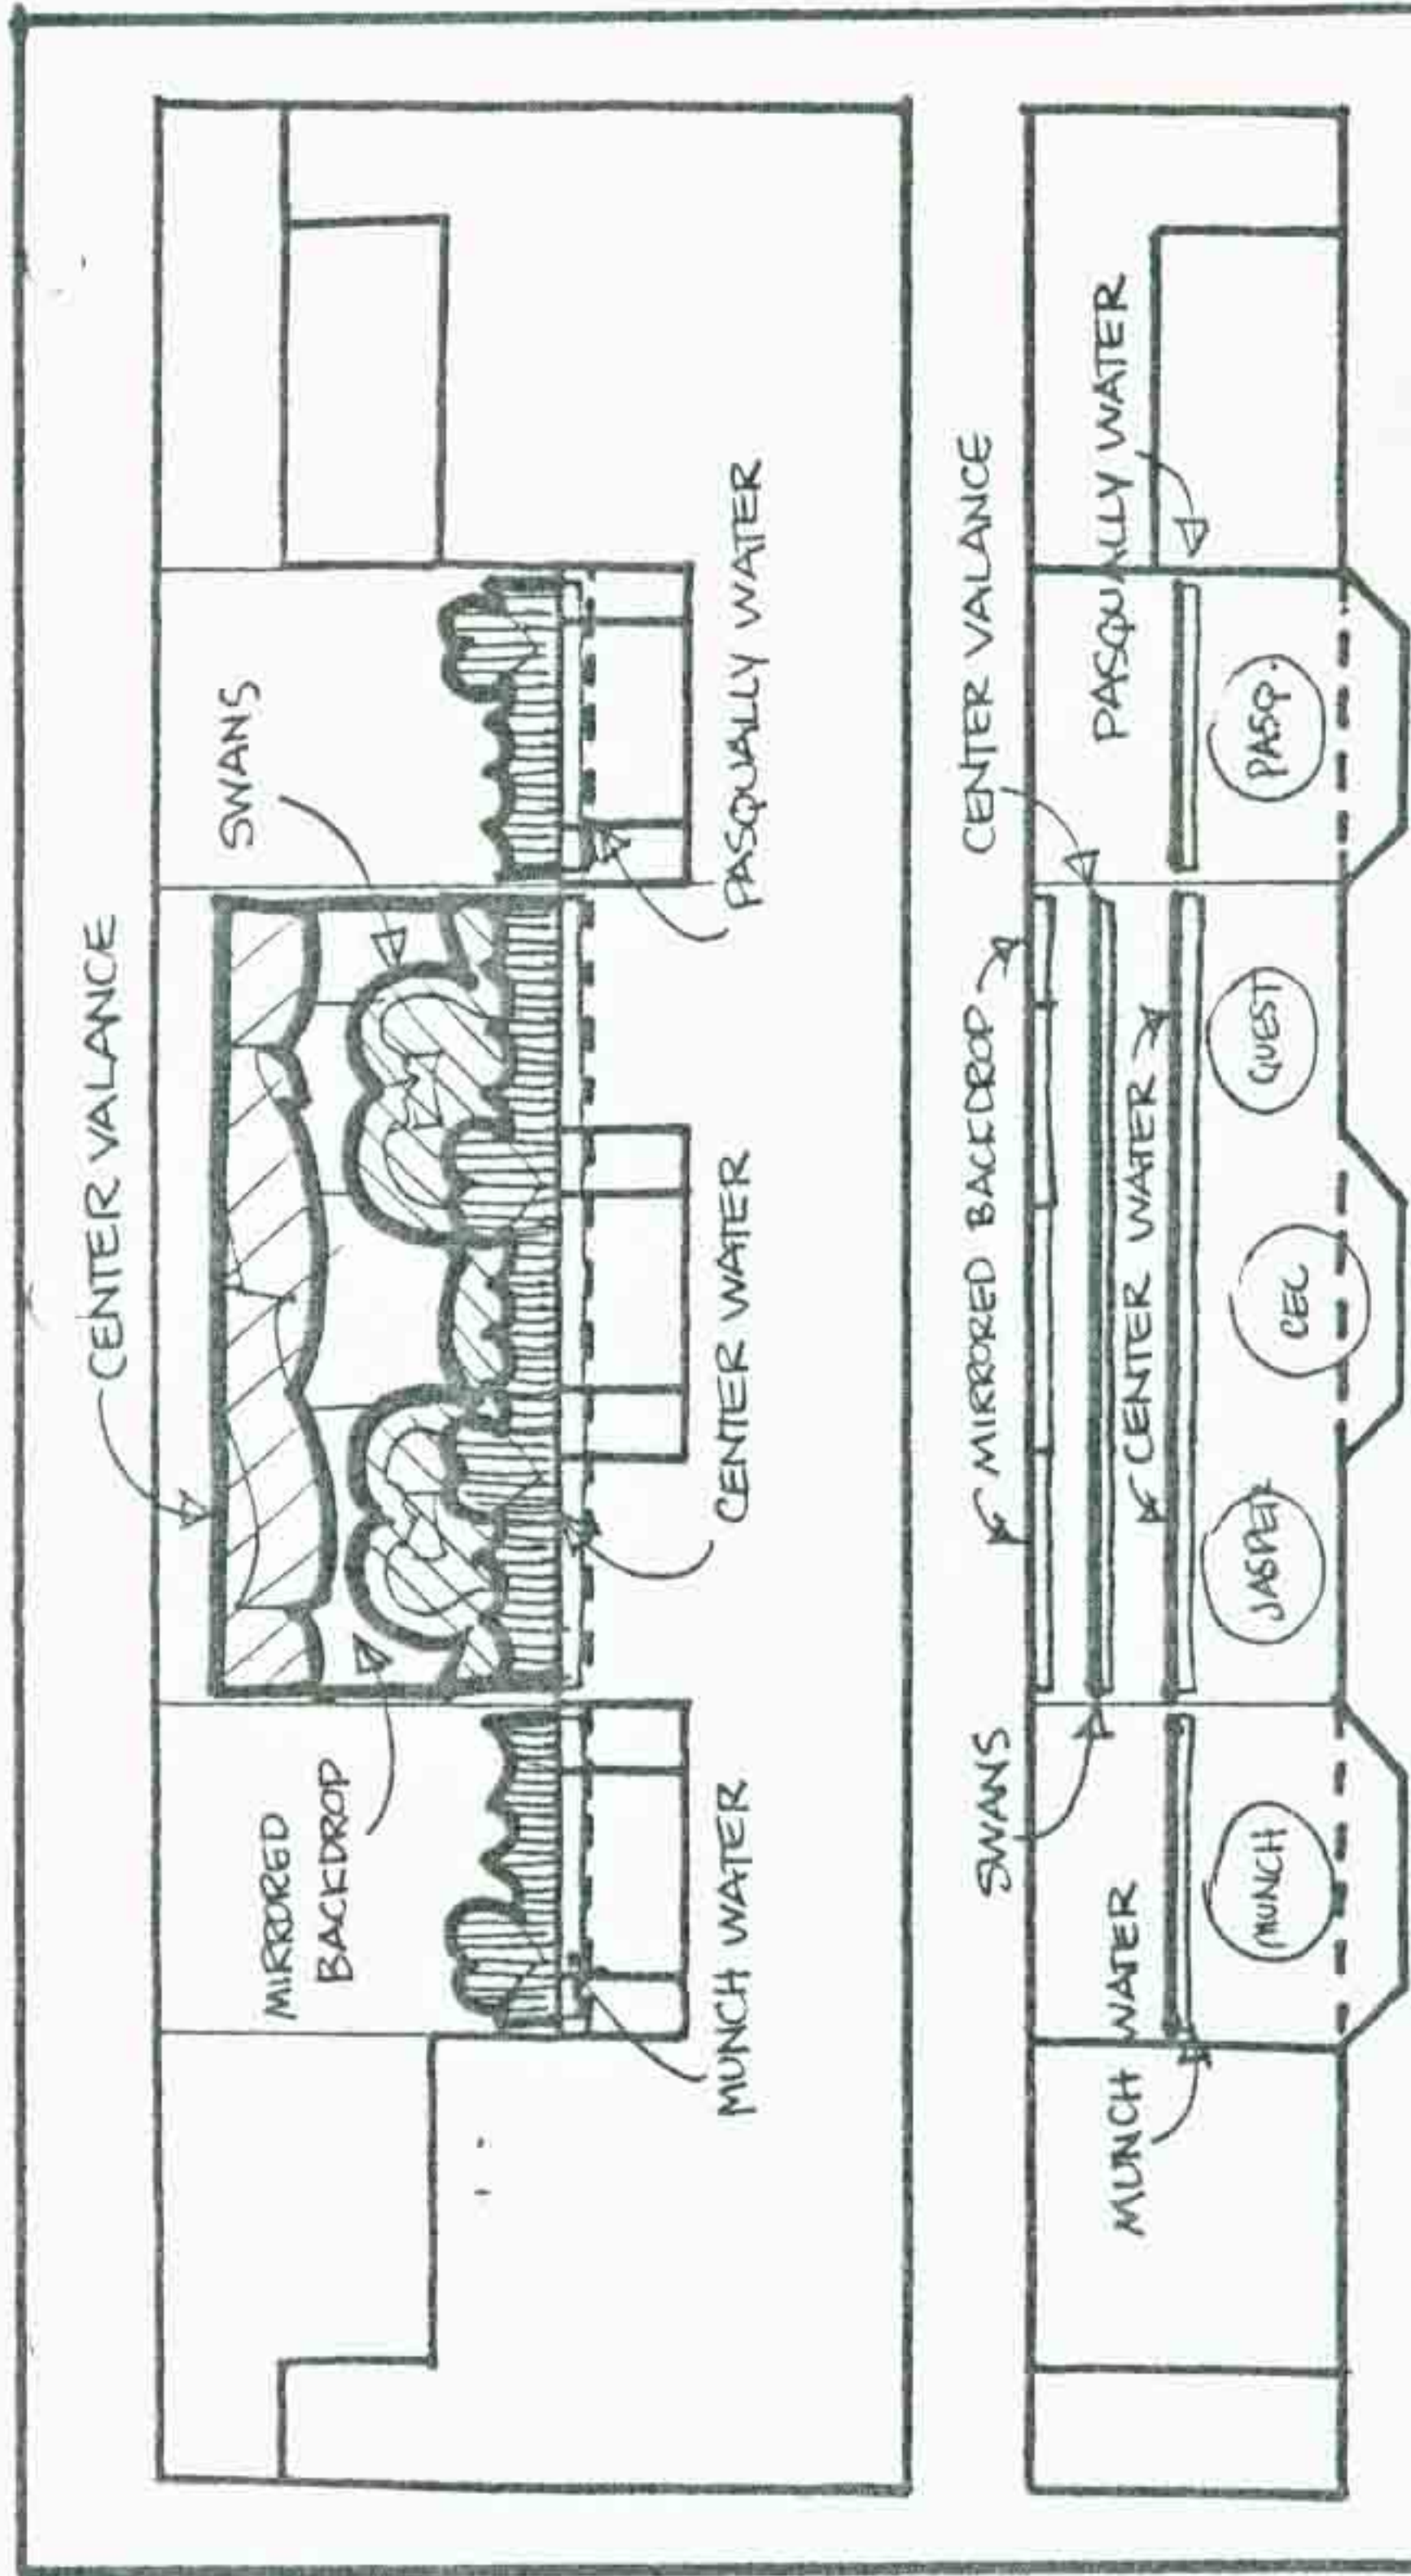


**MADAM ANK #3 SET**  
**"TUNNEL OF LOVE"**  
 SET PLACEMENT

2.4.1/6

# INSTALLING VALANCE


IN SOME INSTALLATIONS THERE IS A BAR WITH A CURTAIN ABOVE IT, HIDING THE BACK LIGHTS. IN THIS CASE, USE THE BAR TO HANG THE VALANCE AS DESCRIBED, MAKING SURE THE DRAPE OVERLAPS THE VALANCE.

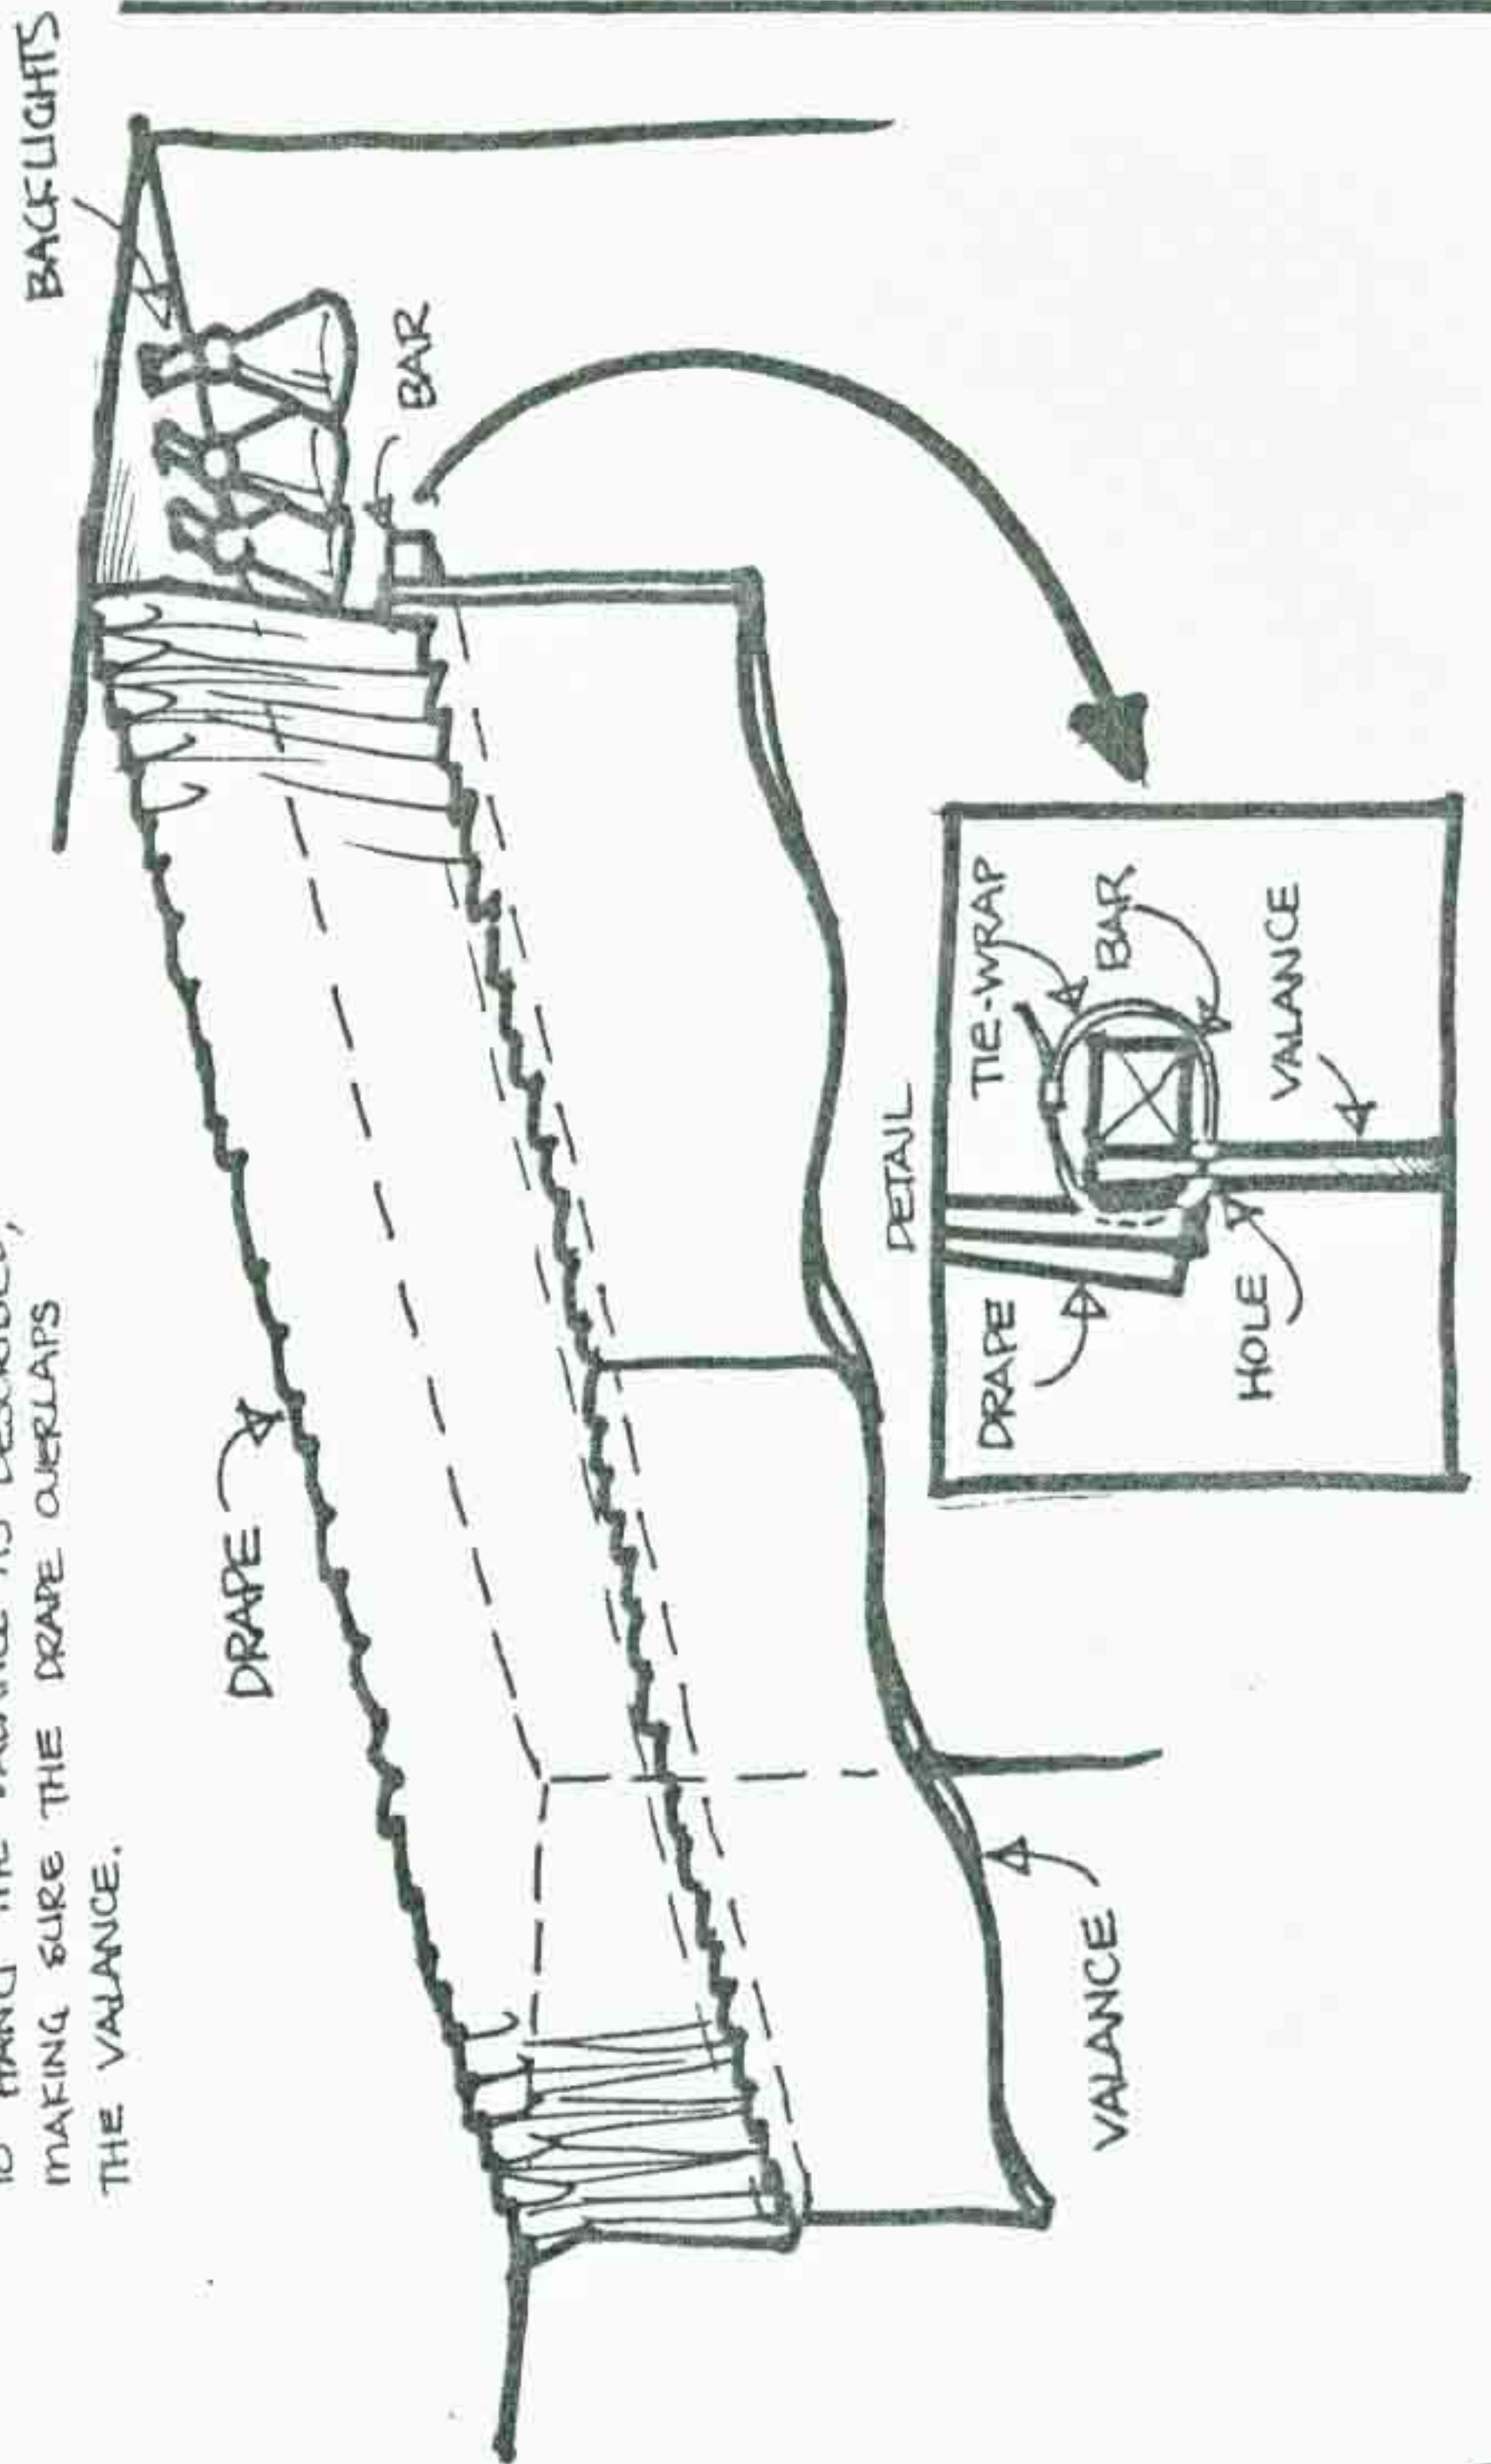

REN

2.4.1/7



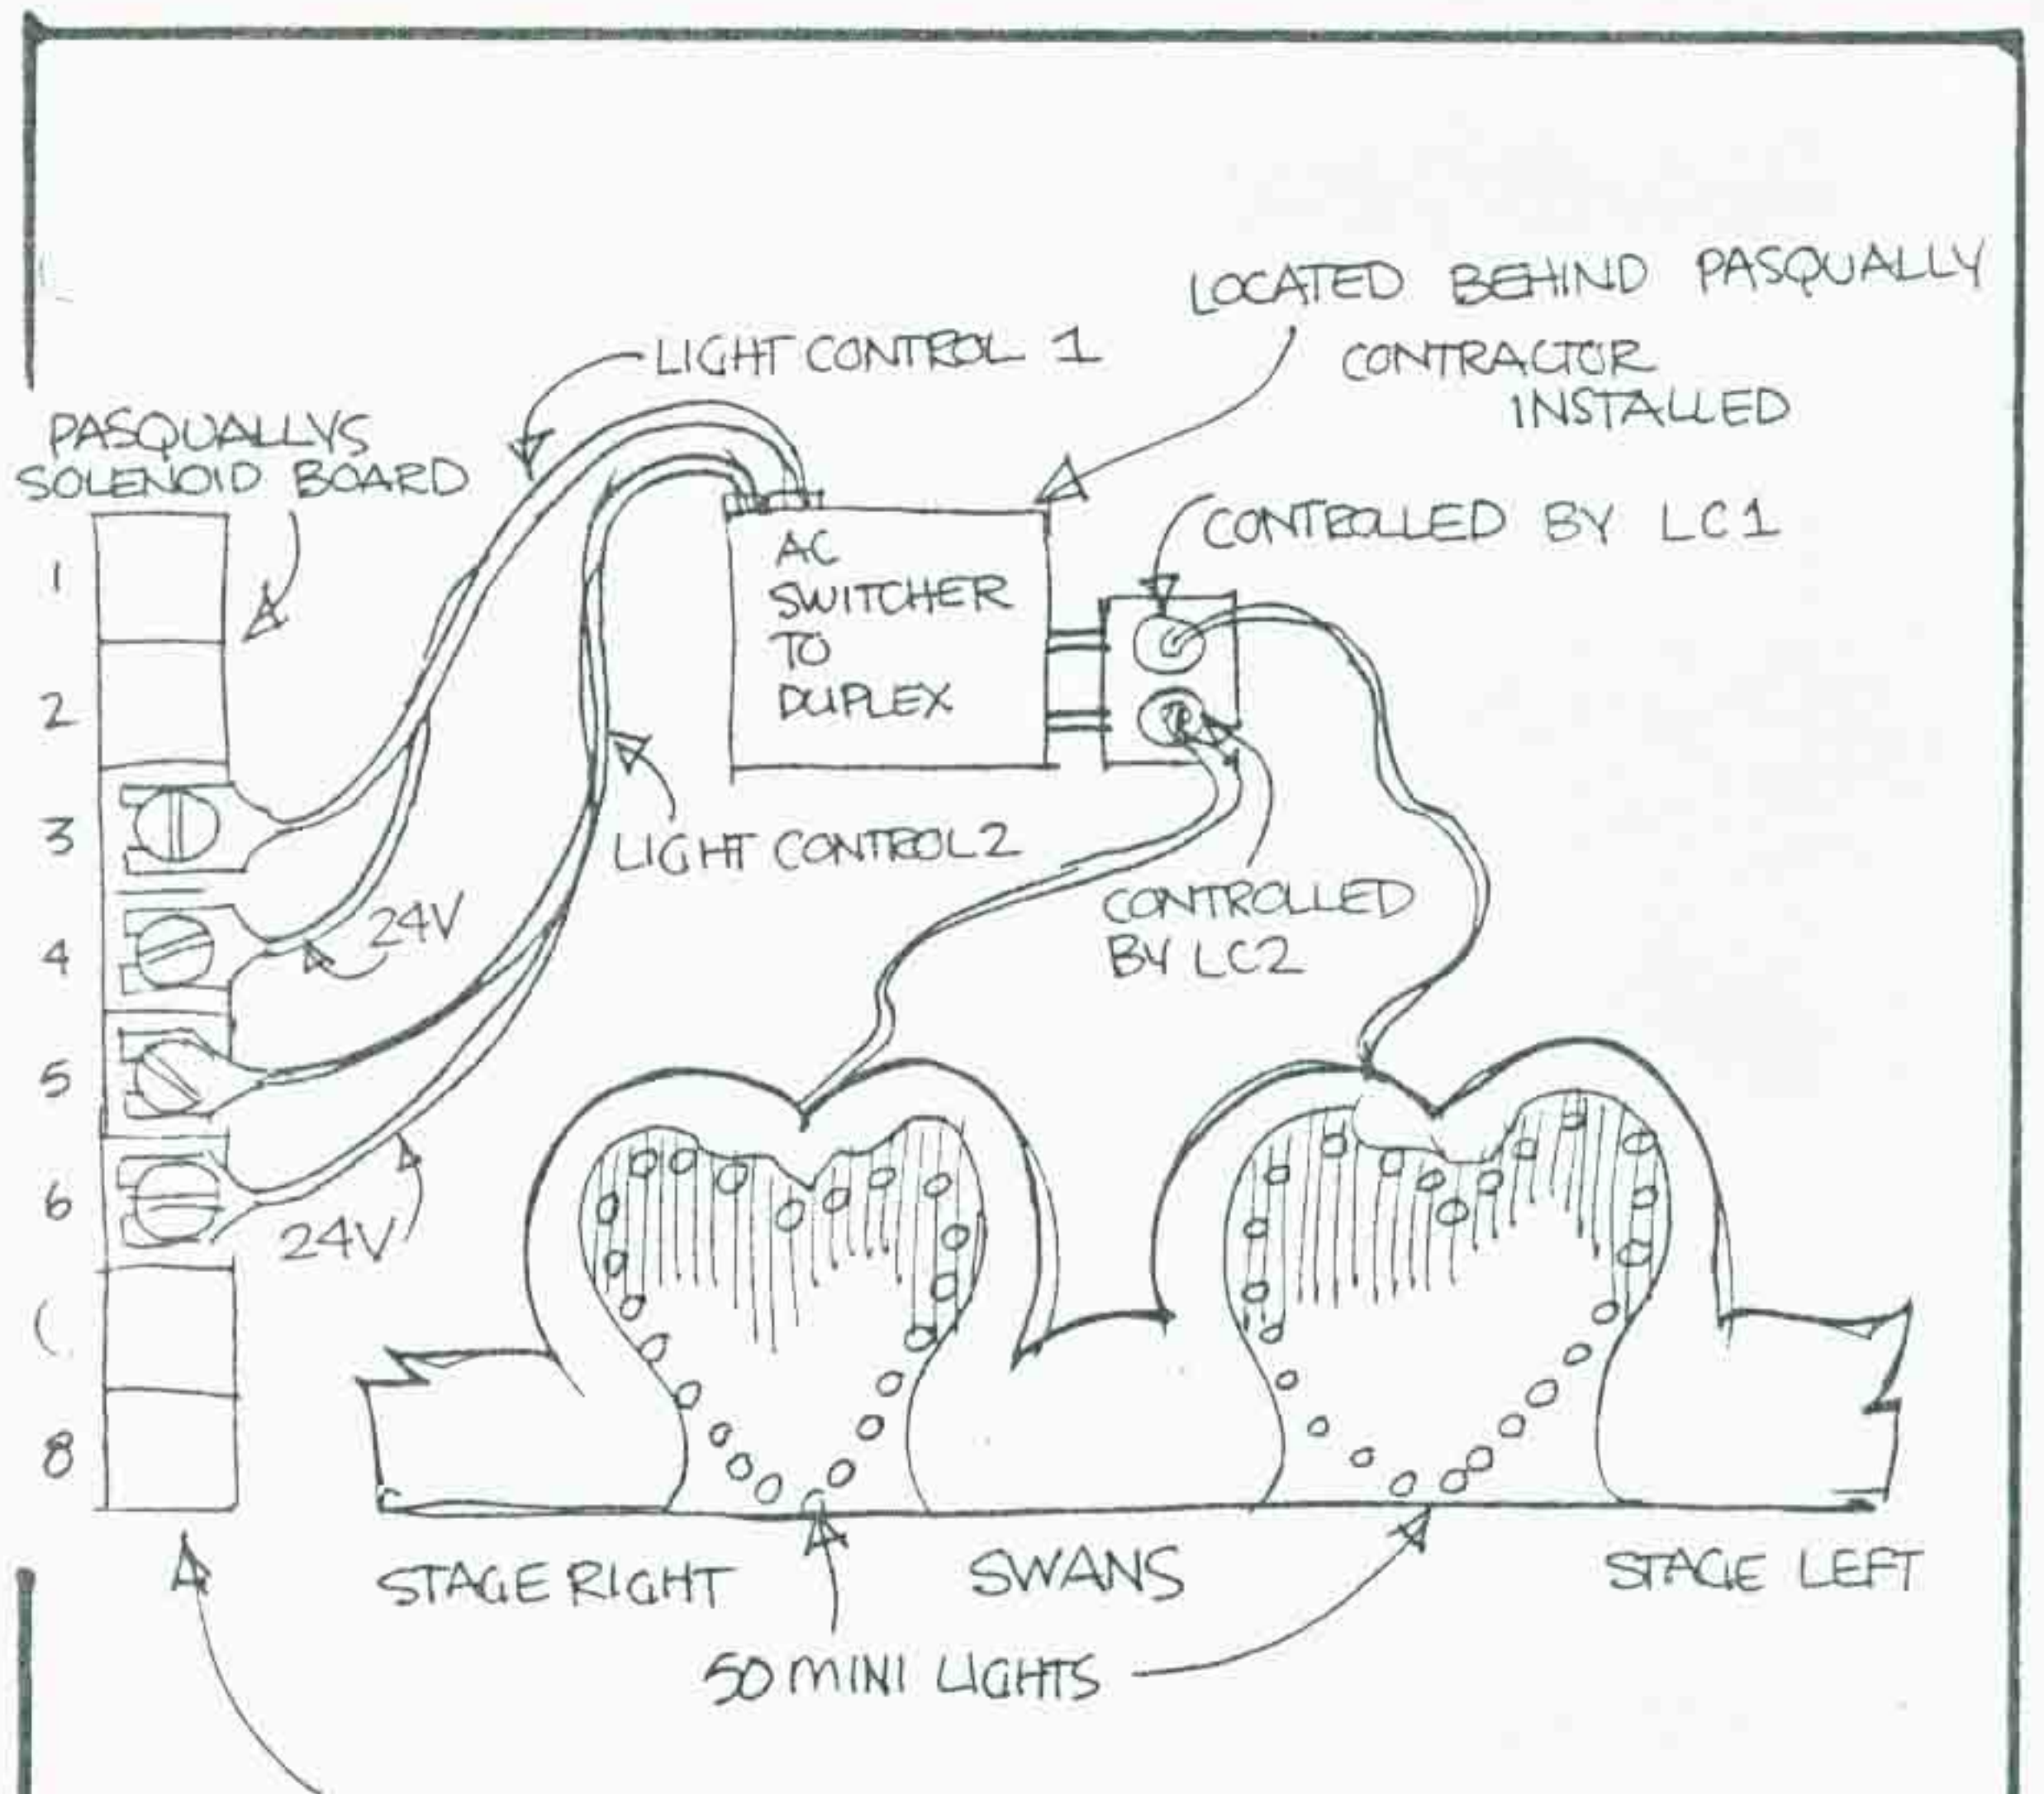

NOTE: 24V CONTROL LINES ON POSITIVE NUMBERED TERMINALS ONLY!

## MADAM QINK #3 SET

MINI-LIGHT CONNECTION

REN

2.4.1/8

MADAM OINK #3 "THE TUNNEL OF LOVE"

INSTALLATION INSTRUCTIONS

Clear the main stage of the old set. Staple the mirrored backdrop (4 pieces) to the header across the back of the stage. Start with one of the 3 large panels on the stage right side and work across, carefully matching the seams. Next, attach the valance to the valance header (or T-bar ceiling, for stages without valance headers) using the wraps. Move the swans panel center stage, behind the characters. Attach one T-bracket to the back center of each large heart shape and then attach the 45" 2 x 2 center support between them. Position the swans 1'6" forward of the back wall, directly under the valance.

Move the center water panel center stage, behind the characters. Attach the 2-74" water supports to the bottom back of the panels. Position the panels directly behind the character, as far forward as possible.

Move the Munch water and Pasqually water behind the characters and attach one 30" water support to each. Position them even with the center water so that the water panels make a consistent line from Munch, thru the center, to Pasqually.

Using the 2 mini-light strings, push a single lamp thru each of the 2 sets of 50 holes outlining the hearts in the swan panels. Each string has 50 lights. Connect the stage left string to the AC outlet controlled by LC1 of the AC switcher located behind Pasqually. (If you've had the Harmony Howlette show, this is your existing mini-light string line.) This relay line is controlled by terminals 3 & 4 on Pasqually's solenoid board. Note that the 24V control line must be attached to the even numbered terminal (number 4 in this case) only. Then attach the stage right string to the AC outlet controlled by LC2 of the AC switcher. This relay line is controlled by terminals 5 and 6 on Pasqually's solenoid board. Again, the 24V control line must be attached to terminal number 6, the even numbered terminal.

Finally, remove the glass filter from the center light of the 5 light bar above the center stage and replace it with the red filter supplied.

LIGHT FOCUS

The center lights on the 5 light bar should be aimed to evenly illuminate the valance. The outside light on each end should be aimed directly at each piggy on the valance.

The back wall lights should be aimed slightly away from the back wall at the back of the swan valance. This will increase the reflectance off the mirrored surface. Use Dr. Duck's Diagnostic to turn on the lights for focusing.

2.4.1/9

MADAM OINK #3 - "THE TUNNEL OF LOVE"

<u>DESCRIPTION</u>	<u>PART NUMBER</u>	<u>QUANTITY</u>
"Tunnel of Love" set	020-0043-01	1 Assembly: (9 foam core pieces, 7 wooden supports)
Mini-light String	700-0113-01	2
Replacement bulbs	700-0113-02	Order
"Tunnel of Love" Tape	027-0043-01	2
Red Halo Filter	700-0091-01	1
Long Tie-wraps	760-0001-01	10
Installation instructions	030-0019-01	1

2.4.1/10


LOUNGE VALANCE

1'6" HIGH X 15' WIDE

BUNDED & GATHERED, FIREPROOF

MEDIUM BLUE VELVOUR  
(RED VELVOUR)

18" X 180"

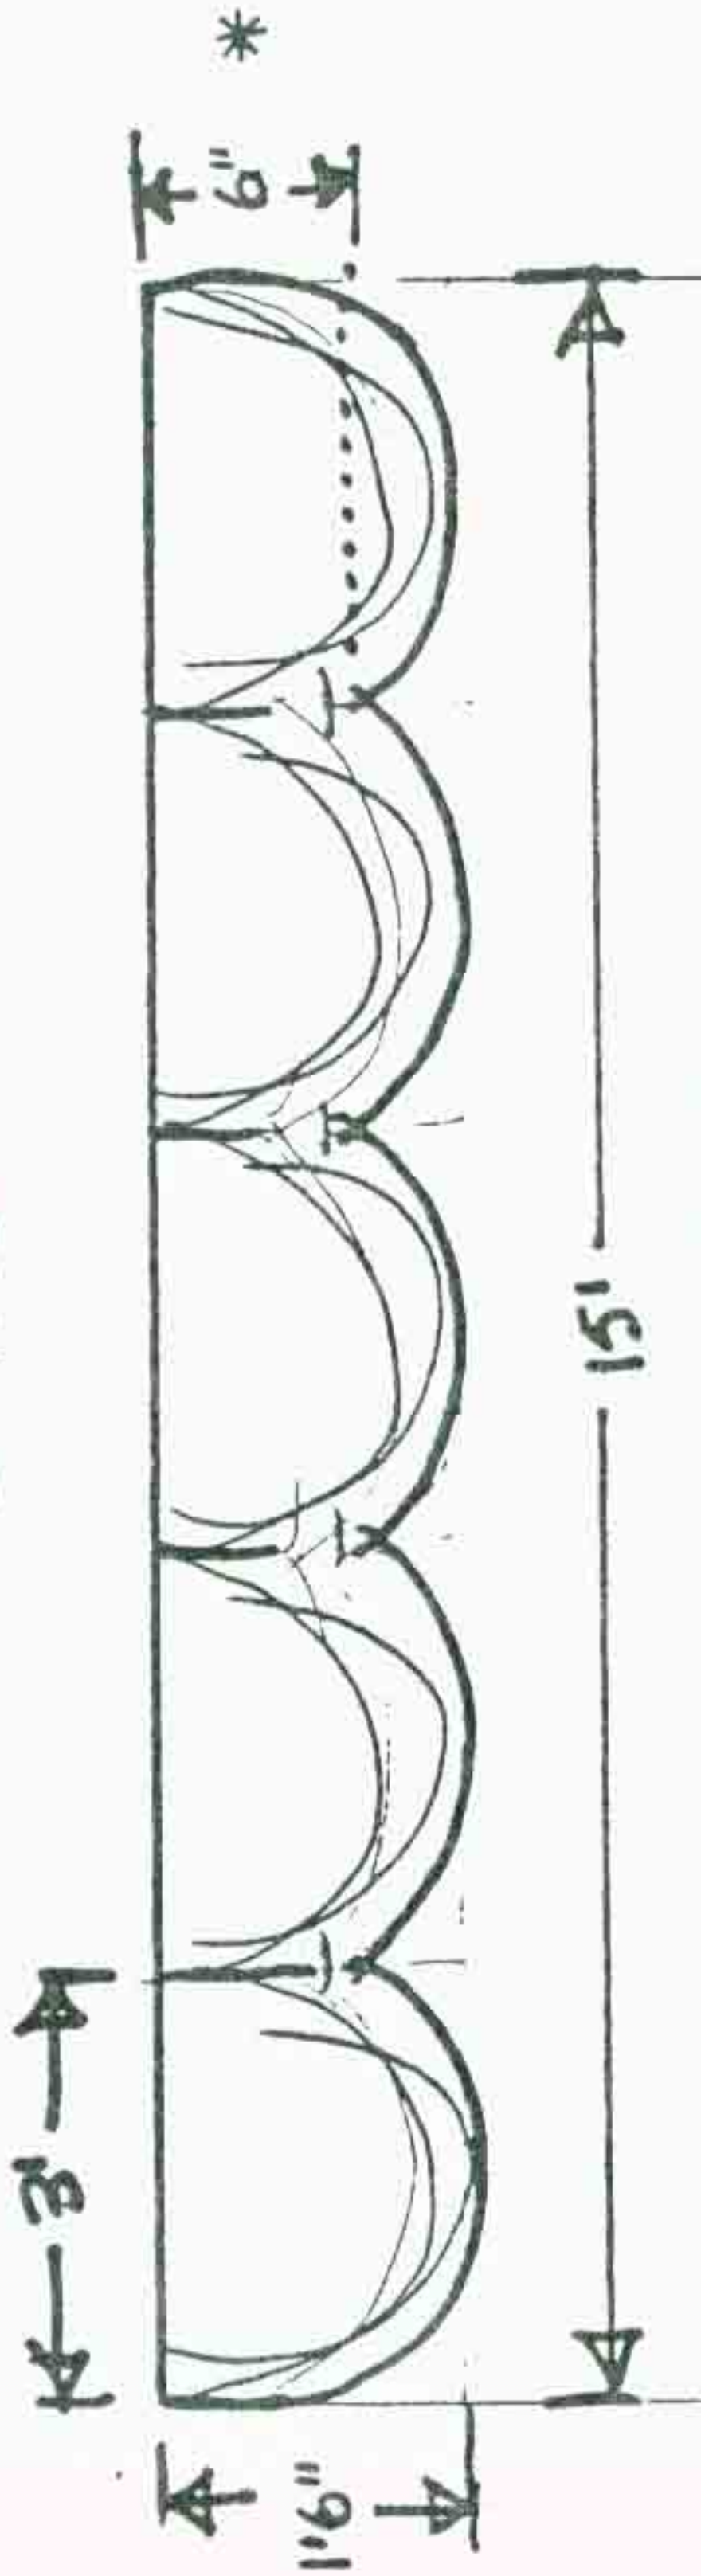


020-0012-02 BLUE  
( 020-0046-02 RED )

\* THIS DIMENSION IS  
OPEN, PER THE ACTUAL  
STYLE OF THE GATHERS.  
IT SHOULD BE BETWEEN  
4" & 8".

# LOUNGE LIGHT STANDARD

5 LIGHT BAR

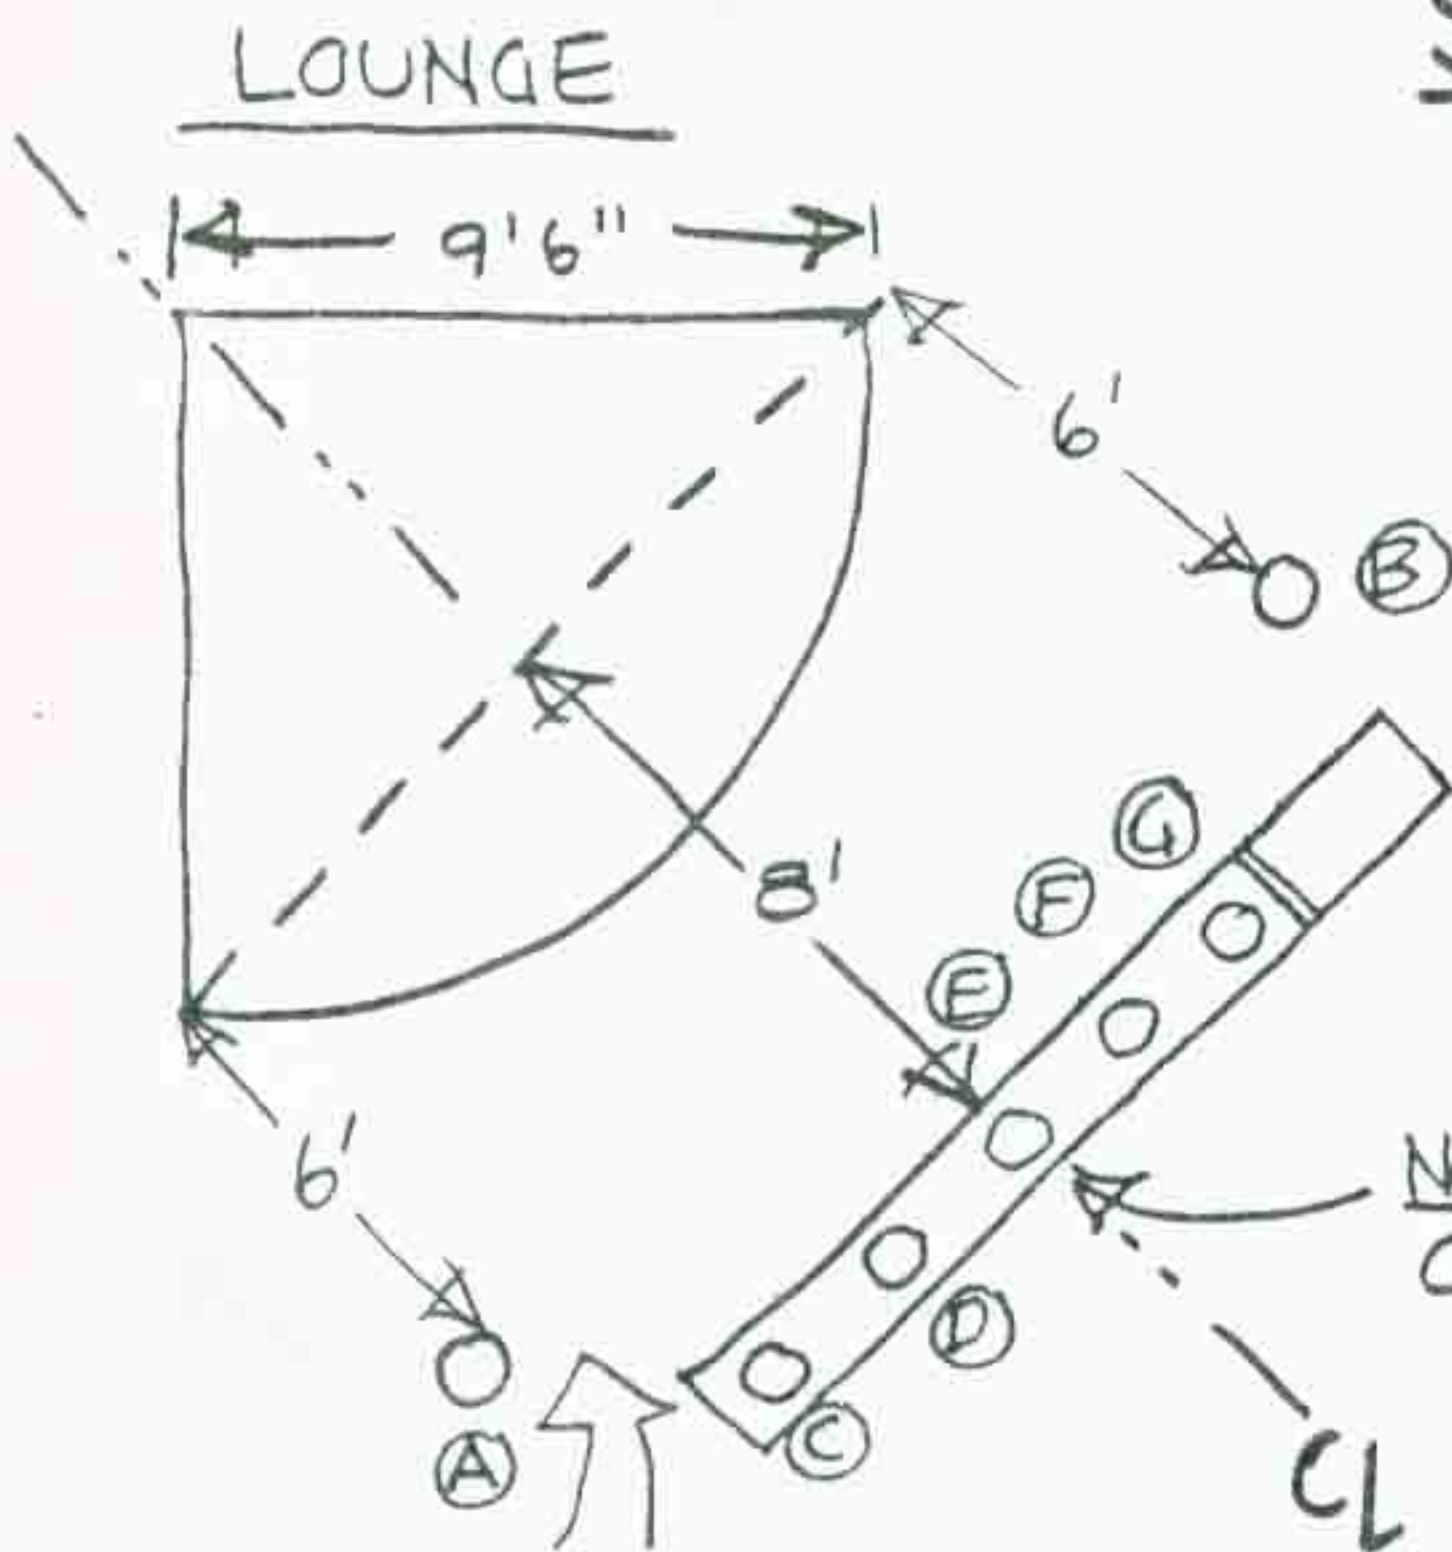

ALWAYS-ON

- (A) CEILING MOUNTED
  - (B) FLOOD LIGHTS - CLEAR
- LIGHT BAR
- (C) AMBER SPOT
  - (D) RED SPOT
  - (E) BLUE SPOT
  - (F) RED SPOT
  - (G) CLEAR SPOT

NOTE: CENTER 5 LIGHT BAR ON CENTER FIXTURE

NOTE: ALWAYS ON LIGHT MUST BE CLEAR OF LIGHT BAR TO AVOID SHADOWS

REN

REPLACES 3.14/1

# LOUNGE LIGHT CONNECTION

## THE KING'S MAP

HEADERS →		2,3	4,5	LITE BAR		
SOR	TB1	-10	-20	-30	-40	-70
		80	84	88	8C	98
L1	1,2	3A MOUTH	5A FOOT	7A	9A	#A SPOT CLEAR
L2	3,4	3B EYES RT	5B STRUM	7B	9B	#B SPOT RED
L3	5,6	3C EYES LFT	5C FRET	7C	9C	#C SPOT BLUE
L4	7,8	3D	5D L LEG	7D	9D	#D SPOT RED
L5	9,10	3E EARS	5E R LEG	7E	9E	#E SPOT AMBER
L6	11,12	3F HEAD RT	5F EYELIDS	7F	9F	
L7	13,14	3G HEAD LFT	5G	7G	9G	#G
L8	15,16	3H HEAD BACK	5H	7H	9H	#H

LIGHT BAR  
COMMANDS

UNUSED POSITIONS  
ARE FUNCTIONAL  
AND MAY BE  
USED AS NEEDS  
DICTATE.

(2)

AC SWITCHER COMMANDS		TB2	82	86	8A	8E	9A
1,2			3I STAGE RT LITE	5I SIGN	7I	9I	#I
3,4			3J RT CENT LITE	5J TIVOLI	7J	9J	#J
5,6			3K CENTRAL LITE	5K	7K	9K	#K
7,8			3L LCENT LITE	5L	7L	9L	#L
9,10			3M STG L LITE	5M	7M	9M	#M
11,12			3N STOOLS	5N	7N	9N	#N
							#O
							#P

USES BEAGLE'S ROMS

1-12-82  
R Davis

# SET INSTALLATION


## THE KING

THE KING'S SET CONSISTS OF BLUE VELOUR BACKGROUND CURTAINS AND VALANCE, TIVOLI STRING LIGHTS, A NEON SIGN, AND A FLOOR COVER.

ONCE THE CHARACTER IS INSTALLED THE FLOOR COVER HIDES THE AIR AND CYBER RUNS AS WELL AS THE CEC CARPET.

THE TIVOLI LIGHTS AND THE NEON SIGN ARE CONTROLLED BY A COMMAND IN THE ANIMATION.

THE LIGHTS AND SIGN ARE HUNG FROM THE T-BAR AND CEILING TILES.

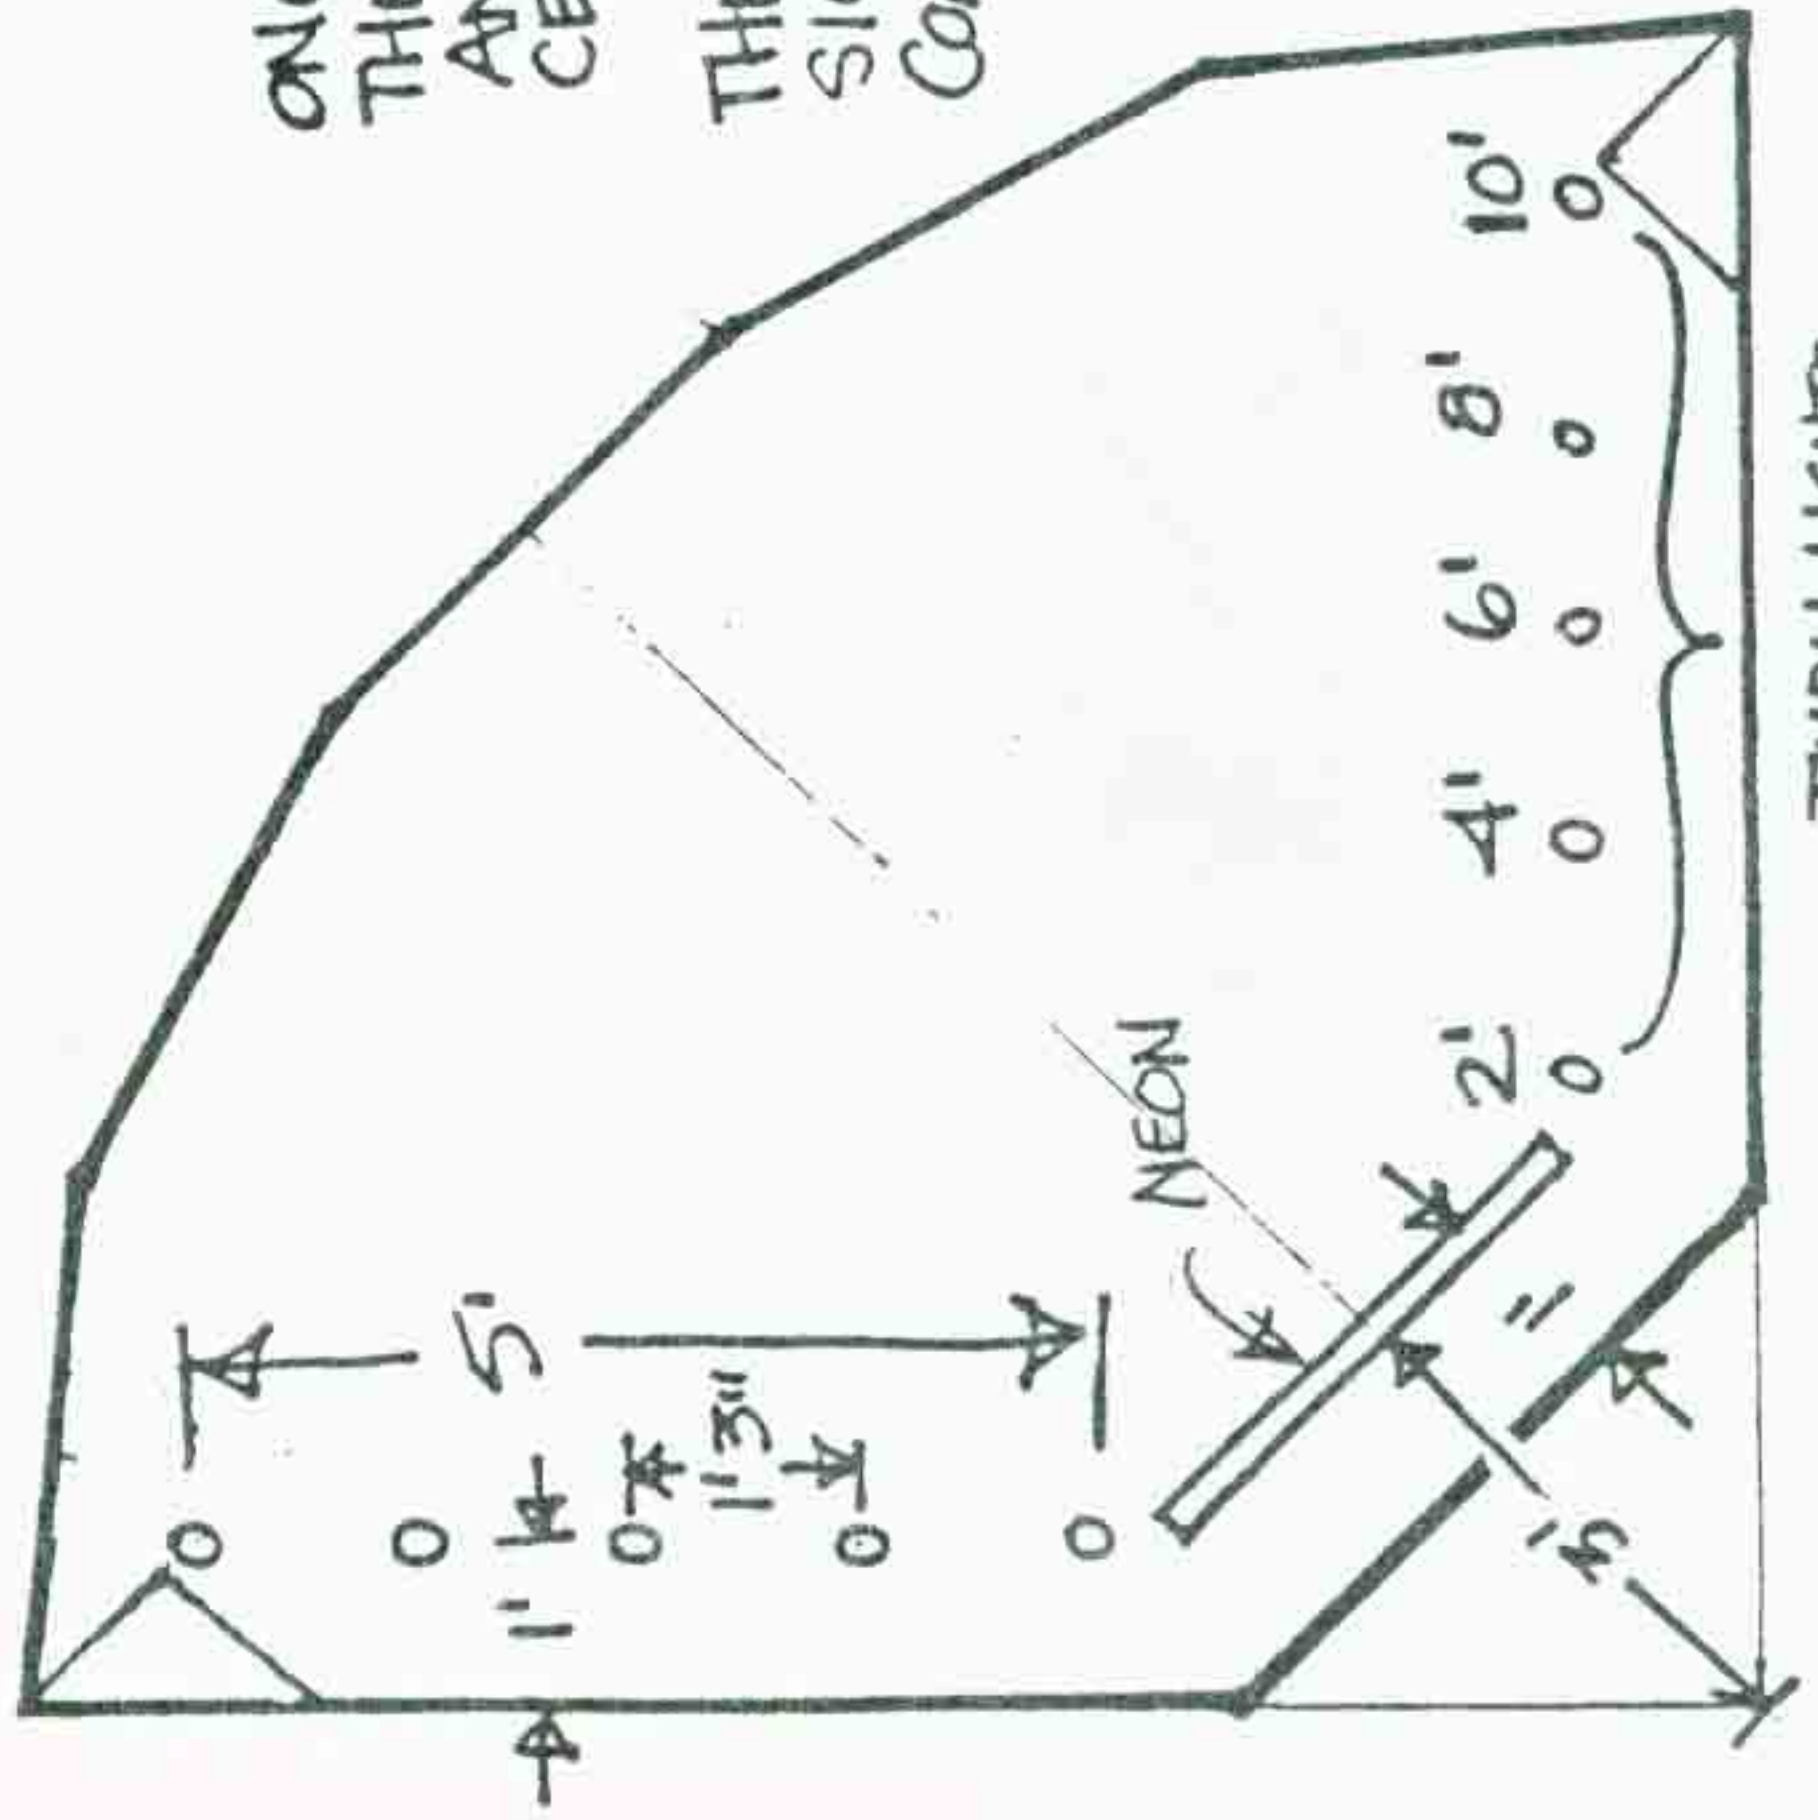


TIVOLI LIGHTS  
(DIMENSIONS ARE LENGTHS)

REN


LION SOLENOID BOARD

THE KING  
ELECTRICAL  
DETAIL

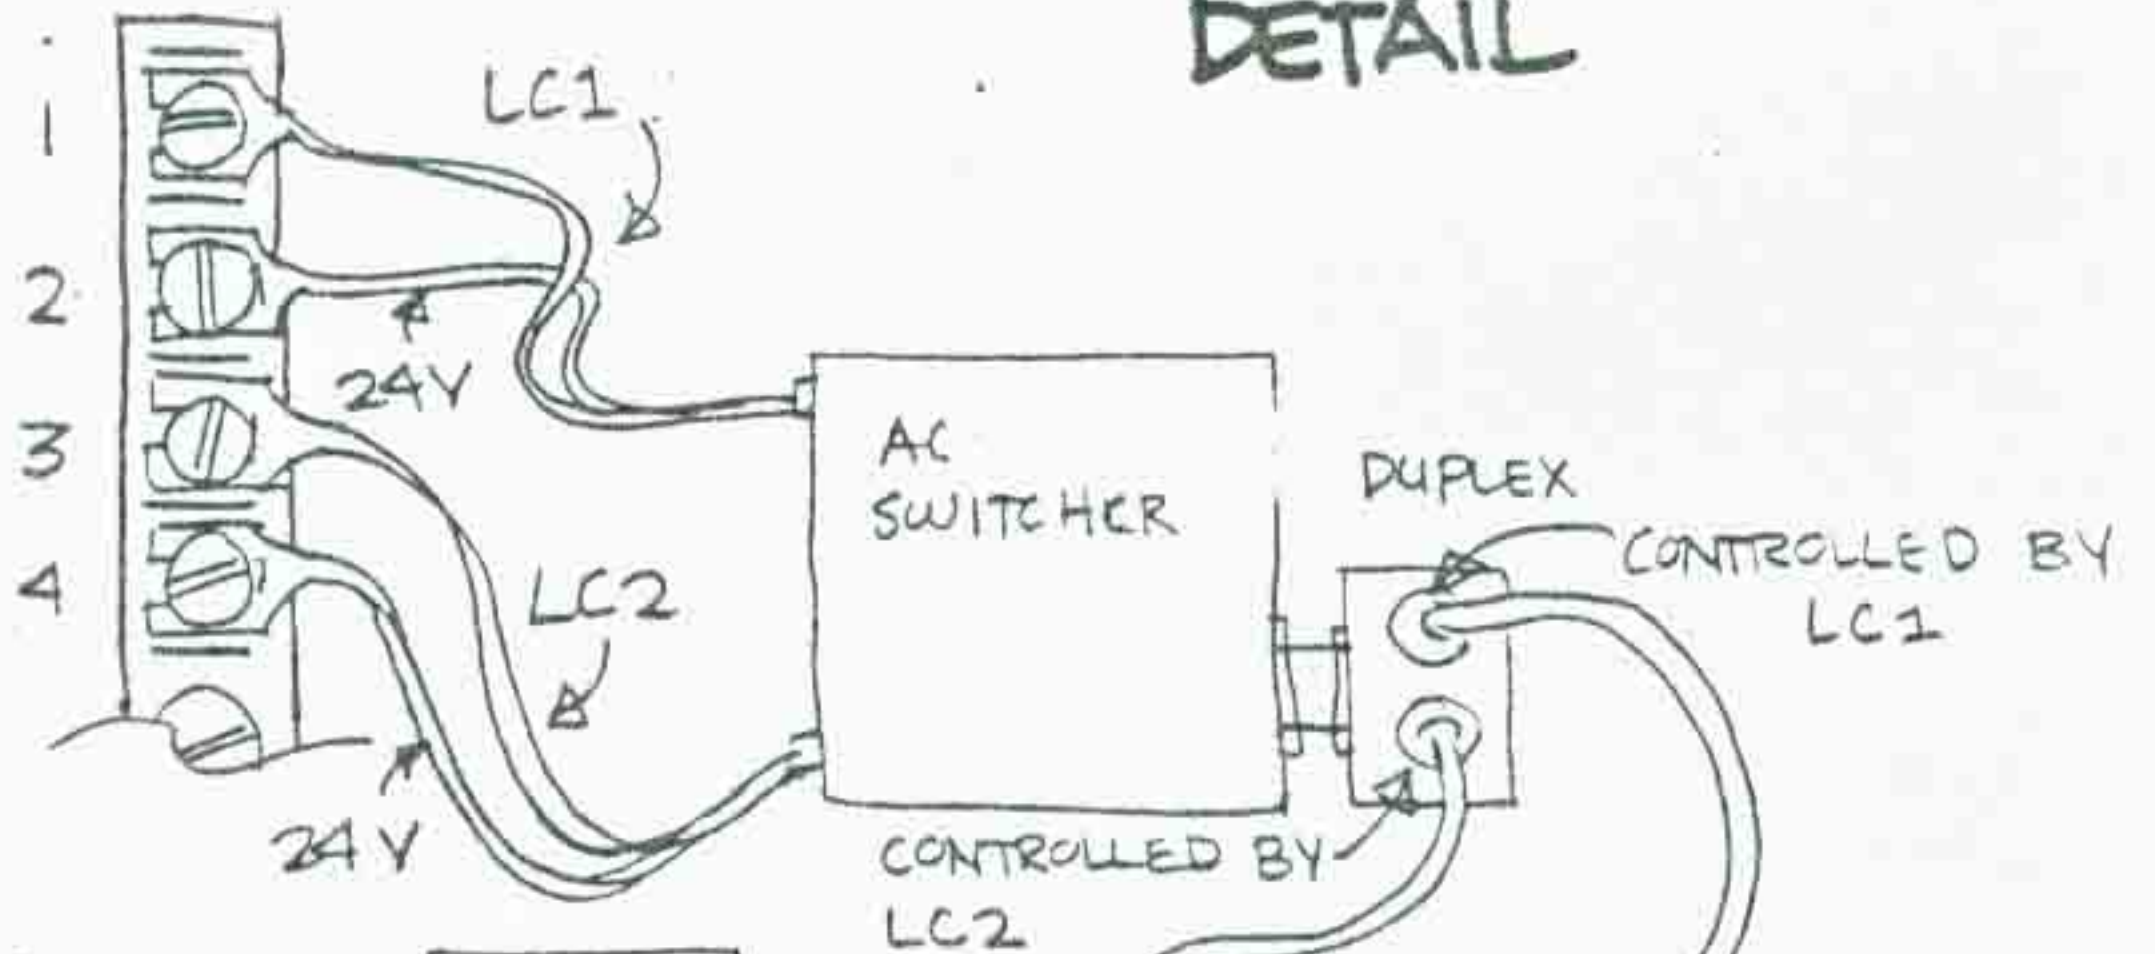

NOTE: 24V  
CONTROL LINES  
MUST BE CON-  
NECTED TO POS-  
ITIVE #'S ONLY!

TRANS-  
FORMER  
24V

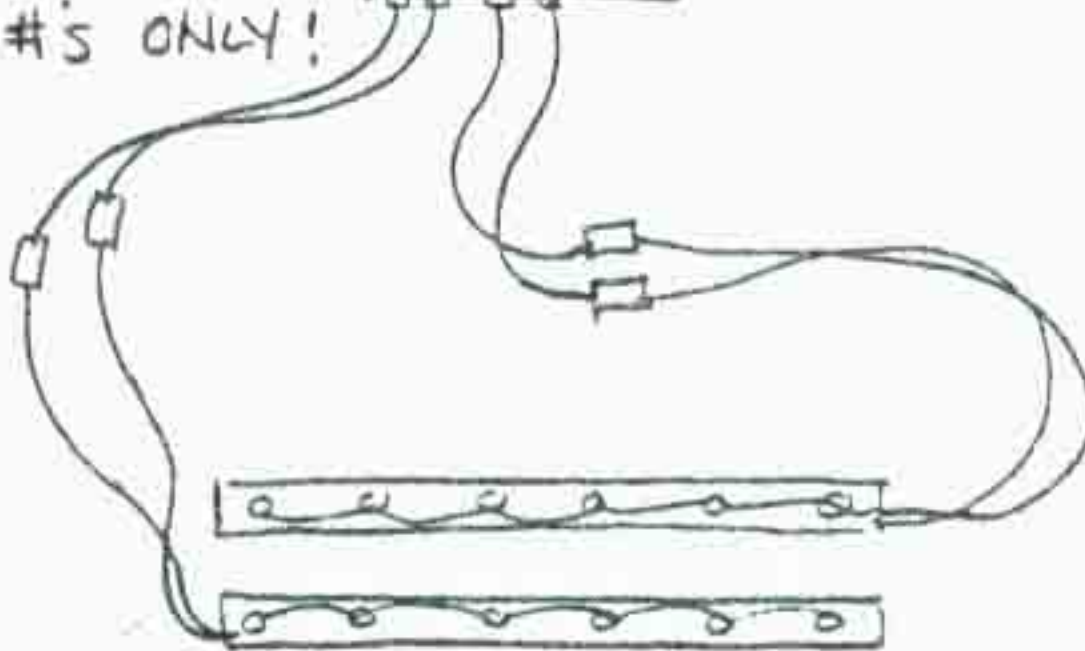

RIGHT & LEFT  
TROUBLE LIGHT  
ASS'Y



NEON  
SIGN

REN


3.2.2/2.1



This page left intentionally blank

SEI INSTALLATION

- (A) BACKGROUND CURTAIN
- (B) VALANCE CURTAIN
- (C) STAGE PLATFORM

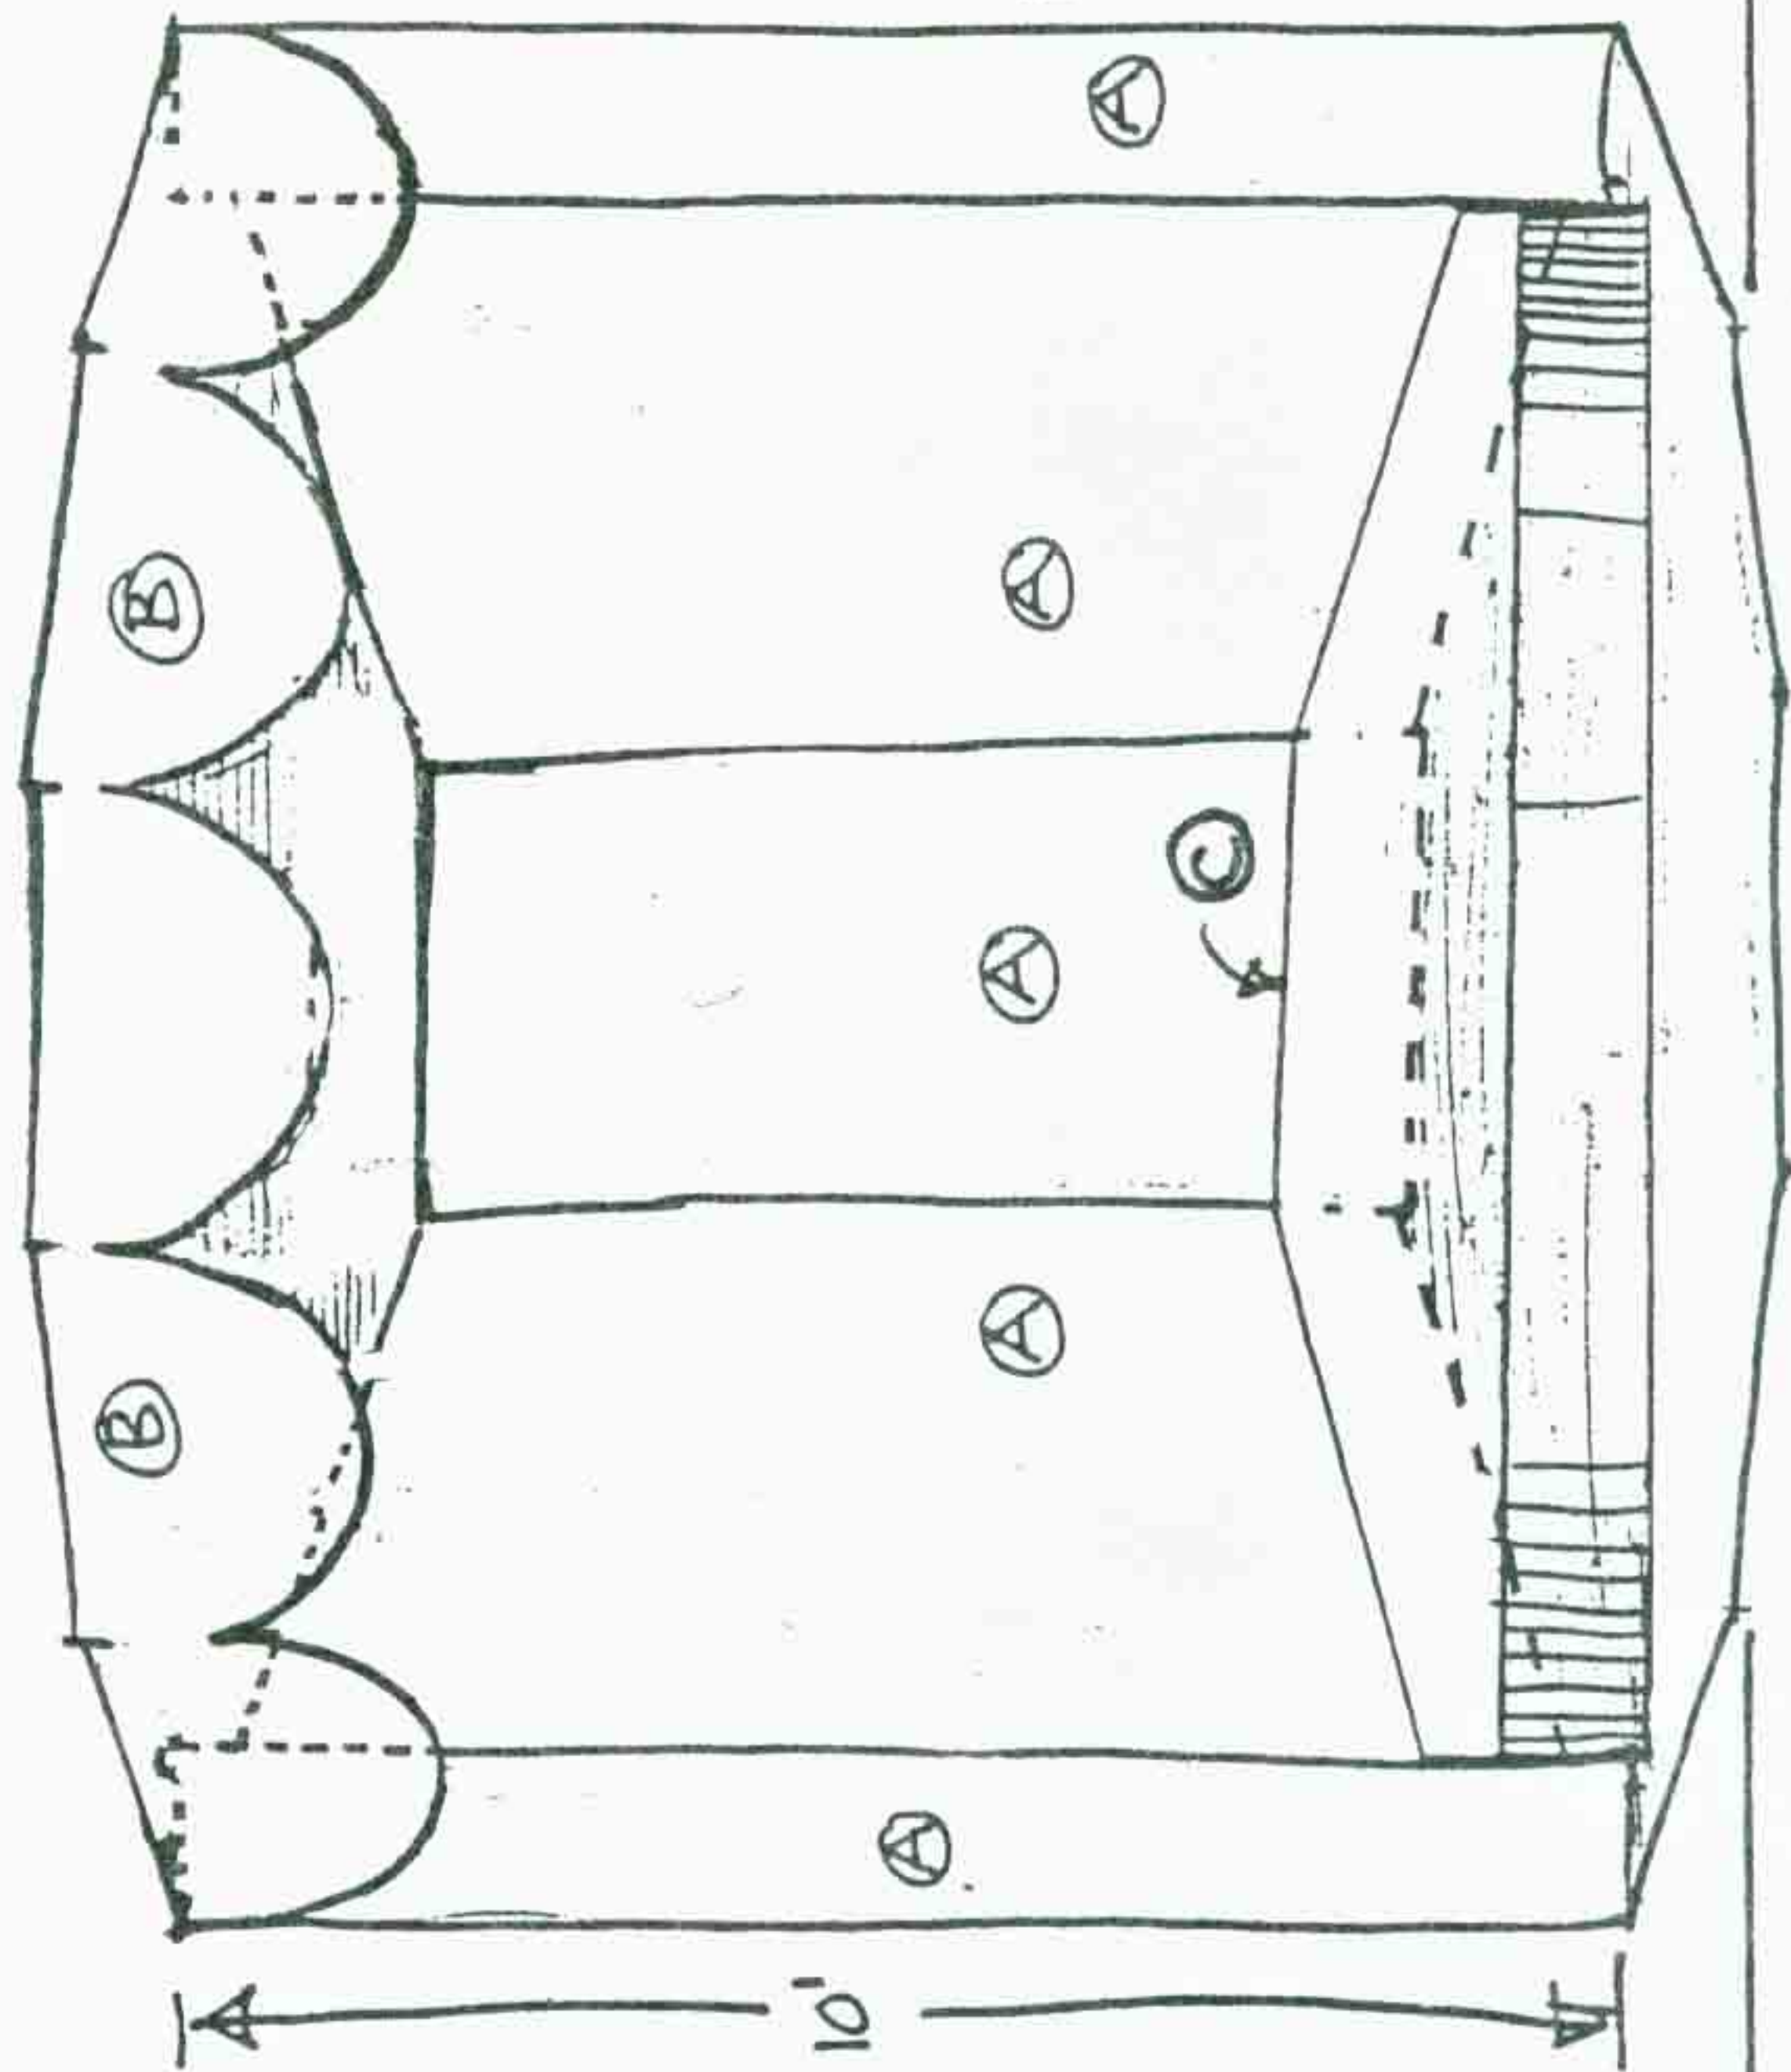


REPLACES 33.2/1

REN

This page left intentionally blank

REPLACES 3.3.2/2

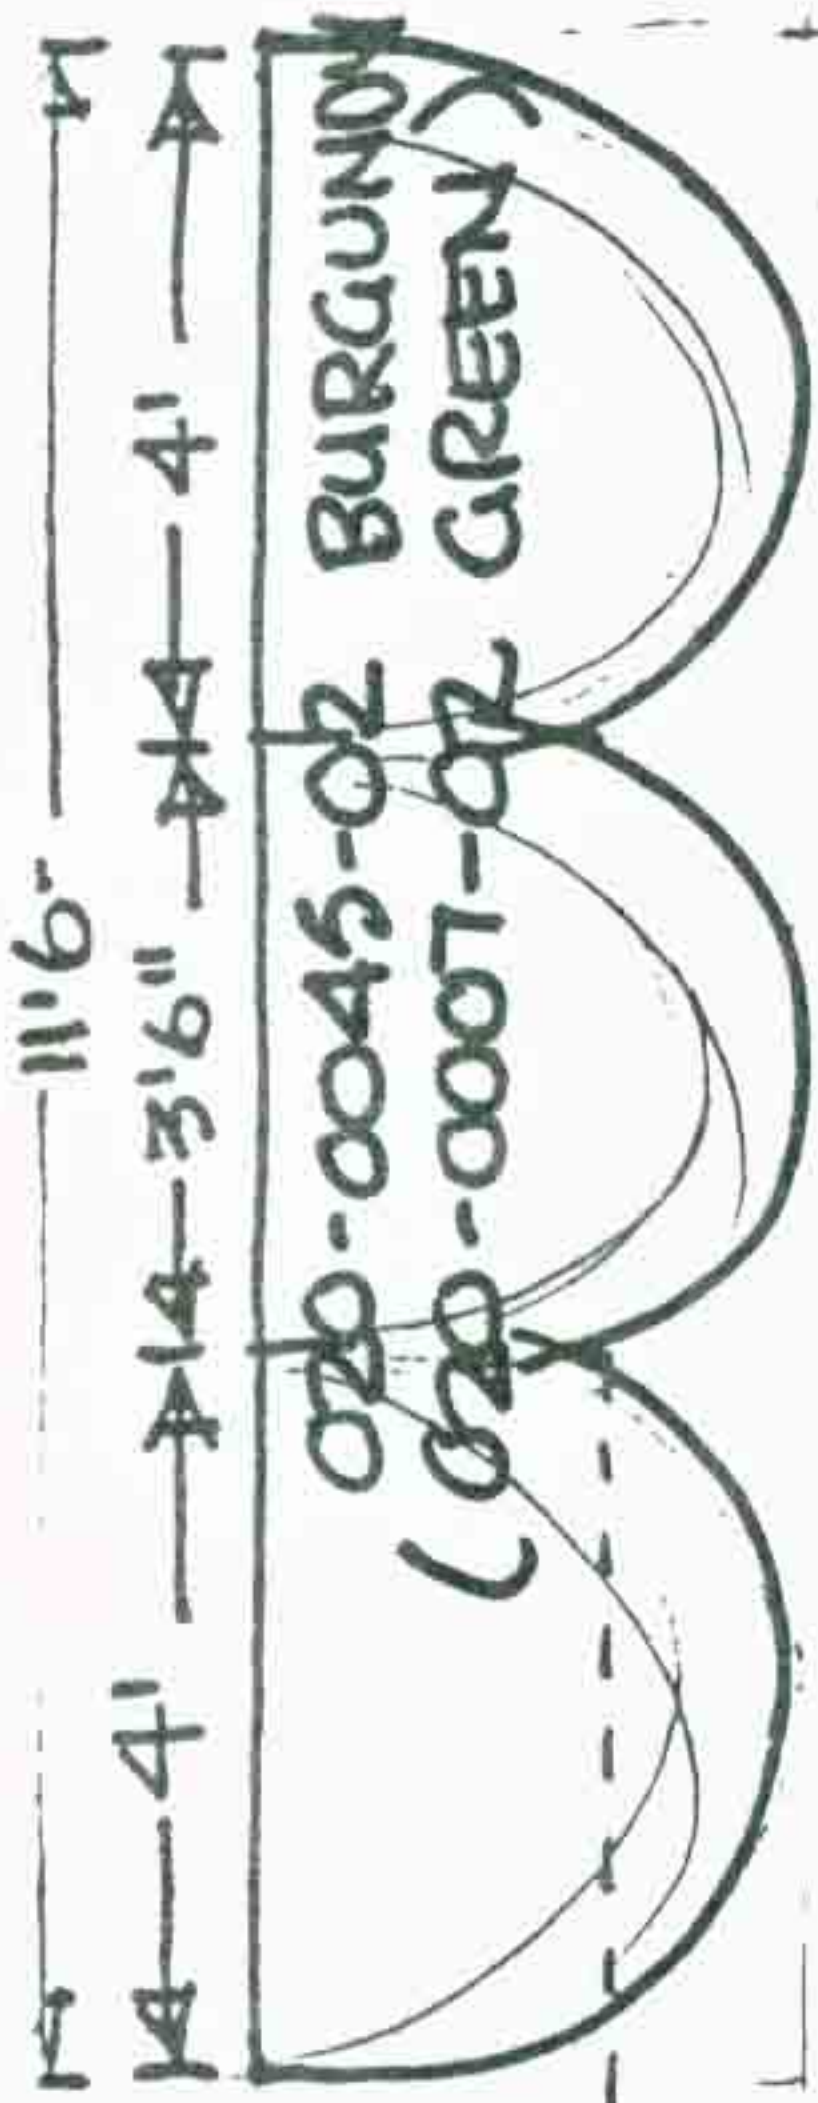


VALANCE



BACKDRAPE



CABARET DRAPES

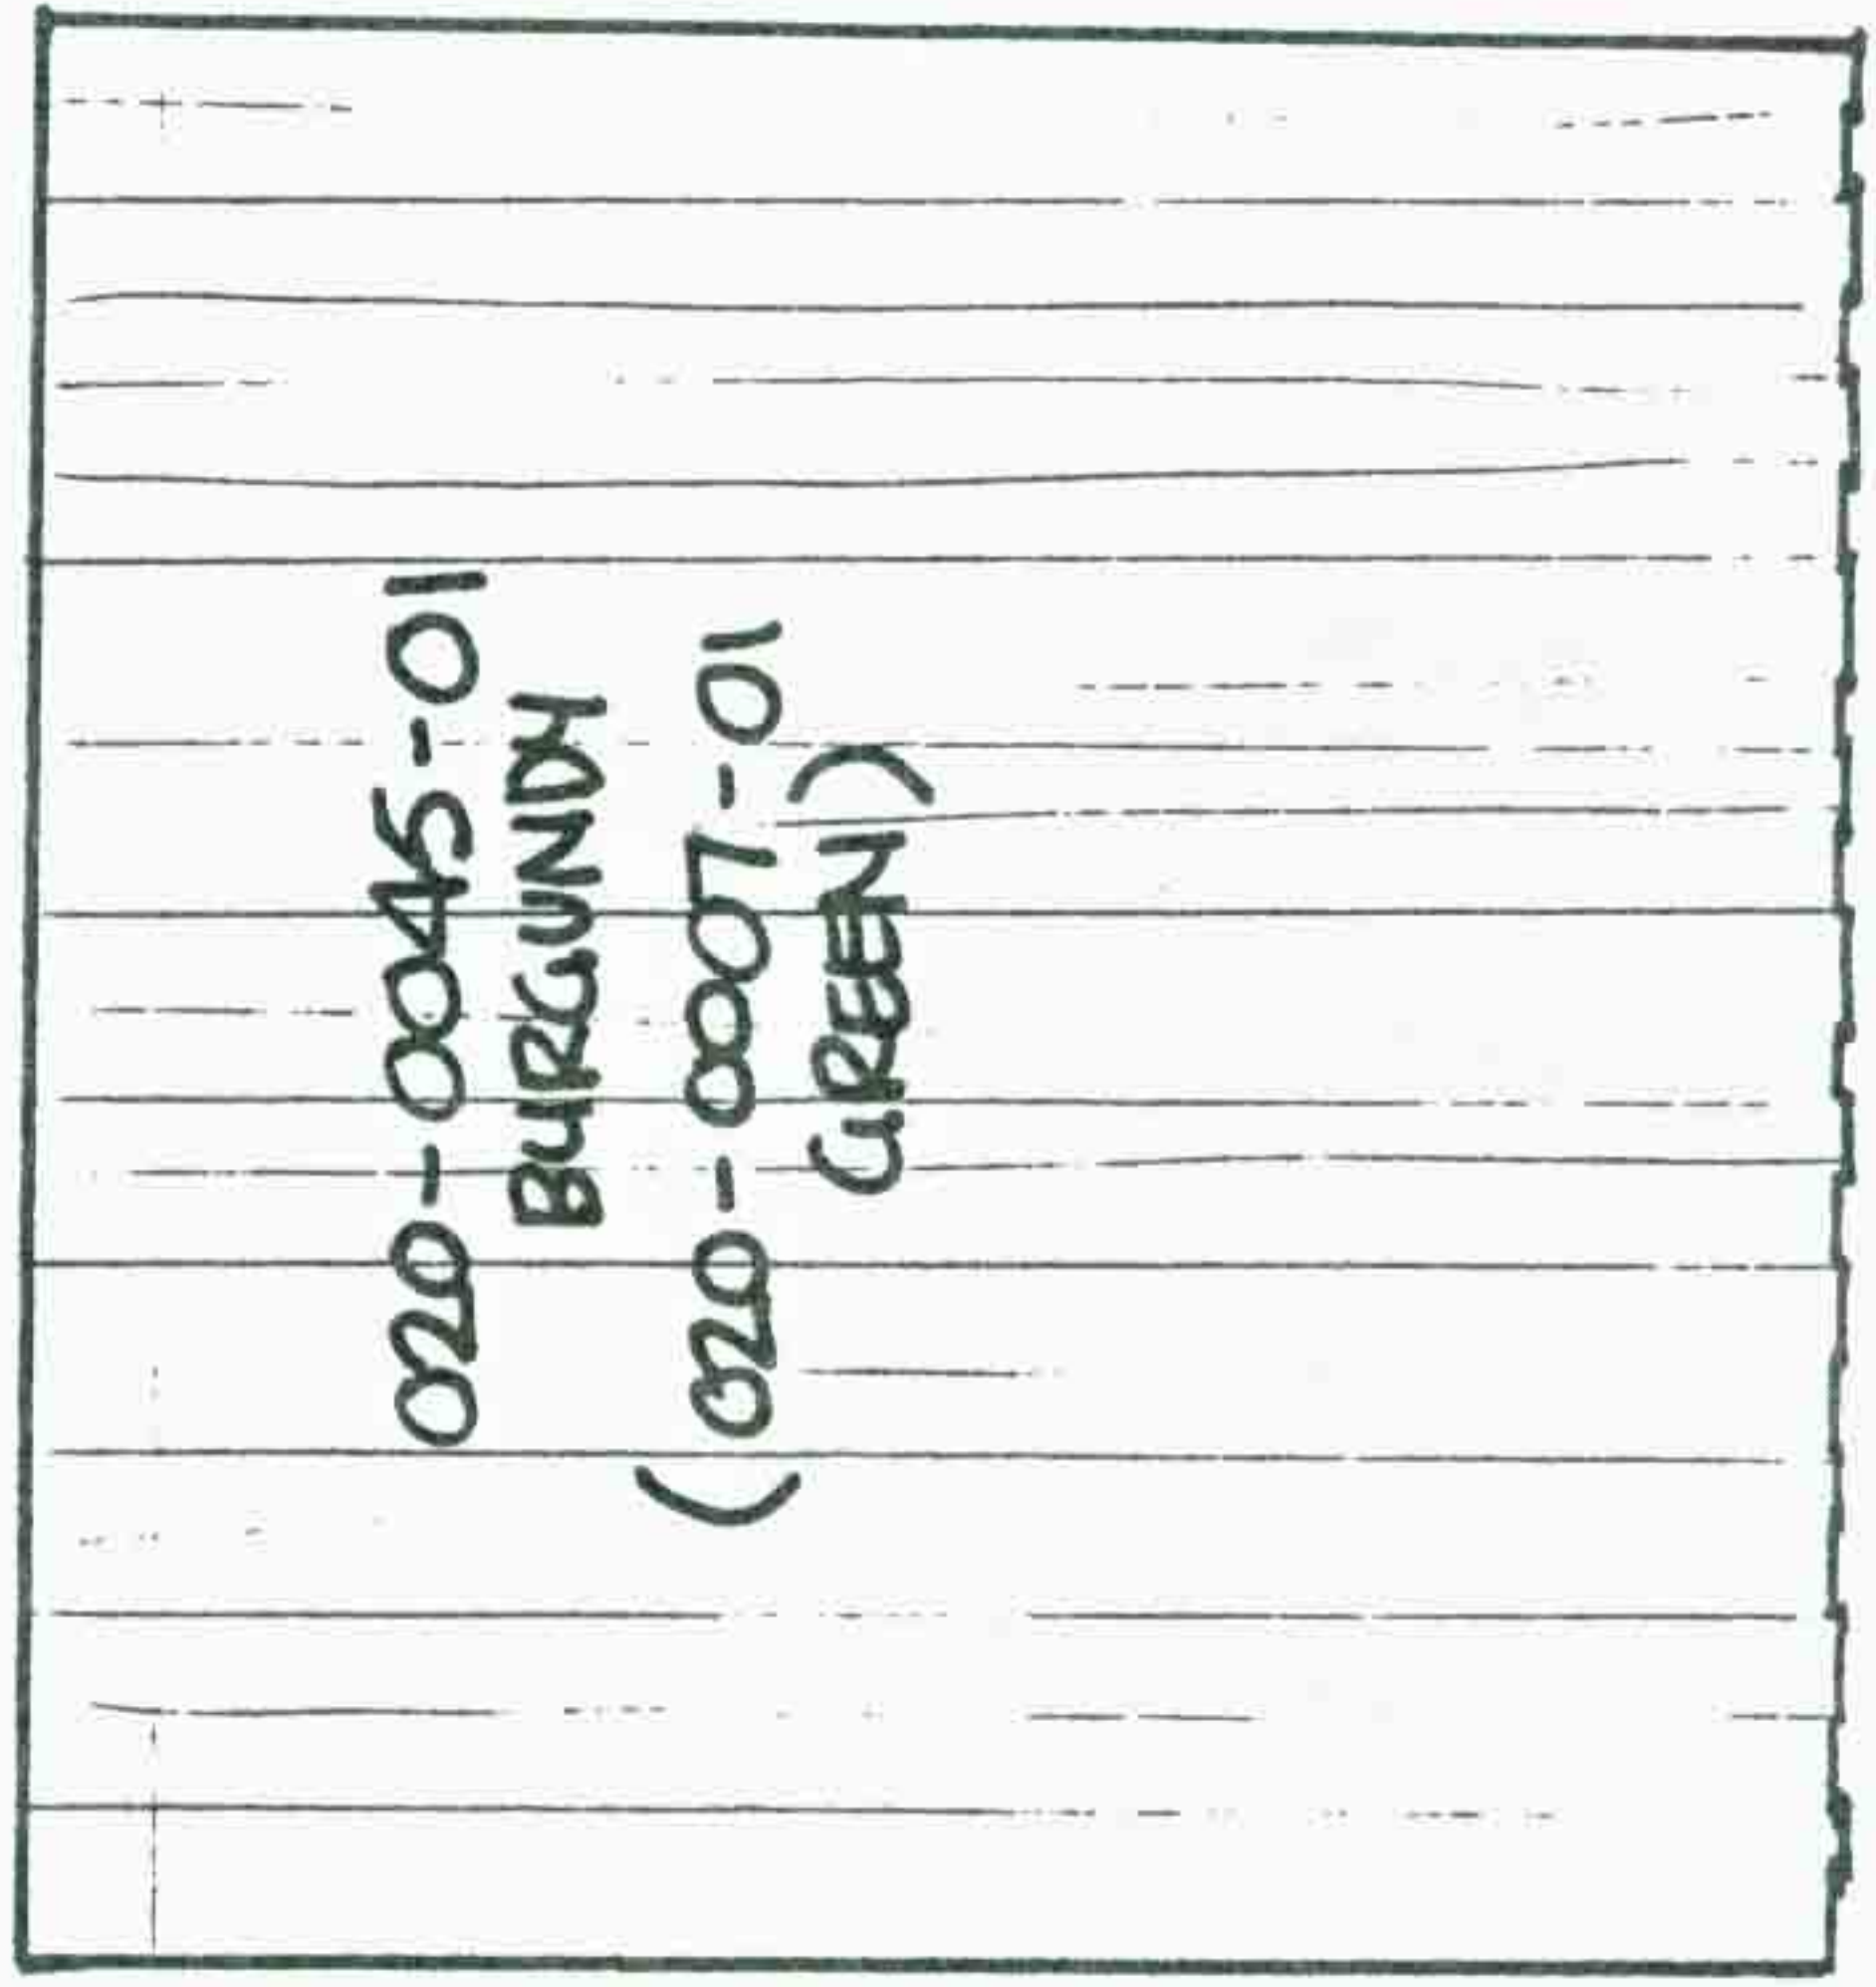

3' HIGH X  
11' 6" WIDE  
BUNTED AND  
GATHERED  
BURGUNDY  
VELVET  
(GREEN)

10' HIGH X  
11' WIDE  
BURGUNDY  
VELVET  
(GREEN)  
100% FULLNESS  
THEATRICAL BOX  
PLEATS

\* THIS DIMENSION IS OPEN, PER THE ACTUAL STYLE OF THE GATHERS. IT SHOULD BE BETWEEN 1' 6" AND 2' 6".

REPLACES

5.1.1 / 3

REN

# CABARET LIGHT BAR

ALWAYS-ON


- Ⓐ CEILING MOUNTED
- Ⓑ CLEAR FLOODS

LIGHT BAR

- Ⓒ AMBER SPOT
- Ⓓ RED SPOT
- Ⓔ BLUE SPOT
- Ⓕ RED SPOT
- Ⓖ CLEAR SPOT

NOTE: CENTER 5 LIGHT BAR ON CENTER FIXTURE

CABARET

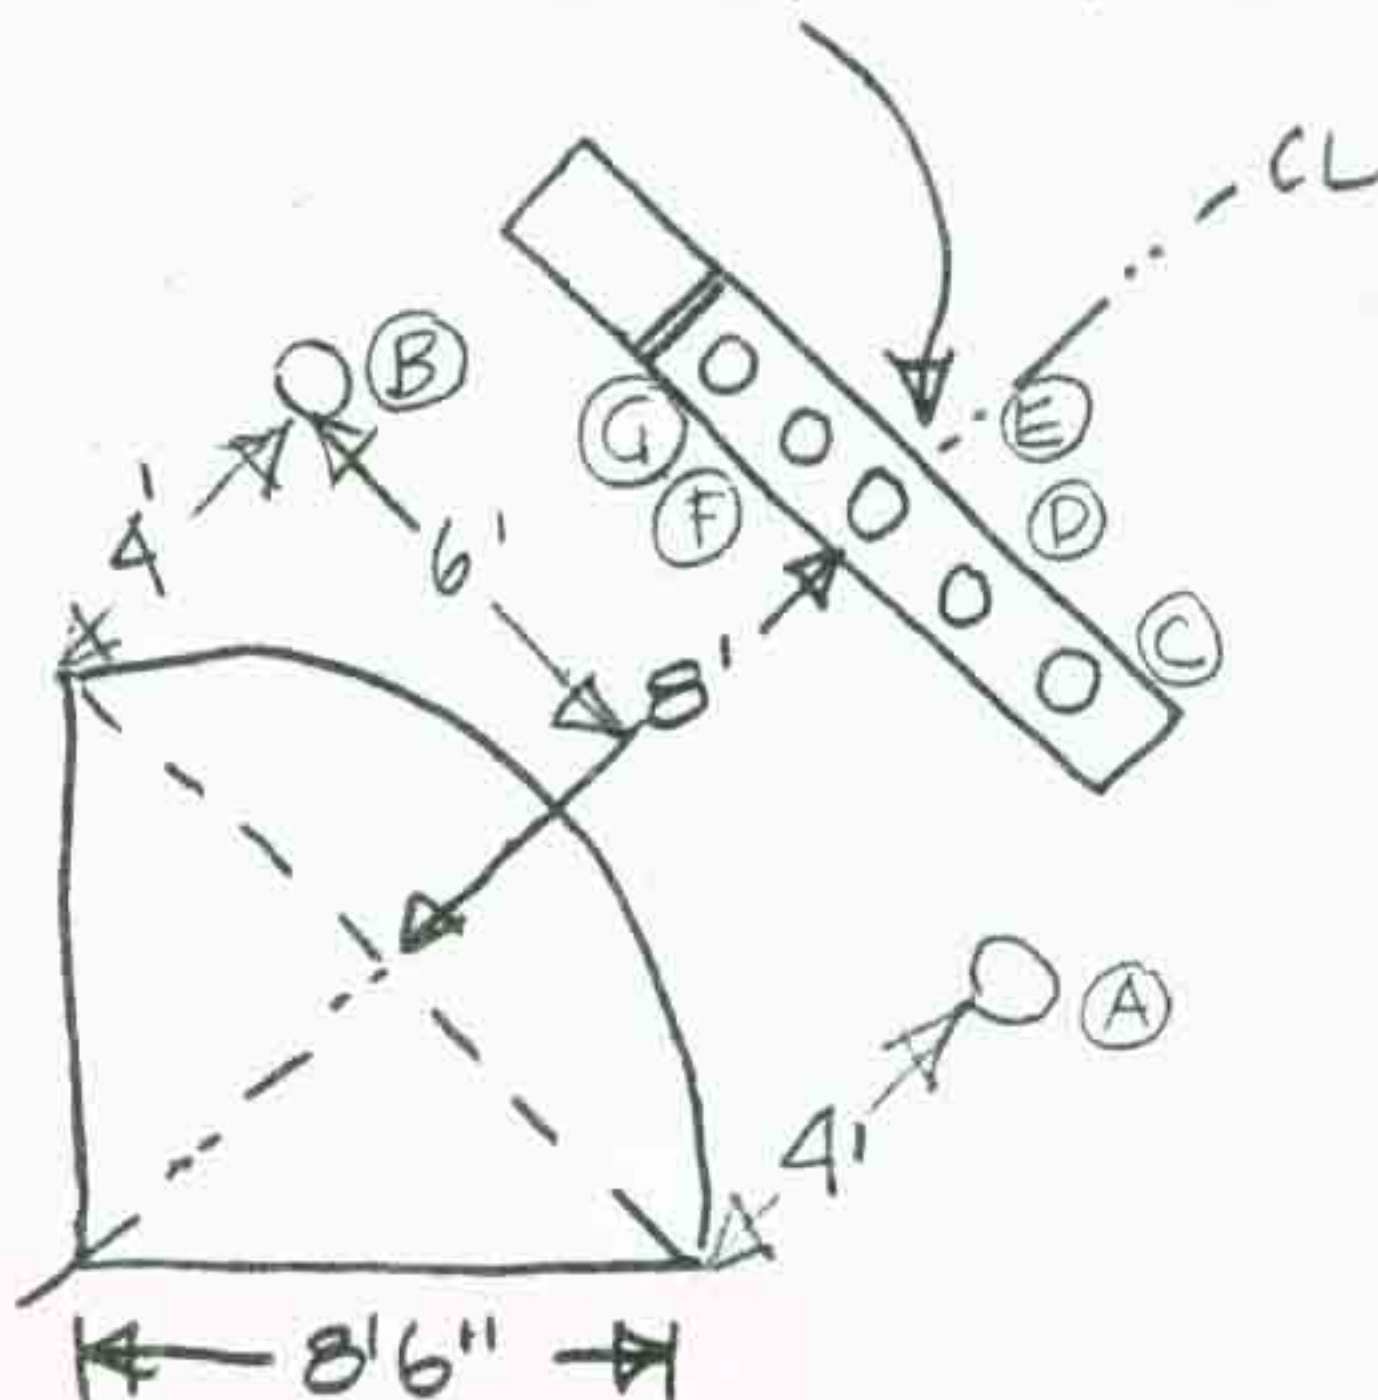

REN

REPLACES 5.1.4/1

# CABARET LIGHT CONNECTION

SOL #	TB1 #	BOARD-20 84	BOARD-30 88	BOARD-70 98
L1	1, 2	7A MOUTH	7I BREAST	SPOT # A CLEAR
L2	3, 4	7B EYES RT	7J RT HAND	SPOT # B RED
L3	5, 6	7C EYES LF	7K LF HAND	SPOT # C BLUE
L4	7, 8	7D STOOLS	7L	SPOT # D RED
L5	9, 10	7E EARS	7M	SPOT # E AMBER
L6	11, 12	7F HEAD RT	7N EYELIDS	# F
L7	13, 14	7G HEAD LF		# G
L8	15, 16	7H HEAD TILT		# H

ARTIE/  
DOLLY MAP  
WITH LIGHT 322

LIGHT BAR  
COMMANDS

TB2 #	86	90	9A
1, 2		7O SPOT # I	# I
3, 4		7P SPOT # J	# J
5, 6		7Q	# K
7, 8		7R	# L
9, 10		7S	# M
11, 12		7T	# N
			# O
			# P

AC SWITCHER  
COMMANDS

PIZZA TIME THEATRE INC.  
THEATRICAL STANDARDS MANUAL  
(Supplemental Revision)

Date of Origin: 1982-1983

Archived: 12-15-08

Submission by JohnnyBoy

Version 1.0

The documents contained herein are for educational use only.  
Please do not replicate, redistribute, or make any unauthorized  
printings. All intellectual property including characters,  
artwork, photography, and slogans are trademark and/or  
copyright their respective owners.

